

ADDENDUM TO INSTALLATION INSTRUCTIONS

MODEL 113A

- A) There is a 5th channel available on the 113A communicator which can be used for open/close transmissions. This channel may be activated by a closure between terminals 8 & 10. program the desired closing code in the AL Field, L5 location, and the desired opening code in the AL Field, L6 location.
- B) This communicator can dial touchtone if desired. To accomplish this: Insert the model F103 chip (white dot up) into the appropriate socket as per the 113A installation instructions. Secondly, when programming the prom chip, utilize the following chart in place of the chart in Step 3 on page 4 of the 113A installation instructions. This chart pertains to the OP Field, L1 location.

DIGIT CHANNEL A INPUT		DIALER OUTPUT	TYPE OF DIALING
0	Momentary	Channel A code/no abort	Rotary
1	Maintained	Channel A code w/ Stop Dialing on Abort	Rotary
2	Maintained	Channel A code w/ restore on abort	Rotary
3	Maintained	Channel A code w/abort code on abort	Rotary
8	Momentary	Channel A code/no abort	Touchtone
9	Maintained	Channel A code w/abort	Touchtone
A	Maintained	Channel A code w/ restore code on abort	Touchtone
B	Maintained	Channel A code w/abort code on abort	Touchtone

If channel A is not used but rotary dialing is used, program digit 1.

If channel A is not used but touchtone is used, program digit 9.

I 2189



FIRE BURGLARY INSTRUMENTS INC.

NEW YORK
(516) 582-6161



OUT OF STATE
(800) 645-5430