

ROLLINS

SECURITY SYSTEMS

Thank you for selecting the Rollins Security DWC203A. You have selected a highly reliable, state-of-the-art system designed for your convenience and to assist in the protection of your home and family.

This manual is furnished to help you, and all whom you authorize, to understand the system and become proficient in its operation without creating false alarms as a result of improper use. Please keep this manual in a convenient location for your future reference.

Master Code

The burglar alarm system is turned on and off by entering either a master code, or one of two auxiliary codes. The master code is assigned exclusively to you, and it is programmed into the system at the time of installation. You can program the auxiliary codes yourself to meet your specific needs. You may want to assign an auxiliary code to a babysitter, for example, then change the code to maintain security after the babysitter leaves.

Turning The System On

To turn the burglar alarm on, (to "arm" it) close all protected windows and doors. The STATUS light on the Remote will illuminate. Enter your master code or any valid auxiliary code using the remote keyboard. Each number entered produces a beep to confirm to you that it was entered and to help eliminate errors. Upon completing entry of the correct four digits, the "ON" light will illuminate, and a pulsing beep will sound for a predetermined time, usually approximately 30 seconds. This is the "exit delay" time, and allows you to leave the premises without causing an alarm. The system is automatically "armed" at the end of the "exit delay" time.

Exiting The House

Exiting the premises when the alarm is turned on must be done through a specific door or doors designated by you during the installation of your system. This is usually the front and/or back door. A Remote keyboard will usually be mounted near one or both of these doors and the system wired accordingly. These are your "exit/entry" doors.

After turning the system on (detailed above), open the door, exit, close and lock the door. You do not have to rush; there is adequate time programmed (normally 30 seconds) for a normal exit while the tone is pulsing. You can usually hear the tone outside the door and are assured the system is armed when the tone stops.

Auxiliary Codes

You may want to temporarily allow certain people, such as babysitters or guests, to turn your alarm system on and off. Your security system allows you to accomplish this without revealing your master code. When you no longer want these people to have access to your home, you can erase the auxiliary code. This allows you to deny access to anyone to whom you had given the former auxiliary code. Your system can store two auxiliary codes.

To program the first auxiliary code:

System must be disarmed.

- (1) Press the dot in the lower left corner of the keyboard on the Remote.
- (2) Enter your master code within 4 seconds.
- (3) Enter the number "3". Your system is now ready to accept your first auxiliary code.
- (4) Enter the auxiliary code (any four-digit number you choose, do not use #1 or repeat digits).
- (5) Press the lower left dot again.

The first auxiliary code is now programmed into the unit. It is good practice to test it by turning the system on and off using the auxiliary code.

The second auxiliary code, if desired, is programmed exactly as the first, except use key #4 in step 3.

To change an auxiliary code simply repeat the programming sequence using the new code in step 4.

To remove an auxiliary code, repeat the programming sequence, entering your master code in step 4 instead of an auxiliary code.

Special Features

- (1) Quick Arm - Your burglar alarm system can be programmed to "quick arm" if you desire. If quick arm is enabled, pressing "0" will arm the system. A master code or auxiliary code will be needed to disarm the system. Quick arm is enabled by the following process:

System must be disarmed.

- (1) Press the left dot.
- (2) Enter 4-digit master code.
- (3) Press key #8.
- (4) Press left dot.

203
only

To disable the quick arm feature use the following process:

System must be disarmed.

- (1) Press the left dot.
- (2) Enter 4-digit master code.
- (3) Press key #9.
- (4) Press left dot.

203
only

- (2) Exit Delay Stop — The system can be armed without waiting for the exit delay to time out by pressing the #2 key immediately after entering any valid arming code (for example: Master code + 2). The entry delay time and tone are not affected by this operation.

- (3) Automatic Disable — Fire, Police, Medical or 24-Hour Burglar Alarm loops will automatically be disabled

when the system is reset. That is, if an alarm condition is present on any of these circuits, the siren will be silenced by entering the master code or any valid auxiliary code. If the alarm condition still exists when the system is rearmed, these circuits will automatically be shunted out of the system. The trouble light will illuminate and the trouble "beep" will be caused to sound every 15 seconds until the alarm condition has been removed, or until the test switch is used to silence the trouble indication. This feature allows you to have Burglar protection in the unlikely event of a failure or continuous alarm condition on one of the four other circuits. (See Turning an Alarm Off, page 3.)

- (4) You can test the sensors in your burglar alarm system without sounding the siren every time you open a door or window if you want to. To do this, disarm the system, and place it in the announce mode. This mode provides a short beep from the Remote anytime an enabled circuit is opened or closed.

Announce Mode — This feature provides a short beep from the remote anytime an enabled loop (circuit) is opened or closed. This feature can be used for keeping track of visitors, the kids, or user walk-testing the system.

To enable the Announce Mode:

System must be off.

1. Enter left dot.
2. Enter master code.
3. Enter key #1.
4. Enter left dot.

203
only

To disable the Announce Mode:

System must be off.

1. Enter left dot.
2. Enter master code.
3. Enter key #2.
4. Enter left dot.

Programmable Features and Procedures:

- (a) **Interior protection** (to include or exclude)
Master Code +1 (within FOUR seconds).

- (b) **Cancel exit delay tone and time.**
Master code +2 (within FOUR seconds).

- (c) **First auxilliary code.**
System must be off.
1. Left dot.
 2. Master code.
 3. 3.
 4. Desired auxiliary code (4 digits).
 5. Left dot.

- (d) **Second auxilliary code.**
System must be off.
1. Left dot.
 2. Master code.
 3. 4.
 4. Desired auxiliary code (4 digits).
 5. Left dot.

203
only

- (e) **Change exit delay time.**
System must be off.
1. Left dot.
 2. Master code.
 3. 5.
 4. New exit time (01 to 99 seconds).
 5. Left dot.

Reduce
BY 1
if 201
Press "4"

(f) Change entry delay time.

System must be off.

1. Left dot.

2. Master code.

3. 6.

4. New entry time (01 to 99 seconds).

5. Left dot.

201
enter
5

(g) Change alarm duration.

System must be off.

1. Left dot.

2. Master code.

3. 7.

4. New alarm duration time. (01 to 99 minutes).

5. Left dot.

201
enter
6

(h) Quick arm (enable).

System must be off.

1. Left dot.

2. Master code.

3. 8.

4. Left dot.

203 only

(i) Quick arm (disable).

System must be off.

1. Left dot.

2. Master code.

3. 9.

4. Left dot.

203 only

Central Station Test

You can test your system at the central monitoring station if you want to, but be sure to follow this procedure:

a. First call the Central Station. Give them your 5-digit account code. Advise them that you will be testing your system and that YOU will call them back to verify that they received the alarm signal.

b. Now you can activate any alarm of your preference (burglar, fire, police, or medical). If you don't want to listen to the sound of the siren, activate the medical alarm from either the E/P button or the Remote—your medical alarm does not produce a siren sound.

c. Allow your system to remain in the alarm condition for one full minute. Then reset the system at the Remote using your 4-digit master code.

d. Now call the Central Station to verify the receipt of the alarm signal, and to advise that the test is complete.

Calling the Central Station

If you should ever have a problem or question about your alarm system, feel free to call the Central Station at any time (day or night). We are always there. But when you do, please identify yourself by using your 5-digit account code. This will help us to give you our most prompt attention.

Troubleshooting Guide

(1) No Status Light

This indicates that there is a problem in either one or both of your burglar alarm circuits.