



ELECTRONICS
DESIGN &
MANUFACTURING

Solution-16 Installation Manual

ISSUE 1.40





**ELECTRONICS
DESIGN &
MANUFACTURING**

MA880I

Solution

16

Installation

Manual

*This page has been included for you to cut out and insert into the spine
of the folder*

ISSUE 1.40



(61-2) 9672 1777

Solution- 16

Installation Manual

Copyright © 1997 by Electronics Design & Manufacturing Pty Limited,
SYDNEY, AUSTRALIA

Document Part Number MA880I
Document Issue 1.40
Printed 29/07/97

This documentation is provided to suit *Solution- 16* Control Panel (CC880/LP880)

Firmware Revision 1.10 - 1.40

Hardware Revision E - F

Copyright Notice

All rights reserved. No part of this publication may be reproduced, transmitted or stored in a retrieval system in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Electronics Design and Manufacturing Pty Limited.

Trademarks

Throughout this document trademark names may have been used. Rather than put a trademark symbol in every occurrence of a trademark name, we state that we are using the names only in an editorial fashion and to the benefit of the trademark owner with no intention of infringement of the trademark.

Notice of Liability

While every precaution has been taken in the preparation of this document, neither Electronics Design & Manufacturing Pty Limited nor any of its official representatives shall have any liability to any person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by the information contained in this book.

Electronics Design & Manufacturing Pty Limited reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

Table Of Contents

INTRODUCTION.....	15
INTRODUCTION.....	16
QUICK START	17
TELEPERMIT NOTE.....	18
PROGRAMMING.....	19
PROGRAMMING.....	20
PROGRAMMING WITH THE REMOTE CODEPAD.....	21
PROGRAMMING WITH THE HAND HELD PROGRAMMER.....	22
PROGRAMMING USING THE PROGRAMMING KEY	23
PROGRAMMING VIA THE DTMF COMMAND MODULE.....	24
How To Establish A Communication Link With The Control Panel	24
Programming The Control Panel Once A Communication Link Has Been Established.....	24
PROGRAMMING OPTION BITS	24
INSTALLERS PROGRAMMING COMMANDS.....	25
Command 958 - Enable/Disable Zone Status Mode	25
Command 959 - Test Programming Key	26
Command 960 - Exit Installer's Programming Mode.....	26
Command 961 - Reset Control Panel Back To Factory Default Settings.....	26
Command 962 - Copy Control Panel Memory To Programming Key	27
Command 963 - Copy From Programming Key To Control Panel	27
Command 964 - Erase Programming Key	28
Command 965 - Set Up Domestic Dialling Format.....	29
Command 966 - Enable/Disable Automatic Stepping Of Locations	30
Command 999 - Display Software Version Number	30
Disable Factory Default.....	31
DEFAULTING THE CONTROL PANEL.....	31
SYSTEM INDICATORS AND OPERATIONS	33
SYSTEM INDICATORS AND OPERATIONS.....	34
The Codepad.....	34
Zone Indicators	34
AWAY Indicator.....	34
STAY Indicator	34
MAINS Indicator	35
FAULT Indicator	35
Audible Indicators.....	35
LCD CODEPAD INDICATORS.....	36
SYSTEM OPERATIONS.....	37
Arming The System In AWAY Mode.....	37
Forced Arming.....	37
Disarming The System From AWAY Mode	37
Arming The System In STAY Mode 1	38
Forced Arming.....	38
Disarming The System From STAY Mode 1	39
Arming The System In STAY Mode 2	40
Forced Arming.....	40
Disarming The System From STAY Mode 2	41
Codepad Duress Alarm	42
Codepad Panic Alarm - Software Version 1.10 - 1.36.....	42
Codepad Panic Alarm - Software Version 1.37 Onwards	42
Codepad Fire Alarm - Software Version 1.37 Onwards	42
Codepad Medical Alarm - Software Version 1.37.....	42
Isolating Zones.....	43
Standard Isolating.....	43
Code To Isolate	43

Fault Analysis Mode.....	44
Fault Descriptions.....	45
1 Low Battery.....	45
2 Date and Time.....	45
3 Sensor Watch	45
4 Horn Speaker Monitor.....	45
5 Telephone Line Fault	45
6 E2 Fault	45
7 Zone 16 In Alarm - Partitioned Systems Only.....	45
8 Communication Failure	45
AC Mains Failure.....	45
SYSTEM FUNCTIONS	47
SYSTEM FUNCTIONS	48
Installer Code Functions	48
0 Reserved.....	48
1 Reserved.....	48
2 Set The Number Of Days Until The First Test Report.....	49
3 Event Memory Recall Mode	50
4 Walk Test Mode.....	51
5 Satellite Siren Service Mode.....	51
6 Reserved.....	51
7 Turning Telephone Monitor Mode On and Off	52
8 Reserved.....	52
9 Reserved.....	52
Master Code Functions	53
0 Arming and Disarming All Areas At The Same Time- Partitioned Systems Only	53
1 Changing and Deleting User Codes	54
Auxiliary Codes.....	55
2 Changing Domestic Phone Numbers	57
3 Event Memory Recall Mode	58
4 Walk Test Mode.....	59
5 Turning Outputs On and Off	60
6 Setting The Date and Time.....	61
7 Turning Day Alarm On and Off (Software Version 1.10 Only).....	61
8 Setting STAY Mode 2 Zones.....	62
9 Reserved.....	62
User Code Functions - Partitioned Systems Only	63
0 Arming and Disarming All Areas At The Same Time - Partitioned Systems Only	63
Hold Down Functions	64
# Arm The System In AWAY Mode.....	64
* Arm The System In STAY Mode 1.....	64
O Arm The System In STAY Mode 2.....	64
1 Horn Speaker Test.....	64
2 Bell Test.....	65
3 Strobe Test	65
4 Turning Day Alarm On and Off (New - Software Version 1.20 Onwards)	65
5 Fault Analysis Mode.....	66
6 Initiate A Modem Call.....	66
7 Reset Latching Outputs	66
8 Codepad ID and Beeper Tone Change	67
9 Initiate A Test Report.....	67
REMOTE OPERATIONS	69
REMOTE OPERATIONS	70
Remote Arming Via The Telephone	70
How To Remotely Arm Your System Via The Telephone	70
Operating The Control Panel Using The DTMF Command Module.....	71
Operation - Software From Version 1.10	71
Operation - Software From Version 1.20	71
Upload/Download Via Alarm Link Software.....	73

Direct Connect.....	73
Remote Connect.....	74
REPORTING FORMATS.....	75
REPORTING FORMATS	76
Contact ID Format	76
Event Codes	77
Point ID Codes.....	78
General Reporting Formats	79
Securitel.....	81
How To Program and Setup Securitel.....	81
Securitel and Partitioning.....	81
Domestic Reporting.....	82
Programming Domestic Reporting	82
Domestic Dialling Function.....	83
How To Acknowledge Domestic Dialling.....	83
Synthesised Voice Reporting	84
How To Set Up The Control Panel For Synthesised Voice Format	84
How To Disable Synthesised Voice Dialling Using The Master Code	85
Synthesised Voice Dialling Function	85
How To Acknowledge Synthesised Voice Dialling Without DTMF Command Module Fitted.....	85
How To Acknowledge Synthesised Voice Dialling With DTMF Command Module Fitted	85
Operation Of The Voice Module	86
Recording The Voice Message	86
Replay The Voice Message.....	86
Connection Of The Voice Module.....	87
Basic Pager Format Reporting.....	88
PET Alpha Pager Reporting	89
Programming and Hardware Requirements	89
Telecom Access Telephone Numbers	89
PET Alpha Pager Messages.....	90
PET Alpha Pager Password.....	91
Converting ASCII Characters To Hexadecimal	92
PET Alpha Pager ID Number.....	92
Logging System Events Via Serial Printer.....	93
Printer Output Baud Rate	93
BASE STATION INFORMATION	95
BASE STATION INFORMATION.....	96
How To Program A Phone Number.....	96
Primary Telephone Number	96
Secondary Telephone Number.....	97
Callback Telephone Number	97
Dialling Format.....	97
Handshake Tone.....	98
Transmission Format	98
Transmission Speed	99
Subscriber ID Number.....	100
Ring Count.....	100
Answering Machine Bypass	100
ACCESS CODES.....	101
ACCESS CODES	102
Installer Code.....	102
User Codes	102
User Code Priority.....	103
Auxiliary Codes	105
Auxiliary Code 1	105
Auxiliary Code 2.....	105
Code Retries.....	105

ZONE PROGRAMMING.....	107
ZONE PROGRAMMING.....	108
Zone Operating Information	108
Zone Reporting Information	108
Zone Defaults	108
Zone Types.....	109
0 Instant Zone	109
1 Handover Zone.....	109
2 Delay-1 Zone.....	109
3 Delay-2 Zone.....	109
4 Delay-3 Zone.....	109
5 Delay-4 Zone.....	109
6 Instant Zone + Isolated In STAY Mode 1	109
7 Handover Zone + Isolated In STAY Mode 1.....	109
8 Delay-1 Zone + Isolated In STAY Mode 1.....	109
9 Delay-2 Zone + Isolated In STAY Mode 1.....	110
10 Delay-3 Zone + Isolated In STAY Mode 1.....	110
11 Delay-4 Zone + Isolated In STAY Mode 1.....	110
12 24 Hour Burglary Zone.....	110
13 24 Hour Fire Zone	110
14 Chime Zone (Follow Me)	110
15 Zone Not Used.....	110
Zone Options	111
1&2 Lockout Siren & Lockout Dialler.....	111
4 Silent Alarm.....	111
8 Sensor Watch	112
Zone Pulse Count	112
Zone Pulse Count Handover.....	113
Zone Pulse Count Time	113
Day Alarm.....	114
Day Alarm Resetting.....	114
Day Alarm Latching.....	114
Day Alarm Operation - (Software Version 1.10)	115
Day Alarm Operation - (Software Version 1.20 Onwards)	115
Day Alarm In Partitioning.....	115
EOL Resistor Value	116
SYSTEM STATUS INFORMATION	117
SYSTEM STATUS INFORMATION.....	118
Bypass Codes For Zones 1-8	118
Bypass Codes For Zones 9-16	118
Trouble Codes For Zones 1-8.....	119
Trouble Codes For Zones 9-16.....	119
Codepad Duress.....	120
Codepad Panic.....	121
Access Denied	122
AC Fail	122
Low Battery	123
Program Altered Code	123
Sensor Watch	124
Open/Close Codes	124
Test Reports	125
Test Report Options.....	125

PROGRAMMABLE OUTPUTS.....	127
PROGRAMMABLE OUTPUTS.....	128
Output Configurations.....	129
Redirecting Outputs To The Codepad Buzzer.....	130
OUTPUT EVENT TYPES.....	131
Output Polarity - (Software Version 1.20 - 1.40).....	138
0 Output Not Used.....	138
1 Normally Open, Going Low.....	138
2 Normally Open, Pulsing Low.....	138
3 Normally Open, One Shot Low.....	138
4 Normally Open, One Shot Low With Retrigger.....	138
5 Normally Open, One Shot Low With Reset.....	138
6 Normally Open, One Shot Low With Alarm.....	138
7 Normally Open, Latching Low.....	138
8 Normally Low, Going Open.....	139
9 Normally Low, Pulsing Open.....	139
10 Normally Low, One Shot Open.....	139
11 Normally Low, One Shot Open With Retrigger.....	139
12 Normally Low, One Shot Open With Reset.....	139
13 Normally Low, One Shot Open With Alarm.....	139
14 Normally Low, Latching Open.....	139
Output Polarity - (Software Version 1.10 Only).....	139
Timing Of Outputs.....	140
Pulsing Polarities.....	140
One Shot Polarities.....	141
SYSTEM EVENT TIMERS.....	143
SYSTEM EVENT TIMERS.....	144
How To Program Entry/Exit Timers.....	144
Entry Time.....	144
Entry Timer 1.....	144
Entry Timer 2.....	144
Entry Timer 3.....	144
Entry Timer 4.....	144
Exit Time.....	145
Exit Timer For AWAY Mode.....	145
Exit Timer For STAY Mode 1.....	145
Exit Timer For STAY Mode 2.....	145
Entry Guard Timer For STAY Mode.....	145
Codepad Lockout Time.....	146
Sensor Watch Time.....	146
System Date.....	147
Setting The Date and Time.....	147
Auto Arming.....	148
Auto Arming Pre-Alert Timer.....	148
Auto Operation Pre-Alert Timer.....	149
Auto Operation Of The Timed Output.....	149
Siren Run Time.....	149
Siren Sound Rate.....	149
Swinger Shutdown Count.....	150
Swinger Shutdown Count For Siren.....	151
Swinger Shutdown Count For Dialler.....	151
System Time.....	152
Setting The Date and Time.....	152
OPTION BITS.....	153
OPTION BITS.....	154
Dialler Options 1.....	154
Dialler Options 2.....	155
System Options 1.....	156
System Options 2.....	157
System Options 3.....	158
System Options 4.....	159

System Options 4.....	160
Consumer Options 1	161
Consumer Options 1	162
Consumer Options 2	163
DTMF Command Module Options	164
Expansion Board Type.....	165
Expansion Board Type.....	166
Telephone Line Fault Options.....	168
System Options 5.....	169
System Options 6.....	170
Carrier Sync Options	171
PARTITIONING.....	173
PARTITIONING.....	174
Master Partitioned Codepad Indicators	174
1 Zone Indicators	174
2 Areas On/Off Indicators	174
3 Area Display Indicators	174
4 Status Indicators.....	174
Operating Codepads In Partitioning.....	175
Operating From A "CP5 Area Addressable (CP500A)" Codepad	175
Operating From A "CP5 Master Partitioned (CP500P)" Codepad	175
Securitel and Partitioning	175
Questions To Be Considered When Partitioning	176
Open/Close Reports	177
Dialler Options 2.....	177
Open/Close Codes For Area 1.....	178
Open/Close Codes For Area 2.....	178
Open/Close Codes For Area 3.....	178
Open/Close Codes For Area 4.....	178
Subscriber ID Number For Area 1	179
Subscriber ID Number For Area 2	179
Subscriber ID Number For Area 3	179
Subscriber ID Number For Area 4	179
Zone Allocations	180
Zone Allocations For Area 1.....	180
Zone Allocations For Area 2.....	180
Zone Allocations For Area 3.....	181
Zone Allocations For Area 4.....	181
User Code Allocations	182
Setting Up and Programming Codepads For Partitioning.....	183
Codepad Connections For Partitioning.....	184
OPTIONAL EQUIPMENT.....	187
Optional Equipment	188
TERMINAL DEFINITIONS AND DESCRIPTIONS	195
TERMINAL DEFINITIONS AND DESCRIPTIONS	196
Solution-16 Wiring Diagram	198
Eight Zone Expansion Board (CC885) - Fixed 3K3 EOL Resistors	199
Eight Zone Expansion Board (CC883) - Variable EOL Resistors	199
Connections Of Split EOL Resistors For 16 Zone Operation	200
Eight Channel Open Collector Output Board (CC884).....	200
Connection For Momentary Or Latching Keyswitch	201
Connections For 25 Pin Logging Printer.....	201
Connections For 9 Pin Logging Printer.....	201
Solution-16 Component Overlay.....	202
Telecom Connection Diagrams	203

APPENDICES..... 205
 APPENDIX A..... 206
 Telephone Anti-Jamming..... 206
 APPENDIX B 207
 Test Reports Only When Armed..... 207
SPECIFICATIONS..... 209
 WARRANTY STATEMENT..... 210
 Specifications..... 210
 Software Version Number 210
PROGRAMMING SHEETS 211
INDEX..... 221

Introduction

This Section Includes The Following:

- *Introduction*
- *Quick Start*
- *Telepermit Note*

Introduction

Congratulations on selecting the *Solution- 16* control panel for your installation. So that you can obtain the most from your unit, we suggest that you take the time to read through this manual and familiarise yourself with the numerous outstanding operating and installation features of this control panel.

You will notice that in all aspects of planning, engineering, styling, operation, convenience and adaptability, we have sought to anticipate your every possible requirement. Programming simplicity and speed have been some of the major considerations and we believe that our objectives in this area have been more than satisfied.

This installation manual will explain all aspects of programming the *Solution- 16* control panel from factory default to final commissioning. All system parameters and options are detailed, however, suitability is left up to the individual. Every control panel can be tailored to meet all requirements quickly and easily. The programming simplicity will make your installation quick, accurate and rewarding each and every time.

The *Solution* range of control panels has proven very popular amongst thousands of people throughout many countries of the world, all who have various levels of technical aptitude and ability. We have tried to aim this installation manual to all levels of readers.

As the *Solution* control panels have continued to advance over the years, they have become very powerful and extensive. Some of its early first-time users have advanced to true "power users" and we need to address their needs too, while maintaining the simplicity of the manual and the product.

Quick Start

The following steps will enable you to use the *Solution- 16* control panel with the factory default values.

1. Connect the AC plug pack to the control panel.

All zone indicators on the remote codepad will illuminate momentarily and then extinguish. Check the operation of the overload LED (LD1) on the printed circuit board. In normal operation the LED will not illuminate. The MAINS indicator will remain on as will the AWAY indicator. The system is now in the armed state.

2. The lead acid back-up battery should now be connected. The lead acid rechargeable back-up battery should be rated at 12v DC @ 6.5 Ah.
3. Enter the **MASTER CODE** followed by the **AWAY** button to disarm the system. The AWAY indicator will extinguish. The control panel is now in the disarmed state. Programming of the control panel can now be accessed. Refer to the "Master Code Functions" on page 53 for more information. The factory default Master Code is **2580**.
4. Enter the factory default **INSTALLER CODE** followed by the **AWAY** button to access the Installer's Programming Mode. The STAY and AWAY indicator's will now flash simultaneously. Refer to "LOCATION 56 - 62" on page 102 for the locations of the factory default Installer Code. The factory default Installer Code is **1234**.
5. Enter the Primary Telephone Number and the Secondary Telephone Number followed by the Subscriber ID Number.
6. If required, program the test reporting time and any other programming changes to be made, otherwise the programmed factory default settings will be used.
7. Enter command **960** followed by the **AWAY** button to exit the Installer's Programming Mode. The control panel will return to the disarmed state and is now ready for use.
8. Refer to page 44 for information on any system faults that may have occurred.
9. Using a Master Code set the date and time. Refer to "Master Code Functions" on page 53 for more information on setting the date and time.

Zone Number	Zone Type
1	Delay-1
2, 3, 4, 5	Handover
6, 7 & 9 - 16	Instant
8	24 Hour

Table 1: Zone Defaults

The factory default settings allow the control panel to communicate in Contact ID Format operating eight zones. For further information on the factory default settings, refer to the "Programming Sheets" on page 211 at the back of the installation manual. If sixteen zones are required, refer to "LOCATION 339" on page 116 for setting the split EOL resistor value or "LOCATION 672" to enable the zone expansion board if required on page 165.

Telepermit Note

The grant of a Telepermit for a device in no way indicates Telecom acceptance of responsibility for the correct operation of that device under all operating conditions.

This equipment shall not be used in any manner which could constitute a nuisance to other Telecom customers.

Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.

The preferred method of dialling is to use DTMF tones as this is faster than pulse (Decadic) dialling. In some situations there may be difficulties with DTMF signalling as this control panel is not fully compatible with the Telecom Telephone Network. In this case you must use decadic dialling, and your control panel must be set up to record numbers using the following translation table as it does not implement the New Zealand "Reverse Dialling" standard.

Number to be dialled	0	1	2	3	4	5	6	7	8	9
Number to be programmed	9	8	7	6	5	4	3	2	1	0

Note that where DTMF dialling is used, the numbers should be entered normally.

The transmit level from this device is set as a fixed level and because of this there may be circumstances where the performance is less than optimal. Before reporting such occurrences as faults, please check the line with a standard telepermitted telephone.

Programming

This Section Includes The Following:

- *Programming*
- *Programming With The Remote Codepad*
- *Programming With The Hand Held Programmer*
- *Programming Using The Programming Key*
- *Programming Via The DTMF Command Module*
- *Programming Option Bits*
- *Installers Programming Commands*
- *Disable Factory Default*
- *Defaulting The Control Panel*

Programming

The programming options of this control panel are stored in a non volatile Eprom. This memory will hold all the relevant configuration and user specific data even during a total power loss.

The data retention time is as long as ten years without power, therefore, no reprogramming will be required after powering the control panel down.

The data can be altered as many times as required without the need for any additional specialised equipment. This memory is laid out in numerous locations each of which holds the data for a specific function.

In general, the entire programming sequence will consist of nominating the location number required and then entering or altering the data. You will repeat this procedure until all the data has been programmed to suit your requirements. The factory default settings have been selected for reporting in the Contact ID Format.

Note: 15 is the maximum value that can be programmed into any location.

There are two programming modes. The Installer's Programming Mode and the Operators Programming Mode. Both programming modes have individual access codes and these two codes must always be programmed differently. The Master Code, as well as being able to arm and disarm the system gives access to the Operators Programming Mode. The Installers Code only gives access to the Installer's Programming Mode and does NOT arm and disarm the system.

Programming of the *Solution- 16* control panel can be carried out via any of the following five methods.

- ◆ System Codepad
- ◆ Hand Held Programmer (CC814)
- ◆ Programming Key (CC891)
- ◆ Alarm Link Upload/Download Software (CC816)
- ◆ DTMF Command Module (CC886)

Programming With The Remote Codepad

The control panel must be in the disarmed state with no flashing zone alarm memories to access the Installer's Programming Mode. This can be achieved by entering the **MASTER CODE** followed by the **AWAY** button. The factory default Master Code is **2580**.

To access the Installer's Programming Mode, enter the **INSTALLER CODE** followed by the **AWAY** button. The factory default Installer Code is **1234**. Three beeps will be heard and both the STAY and AWAY indicators will flash simultaneously. If a long beep is heard, check the control panel for alarm memory. The combination of the MAINS and ZONE indicators will indicate the data stored in the first location of the Primary Telephone Number (LOCATION 000).

Data Value	Zone 1 Indicator	Zone 2 Indicator	Zone 3 Indicator	Zone 4 Indicator	Zone 5 Indicator	Zone 6 Indicator	Zone 7 Indicator	Zone 8 Indicator	MAINS Indicator
0									
1	✓								
2		✓							
3			✓						
4				✓					
5					✓				
6						✓			
7							✓		
8								✓	
9	✓							✓	
10									✓
11	✓								✓
12		✓							✓
13			✓						✓
14				✓					✓
15					✓				✓

Table 2: Zone Indicators When Programming

Example

To enter Installer's Programming Mode, enter the **INSTALLER CODE** followed by the **AWAY** button. The factory default Installer's Code is **1234**. Two beeps will be heard and the codepad will display the current data stored in "LOCATION 000".

To go to a particular location, enter the **LOCATION NUMBER** required followed by the **AWAY** button. The data of the new location will now be displayed.

To move to the next location, press the **AWAY** button. This will step you to the next location and the data in that location will be displayed via the ZONE indicators.

If you press the **STAY** button without previously entering a location number, the system will step back one location. To change data at the current location, enter the new value (0-15) followed by the **STAY** button. This will store the new data into the location and still leave you positioned at the same location.

To proceed to the next location, press the **AWAY** button. The next locations data will now be displayed.

To exit the Installer's Programming Mode, enter command **960** followed by the **AWAY** button. Two beeps will be heard and the system will return back to normal operation. Refer to "Installers Programming Commands" on page 25 for further information on commands that can be performed during access of the Installer's Programming Mode.

Programming With The Hand Held Programmer

The Hand Held Programmer (CC814) has five, seven segment displays. The three on the left display the location number, and the two on the right display the data for that particular location.

To connect the hand held programmer, locate the connections marked PROGRAMMING KEY. This point can be found on the left hand side of the *Solution- 16* printed circuit board. Observe the triangular markings on the *Solution- 16* printed circuit board and line them up with the markings on the hand held programmers connecting socket.

When the hand held programmer is correctly plugged onto the printed circuit board, one beep will be heard and four centre bars on the hand held programmer will illuminate with either an 'A' or 'U' suffix to indicate the system is armed or unarmed. Only when the Installer's Programming Mode has been accessed will any numerals appear on the display.

Note: When connecting the hand held programmer to the control panel, make sure that the switch on the hand held programmer is in the EXT position and that no external programming key has been connected. Failing to do this may corrupt the control panel's memory. If this happens, the control panel will need to be returned to Electronics Design and Manufacturing Pty Limited where a service fee will be charged to unlock the control panel's memory.

Example

To enter the Installer's Programming Mode, enter the INSTALLER CODE followed by the # button. The factory default Installers Code is **1234**. Two beeps will be heard and the hand held programmers display will show the current data stored in "LOCATION 000".

To move to a particular programming location, enter the LOCATION NUMBER followed by the # button. The data for the new location will now be displayed.

To move to the next location press the # button. This will step you to the next location and the data in that location will now be displayed via the ZONE indicators.

If you press the * button without previously entering a location number, the system will step back one location. To change data in the current location, enter the new value (0-15) followed by the * button. This will store the new data into the location and still leave you still positioned at the same location.

To proceed to the next location, press the # button. The next locations data will now be displayed.

To exit the Installer's Programming Mode, enter command **960** followed by the # button. Two beeps will be heard and the system will return back to normal operation. Refer to "Installers Programming Commands" on page 25 for further information on commands that can be performed during access of the Installer's Programming Mode.

Note: When using the hand held programmer, any reference in this manual made to the STAY button should be considered as the * button and the AWAY button considered as the # button.

Programming Using The Programming Key

The Programming Key (CC891) is a unique device that will allow you to easily program your control panel. Inserting the programming key will automatically initiate a data transfer from the programming key to the control panel memory.

If you have a new programming key, you should first enter the Installer's Programming Mode, configure your control panel as per your requirements before inserting the programming key.

To connect the programming key, locate the connections marked PROGRAMMING KEY. This point can be found on the right hand side of the control panel. Observe the triangular markings on the printed circuit board and line them up with the markings on the programming key.

To copy the control panel's data into your new programming key, enter command **962** followed by the **AWAY** button. Refer to "Command 962 - Copy Control Panel Memory To Programming Key" on page 27 for further details.

Exit the Installer's Programming Mode by entering the command **960** followed by the **AWAY** button, wait two seconds for the activity LED to return to its normal state and then remove the programming key. This programming key will now become your standard data pattern for future programming of your control panels.

It should be noted that when entering the Installer's Programming Mode, inserting a programming key and then altering any location will cause a simultaneous update of not only the programming keys data, but also the control panels data. Therefore, you are not able to alter data in the programming key without the same location being altered in the control panels memory.

Note: Connecting a Programming Key (CC891) to the control panel when the programming keys memory is blank will corrupt the control panel's memory unless the Installer's Programming Mode has been entered first. If this occurs, then the control panel will need to be returned to Electronics Design & Manufacturing Pty Limited where a service fee will be charged to unlock the control panel's memory.

Programming Via The DTMF Command Module

The DTMF Command Module (CC886) will allow you to operate and program your control panel remotely via the telephone line. Once a communications link has been established with the control panel, you will be able to perform any system functions using the codepad on a touch tone telephone for Master Code, User Code and Installer Code Functions as well as access into Installer's Programming Mode.

Below will give an example of making a connection to the control panel and changing the "Exit Time" for AWAY Mode to 26 seconds on a non partitioned system. To connect to a system which has been partitioned, refer to "Operating The Control Panel Using The DTMF Command Module" on page 71 for further information.

Example

How To Establish A Communication Link With The Control Panel

1. Dial the telephone number that the control panel has been connected to. When the control panel answers your call, you will hear a short jingle.
2. After the jingle, press the **O** button on the telephone. You will now hear a second jingle and have established a communication link with the control panel.

Programming The Control Panel Once A Communication Link Has Been Established

Once the connection has been established, enter your **INSTALLER CODE** followed by the **#** button. Two beeps will be heard. If no beeps are heard, enter a user code to disarm the system before entering the Installer's Code again.

After entering Installer's Programming Mode, follow the steps below to program the new "Exit Time " for AWAY Mode.

1. To go to "LOCATION 632", enter **632** followed by the **#** button.
2. Enter the value **10** followed by the ***** button.
3. Press the **#** button to move to the next location.
4. Enter the value **1** followed by the ***** button.
5. Now enter command **960** followed by the **#** button to exit Installer's Programming Mode.
The exit time for AWAY Mode has now been programmed for 26 seconds.

To terminate the communication link with the control panel, press the **#** button twice.

Programming Option Bits

When programming these locations you will notice that there are four alternatives per location. You may select one, two, three or all of these alternatives for each location, however, only one number is required to be programmed. This number is calculated by adding the option bit numbers together.

Example

If at "LOCATION 663" you want options 1, 2 and 4. Add the numbers together and the total is the number to be programmed. In this example, the number to be programmed is 7 (ie. 1+2+4=7).

Option	Description
1	Enable Dialler Reporting Functions
2	Enable Remote Arming Via The Telephone
4	Enable Upload/Download
8	Terminate Alarm Link Session On Alarm

Table 3: Example - Programming Option Bits

Installers Programming Commands

There are several commands that can be invoked to perform various functions once the Installer's Programming Mode has been entered. To invoke the command, enter the corresponding numerical code followed by the **AWAY** button

Command	Function
958	Enable and Disable Zone Status Mode
959	Test Programming Key
960	Exit Installer's Programming Mode
961	Reset Control Panel Back To Factory Default Settings
962	Copy The Control Panel Memory To The Programming Key
963	Copy The Programming Key Data To The Control Panel
964	Erase Programming Key
965	Set Up Domestic Dialling Format
966	Enable and Disable Automatic Stepping Of Locations During Programming
999	This Command Displays The Control Panel's Software Version Number Only When Using The Hand Held Programmer

Table 4: Installer's Programming Commands

Command 958 - Enable/Disable Zone Status Mode

This function enables and disables the zone status display mode. When using the hand held programmer, the zones will be displayed on the seven segment displays from left to right. If there is a dash illuminated on the display, the corresponding zone is unsealed and if the display is blank, the zone is sealed.

The third (or centre) display shows either the number 4 or the number 8. The number 4 constantly illuminated indicates that zones 1 - 4 are being displayed. The number 8 constantly illuminated indicates that zones 5 - 8 are being displayed. The number 4 flashing indicates zones 9 - 12 are being displayed. The number 8 flashing indicates that zones 13 - 16 are being displayed.

Pressing the **#** button will toggle the display between the zones. This feature will prove to be very useful during installation as it allows you to view the status of the zones directly at the control panel, saving you time and money.

How To Enable Zone Status Mode

1. Enter Installers Programming Mode.
2. Enter command **958** followed by the **#** button.
Two beeps will be heard.

How To Disable Zone Status Mode

1. Enter command **958** followed by the **#** button.
Two beeps will be heard.

Example

A " - " in the display indicates the zone is triggered.

A blank display indicates the zone is normal.

- - 4 - - indicates that zones 1, 2, 3 and 4 are triggered.
A flashing "4" indicates zones 9, 10, 11 and 12 are being displayed.

- À8À - indicates that zones 5 and 8 are triggered.
A flashing "8" indicates zones 13 and 16 are being displayed.

Command 959 - Test Programming Key

This command causes a test to be carried out on the programming key. This test is non destructive and any data in the programming key will remain intact after the test has been completed. One long beep indicates that the programming key has failed and three beeps indicates a successful test. If the programming key has been removed before the test has completed or the programming key has failed, the data in the programming key has become corrupt. Remember, do not remove the programming key while the activity LED is illuminated constantly or pulsing rapidly.

How To Test The Programming Key

1. Enter Installer's Programming Mode.
2. Plug the programming key onto the pins marked PROGRAMMING KEY on the control panel.
3. Enter command **959** followed by the **#** button.
Two beeps will be heard and the programming key has now been tested.
4. Enter command **960** followed by the **#** button to exit the Installer's Programming Mode before removing the programming key.

How To Test The Programming Key Using The Hand Held Programmer

1. Before connecting the hand held programmer, make sure that the switch on the hand held programmer is in the EXT position.
2. Enter the Installer's Programming Mode.
3. Plug the programming key onto the pins marked EXTERNAL KEY on the hand held programmer.
4. Enter command **959** followed by the **#** button.
Two beeps will be heard and the programming key connected to the hand held programmer has now be tested.
5. Enter command **960** followed by the **#** button to exit the Installer's Programming Mode.
6. Leave the switch on the hand held programmer in the EXT position and disconnect the external programming key.

Command 960 - Exit Installer's Programming Mode

This command is used to exit the Installer's Programming Mode after you complete your programming alterations. This is achieved by entering command **960** followed by the **#** button. Two beeps will be heard and the system will return to normal. This command can be performed at any programming stage and from any location.

Command 961 - Reset Control Panel Back To Factory Default Settings

This command will reset the control panel back to the factory default values. Refer to the values shown throughout this manual or the "Programming Sheets" on page 211. This is achieved by entering the command **961** followed by the **#** button. Three beeps will be heard.

Command 962 - Copy Control Panel Memory To Programming Key

This command is used to copy the control panel memory to the programming key.

How To Copy The Control Panel Memory To The Programming Key

1. Enter Installer's Programming Mode.
2. Plug the programming key onto the pins marked PROGRAMMING KEY on the control panel.
3. Enter command **962** followed by the **#** button.
Two beeps will be heard and the control panel's memory has now been copied into the programming key.
4. Enter command **960** followed by the **#** button to exit the Installer's Programming Mode.
5. Disconnect the programming key from the control panel.

How To Copy The Control Panel Memory To The Programming Key Using The Hand Held Programmer

1. Before connecting the hand held programmer to the control panel, make sure that the switch on the hand held programmer is in the EXT position.
2. Enter the Installer's Programming Mode.
3. Plug the programming key onto the pins marked EXTERNAL KEY on the hand held programmer.
4. Enter command **962** followed by the **#** button.
Two beeps will be heard and the control panel's memory has now been copied into the programming key.
5. Enter command **960** followed by the **#** button to exit the Installer's Programming Mode.
6. Leave the switch on the hand held programmer in the EXT position and disconnect the programming key.

Command 963 - Copy From Programming Key To Control Panel

This command is used to copy data from the programming key to the control panel.

How To Copy The Programming Key Memory To The Control Panel

1. Enter Installer's Programming Mode.
2. Connect the programming key onto the pins marked PROGRAMMING KEY on the control panel.
3. Enter command **963** followed by the **#** button.
Two beeps will be heard and the programming key's data has now been copied to the control panel.
4. Enter command **960** followed by the **#** button to exit Installer's Programming Mode.
5. Now disconnect the programming key from the control panel.

How To Copy The Programming Key Memory To The Control Panel Using The Hand Held Programmer

1. Before connecting the hand held programmer to the control panel, make sure that the switch on the hand held programmer is in the EXT position.
2. Enter the Installer's Programming Mode.
3. Plug the programming key onto the pins marked EXTERNAL KEY on the hand held programmer.
4. Enter command **963** followed by the **#** button.
Two beeps will be heard and the programming keys data will now be copied to the control panel.
5. Enter command **960** followed by the **#** button to exit the Installer's Programming Mode.
6. Leave the switch on the hand held programmer in the EXT position and disconnect the programming key.

Command 964 - Erase Programming Key

This command erases all data from the programming key.

How To Erase The Programming Key

1. Enter the Installer's Programming Mode.
2. Connect the programming key onto the pins marked PROGRAMMING KEY on the control panel.
3. Enter command **964** followed by the **#** button.
4. Two beeps will be heard and the programming keys data has now been deleted.
5. Enter command **965** followed by the **#** button to exit the Installer's Programming Mode.
6. Now remove the programming key from the control panel.

How To Erase The Programming Key Using The Hand Held Programmer

1. Before connecting the hand held programmer to the control panel, make sure that the switch on the hand held programmer is in the EXT position.
2. Enter the Installer's Programming Mode.
3. Plug the programming key onto the pins marked EXTERNAL KEY on the hand held programmer.
4. Enter command **964** followed by the **#** button.
Two beeps will be heard and the programming keys data has now been deleted.
5. Enter command **960** followed by the **#** button to exit Installer's Programming Mode.
6. Now disconnect the programming key from the hand held programmer.

Command 965 - Set Up Domestic Dialling Format

Command 965 has been added to make the set up of the Domestic Dialling Format a one step operation. Refer to page 82 for more information on "Domestic Reporting".

After Installer's Programming Mode has been accessed, enter command **965** followed by the **#** button. This will automatically set the following locations in bold below. No other locations will be altered when command 965 has been issued.

<i>Location</i>	<i>Description</i>	<i>Setting</i>
Location 49	Handshake Tone	2 (1400 Hz)
Location 50	Transmission Format	11 (Domestic Dialling)
Location 52 - 55	Subscriber ID Number	0, 0, 0, 1
Location 340 - 347	Zone 1	2, 0, 0, 0, 0 , 3, 0, 1 (Delay-1)
Location 348 - 355	Zone 2	1, 0, 0, 0, 0 , 3, 0, 1 (Handover)
Location 356 - 363	Zone 3	1, 0, 0, 0, 0 , 3, 0, 1 (Handover)
Location 364 - 371	Zone 4	1, 0, 0, 0, 0 , 3, 0, 1 (Handover)
Location 372 - 379	Zone 5	1, 0, 0, 0, 0 , 3, 0, 1 (Handover)
Location 380 - 387	Zone 6	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 388 - 395	Zone 7	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 396 - 403	Zone 8	12, 0, 0, 0, 0 , 3, 3, 1 (24 Hour Burglary)
Location 404 - 411	Zone 9	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 412 - 419	Zone 10	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 420 - 427	Zone 11	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 428 - 435	Zone 12	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 436 - 443	Zone 13	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 444 - 451	Zone 14	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 452 - 459	Zone 15	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 460 - 467	Zone 16	0, 0, 0, 0, 0 , 3, 0, 1 (Instant)
Location 468 - 471	Bypass Reports	0, 0, 0, 0 (Not Used)
Location 472 - 475	Trouble Reports	0, 0, 0, 0 (Not Used)
Location 476 - 479	Codepad Duress	0, 0, 0, 0 (Not Used)
Location 480 - 483	Codepad Panic	0, 0, 0, 0 (Not Used)
Location 484 - 487	Codepad Tamper	0, 0, 0, 0 (Not Used)
Location 488 - 491	AC Fail	0, 0, 0, 0 (Not Used)
Location 492 - 495	Low Battery	0, 0, 0, 0 (Not Used)
Location 496 - 499	Program Altered	0, 0, 0, 0 (Not Used)
Location 500 - 503	Sensor Watch	0, 0, 0, 0 (Not Used)
Location 504 - 505	Open/Close Reports	0, 0 (Not Used)
Location 506 - 513	Test Report Time	0, 0, 0, 0, 0, 0, 9, 0 (Not Used)

Table 5: Command 965 Defaults

As you can see from the table above, all reporting other than zone alarms have been disabled. The handshake tone has been set for 1400 Hz tone acknowledgment and the Subscriber ID Number has been set for one identification beep. The zone reporting has been set so that any zone that triggers into alarm condition will only report when the alarm occurs, the zone restore report will not report as there is no separate indications for zone alarm reports and zone alarm restore reports.

Note: From Software Version 1.30, Command 965 disables zone restore reports.

Command 966 - Enable/Disable Automatic Stepping Of Locations

This command enables or disables the automatic stepping of locations while programming. When enabled via the hand held programmer, the decimal point of the left most display will reflect the mode of operation.

If the decimal point is illuminated then auto step mode is active. An automatic increment of the location being programmed will occur as soon as the * button is pressed positioning you at the next location ready for programming.

If the decimal point is extinguished, the auto step mode is disabled. The next programming location will need to be manually selected by pressing the # button. As you can see from the examples below, auto step mode is a very useful feature when programming successive locations.

How To Enable Automatic Stepping Of Locations

1. Enter command **966** followed by the **#** button.
Two beeps will be heard.

How To Disable Automatic Stepping Of Locations

1. Enter command **966** followed by the **#** button.
Two beeps will be heard.

Example

(Auto Step Enabled)

To enter the Primary Telephone Number "02 pause 9 672 1055" with auto step enabled (ie. Decimal point illuminated).

Press **O** followed by the **#** button.

(This will position you at "LOCATION 000" being the start of the Primary Telephone Number).

[10] + * + **2** + * + **[13]** + * + **9** + * + **6** + * + **7** + * + **2**
+ * + **1** + * + **[10]** + * + **5** + * + **5** + * + **0** + *

Example

(Auto Step Disabled)

To enter the Primary Telephone Number "02 pause 9 672 1055" with auto step disabled (ie. Decimal point extinguished).

Press **O** followed by the **#** button.

(This will position you at "LOCATION 000" being the start of the Primary Telephone Number).

[10] + * + **#** + **2** + * + **#** + **[13]** + * + **#** + **9** + * + **#** + **6**
+ * + **#** + **7** + * + **#** + **2** + * + **#** + **1** + * + **#** + **[10]** +
* + **#** + **5** + * + **#** + **5** + * + **#** + **0** + *

Command 999 - Display Software Version Number

This command will display the control panel's software version number. This command can only be used with the hand held programmer.

Enter command **999** followed by the **#** button to display the control panel's software version number. Two beeps will be heard. Press the **#** button to exit this command.

LOCATION 900

The system has a feature that prevents the control panel from being manually defaulted via the default button or by using a programming key.

Any number between 0-14 programmed into this location will allow defaulting of the control panel. If 15 has been programmed into this location, defaulting of the control panel will not operate and the Installer Code **MUST** be used for further programming of the control panel.

If the Installer Code is not known, the control panel will need to be returned to your EDM Distributor for exchange. A nominal fee applies for this service.

Warning: Electronics Design and Manufacturing Pty Limited does not recommend the use of this feature.

If this option is required, a special programming procedure has been introduced to eliminate any possibility of accidentally setting this option. The default button on the PCB must be held down while programming this location.

How To Prevent Manual Defaulting Of The Control Panel

1. Plug the hand held programmer to the pins provided on the PCB.
2. Disarm the system.
3. Access Installer's Programming Mode.
4. Go to "LOCATION 900".
5. Hold down the default button.
6. Program a 15 into "LOCATION 900".
7. Release the default button.
8. Exit Installer's Programming Mode.

Defaulting The Control Panel

If the *Solution-16* control panel does not have "LOCATION 900" programmed as 15, follow the procedure outlined below to successfully default the control panel back to the factory default settings.

How To Default The Control Panel

1. Disconnect the AC mains and backup battery from the control panel.
2. Hold down and continue to hold down the DEFAULT button located at the top of the printed circuit board.
3. Reconnect the AC mains to the control panel.
4. After reconnecting the AC mains, wait for 3-5 seconds before releasing the DEFAULT button.

You will hear the dialler seize relay (RL2) on the control panel click once and two beeps will be heard on the remote codepad. The control panel will now need to be disarmed by using the default Master Code 2580.

The control panel has now been successfully defaulted back to the factory default settings.

Note: If following the above procedure to default the control panel and you hear the dialler seize relay (RL2) click four times, defaulting the control panel has been disabled. The control panel will need to be returned to Electronics Design and Manufacturing Pty Limited for exchange where a service fee will be charged to unlock the control panel's memory.

System Indicators and Operations

This Section Includes The Following:

- *The Codepad*
- *Zone Indicators*
- *AWAY Indicator*
- *STAY Indicator*
- *MAINS Indicator*
- *FAULT Indicator*
- *Audible Indicators*
- *LCD Codepad Indicators*
- *Arming The System In AWAY Mode*
- *Disarming The System From AWAY Mode*
- *Arming The System In STAY Mode 1*
- *Disarming The System From STAY Mode 1*
- *Arming The System In STAY Mode 2*
- *Disarming The System From STAY Mode 2*
- *Codepad Duress Alarm*
- *Codepad Panic Alarm*
- *Codepad Fire Alarm*
- *Codepad Medical Alarm*
- *Isolating Zones*
- *Fault Analysis Mode*

System Indicators and Operations

The Codepad

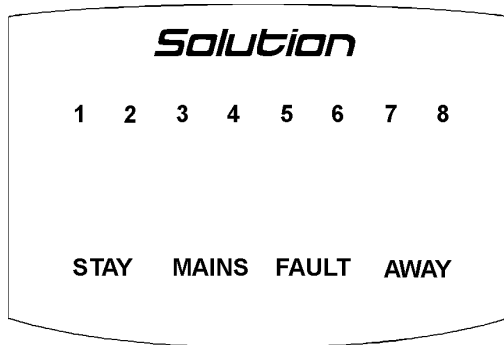


Figure 1: CP5 Eight Zone Codepad

The codepad is the communications interface between you and your alarm system. It allows you to issue commands and offers both visual and audible indications that guide you through the general operation.

The codepad incorporates numerous indicators. There are ZONE indicators which are used to show the condition of each zone and four others for general status. The following is a list of situations and the relevant indications that will be seen.

Zone Indicators

The ZONE indicators are used to show the status of the zones. The following table list the various circumstances that the indicators will display (ie. Zone Sealed, Zone Unsealed).

Indicator	Definition
On	Zone Is Unsealed
Off	Zone Is Sealed
Flashing Fast (0.25 Sec On - 0.25 Sec Off)	Zone Is In Alarm Condition
Flashing Slow (1 Sec On - 1 Sec Off)	Zone Is Manually Isolated

Table 6: Zone Indicators

AWAY Indicator

The AWAY indicator is used to inform you that the system is armed in the AWAY Mode.

Indicator	Definition
On	System Is Armed In AWAY Mode
Off	System Is Not Armed In AWAY Mode

Table 7: AWAY Indicator Functions

STAY Indicator

The STAY indicator is used to indicate that the system is armed in STAY Mode 1 or STAY Mode 2.

Indicator	Definition
On	System Is Armed In STAY Mode 1 Or STAY Mode 2
Off	System Is Not Armed In STAY Mode 1 Or STAY Mode 2
Flashing	System Is In ISOLATE Mode Or STAY Mode 2 Zones Are Being Programmed

Table 8: STAY Indicator Functions

MAINS Indicator

The MAINS indicator is used to indicate that the systems AC mains power is normal or has failed.

<i>Indicator</i>	<i>Definition</i>
On	AC Mains Power Normal
Flashing	AC Mains Failure

Table 9: MAINS Indicator Function

FAULT Indicator

The FAULT indicator is used to indicate that the system has detected a system fault. Refer to "Fault Analysis Mode" on page 44 for more details on system faults.

<i>Indicator</i>	<i>Definition</i>
On	There Is A System Fault That Needs To Be Rectified
Off	The System Is Normal, There Are No Faults
Flashing	There Is A System Fault Waiting To Be Acknowledged

Table 10: FAULT Indicator Functions

Audible Indicators

In general, the audible indications given out by the codepad are as follows:

<i>Indicator</i>	<i>Definition</i>
One Short Beep	A Button Has Been Pressed On The Codepad Or End Of Exit Time In STAY Mode 1 or STAY Mode 2
Two Short Beeps	The System Has Accepted Your Code
Three Short Beeps	The Requested Function Has Been Executed
One Long Beep	Indicates The End Of Exit Time In AWAY Mode Or The Requested Operation Has Been Denied Or Aborted
One Short Beep Every Second	Walk Test Mode Is Currently Active Or Warning Before Automatic Arming Takes Place
One Short Beep Every Minute	There Is A System Fault Waiting To Be Acknowledged

Table 11: Audible Indications

LCD Codepad Indicators

EDM is committed to providing functional and aesthetically pleasing user interfaces and we feel that our unique Icon LCD codepad has met this objective.

The icon codepads provide full zone status indication at all times as well as a number of special icons which indicate such things as system armed, system disarmed, mains fail, system fault and other system functions.

The following table outlines all of the indicators which will be found on the “CP5 Eight Zone LCD Codepad (CP508L)” and the “CP5 Sixteen Zone LCD Codepad (CP516L)”.









 
<p><i>Zone Indicators</i></p> <p>1 2 3</p>	<p>The ZONE indicators (1-8 on CP508L and 1-16 on CP516L) show the status of each zone.</p> <p>Illuminated = Zone Unsealed Flashing = Zone In Alarm Off = Zone Sealed</p>
<p><i>Mains Indicator</i></p> 	<p>The MAINS icon indicates the status of the AC mains power supply.</p> <p>Illuminated = AC Mains OK Flashing = AC Mains Disconnected Or Fail</p>
<p><i>Armed In AWAY Mode</i></p> 	<p>The AWAY icon illuminates when the system is armed in the AWAY mode. The ON indicator will also illuminate when the system is armed in the AWAY mode.</p>
<p><i>Armed In STAY Mode</i></p> 	<p>The STAY icon illuminates when the system is armed in the STAY mode. The ON and OFF indicators will also illuminate when the system is armed in the STAY mode.</p>
<p><i>System Disarmed</i></p> 	<p>This icon will illuminate when the system has been disarmed. The OFF indicator will also illuminate when the system has been disarmed.</p>
<p><i>Zone Isolating Mode</i></p> 	<p>This indicator will illuminate when you attempt to isolate zones. The person will flash once every 3 seconds.</p>
<p><i>Fault Indicator</i></p> 	<p>The FAULT icon will illuminate if the control panel has registered a fault condition.</p> <p>Steady = A fault has been acknowledged. Flashing = A new fault has occurred.</p> <p>Off = No faults have occurred.</p>
<p><i>Programming Mode</i></p>  <p>Flashing</p>	<p>This indicator will illuminate when the system has entered either Installer's Programming Mode or Operators Programming Mode. Both persons will flash.</p>
<p><i>Off Indicator / Zone Sealed</i></p> 	<p>The OFF icon will illuminate when the system is in the disarmed state and will flash when a zone becomes unsealed. It will stop flashing when all zones are sealed.</p>
<p><i>On Indicator / Zone In Alarm</i></p> 	<p>The ON icon will illuminate when the system is armed in the AWAY mode and will flash when an alarm occurs. The indicator will reset once a valid user code has been entered.</p>

Table 12: ICON Indicators and Descriptions

System Operations

Arming The System In AWAY Mode

 
There are two methods for arming your system in the AWAY Mode. Method one is standard and will always operate. Method two is optional and requires to be enabled in "LOCATION 670" on page 163.

Note: Single button arming in AWAY Mode will report as user code number 32.

Method One

How To Arm The System In AWAY Mode

1. Enter your **CODE** followed by the **AWAY** button.
Two beeps will be heard and the AWAY indicator will illuminate. Exit time will now begin.



Method Two

How To Arm The System In AWAY Mode

1. Hold down the **AWAY** button until two beeps are heard.
The AWAY indicator will illuminate and exit time will now begin. Refer to Option 2 in "LOCATION 670" on page 163 to enable "Enable Single Button Arming In AWAY Mode, STAY Mode 1 and STAY Mode 2".



If a zone is not sealed at the end of exit time the zone will be automatically isolated. It will become an active part of the system again as soon as it has resealed (ie. If a window is left open after exit time has expired, the window will not be an active part of the system until it has closed. Opening the window after exit time has expired will cause an alarm condition).

Forced Arming

 
The feature of arming the system when a zone is not sealed is known as forced arming. To enable forced arming, Option 1 in "LOCATION 665" on page 156 will need to be enabled.

If the AWAY indicator does not illuminate and a long beep is heard, forced arming is not permitted. If this is the case you must ensure that all zones are sealed or manually isolated before you can arm the system.

Disarming The System From AWAY Mode

How To Disarm The System From AWAY Mode

1. Enter your **CODE** followed by the **AWAY** button.
Two beeps will be heard and the AWAY indicator will extinguish. A flashing ZONE indicator represents a previous alarm on that zone.



Arming The System In STAY Mode 1

STAY Mode 1 is when the system has been armed with particular zones automatically isolated. These zones must be programmed by the installer.

When there is a need to arm only the system perimeter, this mode is extremely handy. It automatically disables the interior detection zones for allowing movement within the protected area while at the same time arming the perimeter zones.

There are two methods for arming your system in STAY Mode 1. Method one is standard and will always operate. Method two is optional and needs to be enabled in "LOCATION 670" on page 163.

Note: Single button arming in STAY Mode 1 will report as user code number 32.

 
Method One

How To Arm The System In STAY Mode 1

1. Enter your **CODE** followed by the **STAY** button.

Two beeps will be heard and the STAY indicator will illuminate. Exit time for STAY Mode 1 will now commence.

Any zones that have been programmed for STAY Mode 1 will be automatically isolated and their respective indicators will begin to flash until exit time expires. At the end of exit time, the ZONE indicators will extinguish and the codepad will give one short beep.



Method Two

How To Arm The System In STAY Mode 1

1. Hold down the **STAY** button until two beeps are heard.

The STAY indicator will illuminate and exit time for STAY Mode 1 will now commence.

Any zone that have been programmed for STAY Mode 1 will be automatically isolated and their respective indicators will begin to flash until exit time expires. At the end of exit time, the zone indicators will extinguish and the codepad will give one short beep.



If a zone is not sealed at the end of exit time the zone will be automatically isolated. It will become an active part of the system again as soon as it has resealed (ie. If a window is left open after exit time has expired, the window will not be an active part of the system until it has closed. Opening the window after exit time has expired will cause an alarm condition).

Forced Arming

The feature of arming the system when a zone is not sealed is known as forced arming. To enable forced arming, Option 1 in "LOCATION 665" on page 156 will need to be enabled.

If the STAY indicator does not illuminate and a long beep is heard, forced arming is not permitted. If this is the case, you must ensure that all zones are sealed or manually isolated before you can arm the system.

Disarming The System From STAY Mode 1

 
There are two methods for disarming the system from STAY Mode 1. Method one is standard and will always operate. Method two is optional and requires to be enabled in "LOCATION 670" on page 163.

Note: Method two will not operate unless "Enable Single Button Arming In AWAY Mode, STAY Mode 1 and STAY Mode 2" has been enabled.


Method One

How To Disarm The System From STAY Mode 1

1. Enter your **CODE** followed by the **STAY** button.
Two beeps will be heard and the STAY indicator will extinguish. A flashing ZONE indicator represents a previous alarm on that zone.



OR

 

Method Two

A flashing ZONE indicator represents a previous alarm on that zone. If this is the case a valid user code will need to be used to disarm the system. To enable method two, Option 4 in "LOCATION 670" on page 163 will need to be enabled.

Note: Single button disarming from STAY Mode 1 will report as user code number 32.

How To Disarm The System From STAY Mode 1

1. Hold down the **STAY** button until two beeps are heard.
The STAY indicator will extinguish and the system will be disarmed.



Arming The System In STAY Mode 2


STAY Mode 2 is when the system has been armed with particular zones automatically isolated. These zones are programmed via the Master Code holder.

When there is a need to arm the system perimeter only, this mode is extremely handy. It automatically disables the interior detection zones allowing for movement within the protected area while at the same time arming the perimeter zones.

For STAY Mode 2 to operate, Option 2 in "LOCATION 670" on page 163 will need to be enabled. Refer to the Master Code Function - "Setting STAY Mode 2 Zones" on page 62 for further information on programming zones for STAY Mode 2.

Note: Single button arming in STAY Mode 2 will report as user code number 32.

How To Arm The System In STAY Mode 2

1. Hold down the  button until two beeps are heard.
The STAY indicator will illuminate and exit time for STAY Mode 2 will now commence.

Any zone that has been programmed for STAY Mode 2 will be automatically isolated and their respective indicators will begin to flash until exit time expires. At the end of exit time, the ZONE indicators will extinguish and the codepad will give one short beep.



If a zone is not sealed at the end of exit time the zone will be automatically isolated. It will become an active part of the system again as soon as it has resealed (ie. If a window is left open after exit time has expired, the window will not be an active part of the system until it has closed. Opening the window after exit time has expired will cause an alarm condition).

Forced Arming

The feature of arming the system when a zone is not sealed is known as forced arming. To enable forced arming, Option 1 in "LOCATION 665" on page 156 will need to be enabled.

If the STAY indicator does not illuminate and a long beep is heard, forced arming is not permitted. If this is the case, you must ensure that all zones are sealed or manually isolated before you can arm the system.

Disarming The System From STAY Mode 2

 
There are two methods for disarming the system from STAY Mode 2. Method one is standard and will always operate. Method two is optional and requires to be enabled in "LOCATION 670" on page 163.

Note: Method two will not operate unless "Enable Single Button Arming In AWAY Mode, STAY Mode 1 and STAY Mode 2" has also been enabled.


Method One

How To Disarm The System From STAY Mode 2

1. Enter your **[CODE]** followed by the **[STAY]** button.
Two beeps will be heard and the STAY indicator will extinguish. A flashing ZONE indicator represents a previous alarm on that zone.



OR

 

Method Two

A flashing ZONE indicator represents a previous alarm on that zone. If this is the case, a valid user code will need to be used to disarm the system. To enable method two, Option 4 in "LOCATION 670" on page 163 will need to be enabled.

How To Disarm The System From STAY Mode 2

1. Hold down button **O** until two beeps are heard.
The STAY indicator will extinguish and the system will be disarmed.



Codepad Duress Alarm

A codepad duress alarm can be used as a hold up alarm. This will occur when the number **9** is added to the end of any valid user code that is being used to disarm the system. A duress alarm is always silent and can only be made use of if your system is reporting back to a monitoring station or pocket pager.

$$\boxed{\text{CODE}} + \mathbf{9} + \boxed{\text{AWAY}}$$

Codepad Panic Alarm - Software Version 1.10 - 1.36

A codepad panic alarm will be triggered when any two outside buttons in the same horizontal row on the remote codepad are pressed simultaneously. This is an audible alarm. Refer to Option 4 in "LOCATION 666" on page 157 to enable codepad panic to be silent.

$$\boxed{\text{STAY}} + \boxed{\text{AWAY}} \text{ or } \mathbf{1} + \mathbf{3} \text{ or } \mathbf{4} + \mathbf{6} \text{ or } \mathbf{7} + \mathbf{9}$$

Codepad Panic Alarm - Software Version 1.37 Onwards

A codepad panic alarm will be triggered when either the **1** and **3** buttons or the $\boxed{\text{STAY}}$ and $\boxed{\text{AWAY}}$ buttons are pressed simultaneously. This is an audible alarm. Refer to Option 4 in "LOCATION 666" on page 157 to enable codepad panic to be silent.

$$\mathbf{1} + \mathbf{3} \text{ or } \boxed{\text{STAY}} + \boxed{\text{AWAY}}$$

Codepad Fire Alarm - Software Version 1.37 Onwards

A codepad fire alarm will be triggered when the **4** and **6** buttons on the remote codepad are pressed simultaneously. This is an audible alarm. A distinct fire sound is emitted through the horn speaker to indicate this type of alarm condition. The fire sound is different to the burglary sound.

$$\mathbf{4} + \mathbf{6}$$

Codepad Medical Alarm - Software Version 1.37

A codepad medical alarm will be triggered when the **7** and **9** buttons on the codepad are pressed simultaneously. This is an audible alarm.

$$\mathbf{7} + \mathbf{9}$$

Note: To disable both the reporting and the audible alarms for codepad panic, codepad fire and codepad medical alarms, the following will need to be programmed.

In "LOCATION 666" on page 157, "Option 2 - Enable Codepad Panic To Be Silent" will need to be enabled. You will also need to program "LOCATION 483" on page 121 as 0.

Isolating Zones

When a zone is isolated, access is allowed into that zone at all times. Isolating zones is performed by one of two methods. One way requires the use of a valid user code while the other way does not. The ability to isolate zones is governed by the priority level allocated to each user code holder. Some user code holders may not be able to isolate zones. Refer to "User Code Priority" on page 103 for further details.

Twenty four hour zone types and zones not used cannot be isolated. If isolation of these zones is attempted, a long beep will be heard.

Standard Isolating

1. Press the **STAY** button twice.
Three beeps will be heard.
2. * Enter the **ZONE NUMBER** required to be isolated.
3. Press the **STAY** button.
4. * Enter the next **ZONE NUMBER** required to be isolated.
5. Press the **STAY** button.
6. Press the **AWAY** button when finished selecting the zones to be isolated.
Two beeps will be heard.

The isolated zones will now continue to flash until the system has next been disarmed. The system is ready to be armed in AWAY Mode or STAY Mode 1.

STAY + **STAY** + **ZONE NUMBER** + **STAY**
 + **ZONE NUMBER** + **STAY** + **AWAY**

Code To Isolate

1. Press the **STAY** button.
2. Enter your **CODE**.
3. Press the **STAY** button.
Three beeps will be heard.
4. * Enter the **ZONE NUMBER** required to be isolated.
5. Press the **STAY** button.
6. * Enter the next **ZONE NUMBER** required to be isolated.
7. Press the **STAY** button.
8. Press the **AWAY** button when finished selecting the zones to be isolated.
Two beeps will be heard.

The isolated zones will now continue to flash until the system has next been disarmed. The system is ready to be armed in AWAY Mode or STAY Mode 1.

STAY + **CODE** + **STAY** + **ZONE NUMBER** + **STAY**
 + **ZONE NUMBER** + **STAY** + **AWAY**

* As each zone is isolated, the corresponding ZONE indicator will begin to flash. If a mistake is made, press the zone number that was incorrectly entered followed by the **STAY** button. This zone is now no longer isolated and the ZONE indicator will extinguish.

Fault Analysis Mode

Whenever a system fault occurs, the FAULT or MAINS indicator will flash and the codepad will beep once every minute.

If the MAINS indicator is flashing, this is because the AC mains has been disconnected. There is no need to determine this type of system fault. Pressing the **AWAY** button for two seconds will acknowledge the AC mains fault and will stop the codepad beeping once every minute.

How To Determine The Type Of System Fault

To determine the type of system fault that has occurred, enter "Fault Analysis Mode" by following the procedures below.

1. Hold down the **5** button until two beeps are heard.
The FAULT indicator should remain steady and the STAY and AWAY indicators should flash in unison with each other.

The type of system fault will be indicated by the ZONE indicators. Refer to the "Table 13: Fault Indicators" for the list of different system faults that may occur.

Zone Indicator	Fault Description
1	Low Battery
2	Date and Time
3	Sensor Watch
4	Horn Speaker Disconnected
5	Telephone Line Fault
6	E ² Fault
7	Zone 16 In Alarm - Partitioned Systems Only
8	Communications Failure

Table 13: Fault Indicators

2. To exit fault analysis mode, press the **AWAY** button. The STAY and AWAY indicators will extinguish and the FAULT indicator will remain illuminated.

How To Acknowledge The System Fault

1. To acknowledge the system fault, press the **AWAY** button. The FAULT indicator will remain illuminated and the codepad will cease its once a minute beep.

Fault Descriptions

1 Low Battery

A low battery fault will register when the battery supply voltage falls below 10.5 volts or when a dynamic battery test detects a low capacity battery. This fault will clear after a successful dynamic battery test. A dynamic battery test is performed every four hours once power has been connected to the control panel and also every time the system is armed in AWAY Mode, STAY Mode 1 and STAY Mode 2.

2 Date and Time

The date and time fault will register every time the control panel has been powered down. This fault will clear after the date and time has been programmed. Refer to "Setting The Date and Time" on page 61 for further information on setting the date and time.

3 Sensor Watch

A sensor watch fault will register because one of the detection devices has stopped working or has failed to detect movement for the programmed time period whilst the control panel is disarmed. The fault will clear after the registered zone has been unsealed and resealed again.

To find out which zone has registered the sensor watch fault, enter "Fault Analysis Mode" and hold down the **5** button to display the zone that has registered the sensor watch fault. Refer to "LOCATION 642 - 643" on page 146 for setting sensor watch time and "Zone Options" on page 111 for setting zones for sensor watch.

4 Horn Speaker Monitor

A horn speaker fault will register when the horn speaker becomes disconnected from the control panel. This fault will clear when the horn speaker is reconnected. Refer to "LOCATION 665" on page 156 to enable monitoring of the horn speaker.

5 Telephone Line Fault

A telephone line fault will register if the telephone line has been disconnected from the control panel for more than 40 seconds. This can only occur if the Telephone Line Fault Module (CC887) has been connected to the "Line Fault Module" socket on the printed circuit board and Option 1 in "LOCATION 673" on page 168 has been enabled. The fault will clear once the telephone line has been reconnected for more than 40 seconds.

6 E2 Fault

An E2 fault will register when the control panel detects an internal checksum error. The control panel will need to be powered down and defaulted to clear this fault.

7 Zone 16 In Alarm - Partitioned Systems Only

When the control panel has been partitioned, Zone 16 cannot be allocated to an area. When Zone 16 has triggered, the zone will register as a system fault on any "CP5 Area Addressable (CP500A)" codepad. If a "CP5 Master Partitioned (CP500P)" codepad has been used, the AUX indicator will illuminate.

8 Communication Failure

A communication failure fault will register if the control panel was unsuccessful in calling the receiving party after the control panel has exhausted its maximum number of attempts.

Note: If the control panel is not connected to the telephone line and no Primary Telephone Number or Secondary Telephone Numbers have been programmed, the control panel will still register this fault if Option 1 in "LOCATION 663" is enabled and a communication dialler hybrid is fitted.

AC Mains Failure

An AC mains failure will flash the MAINS indicator, sound the codepad buzzer once every minute and an "AC Fail" report will be transmitted to the monitoring station. This fault will clear after the AC mains has been reconnected. An "AC Restore" report will be transmitted once the AC mains has been restored for more than two minutes.

If you require the MAINS indicator to flash and an "AC Fail" report to be transmitted after one hour, enable Option 4 in "LOCATION 667" on page 158. If you wish only to transmit an "AC Fail" report and ignore the mains failure on the codepad (**New - Software Version 1.30 Onwards**), enable Option 4 in "LOCATION 668" on page 160.

System Functions

This Section Includes The Following:

- *Installer Code Functions*
- *Master Code Functions*
- *User Code Function*
- *Hold Down Functions*

System Functions

This section deals with the more advanced features that are required for testing and regular maintenance of the system. Features such as Installer Code Functions, Master Code Functions and Hold Down Functions are covered in this section.

Installer Code Functions

Installer Code Functions are designed to allow the installer to perform various system tests without the need to know a Master Code.

To enter the required installer code function, enter the **INSTALLER CODE** followed by the required **FUNCTION** digit and the **AWAY** button.

INSTALLER CODE

+

FUNCTION

+

AWAY

These functions can only be carried out when the system is in the disarmed state.

Function	Description
0	Reserved
1	Reserved
2	Set The Number Of Days Until The First Test Report
3	Event Memory Recall Mode
4	Walk Test Mode
5	Satellite Siren Service Mode - (EDMSAT)
6	Reserved
7	Turning Telephone Monitor Mode On and Off
8	Reserved
9	Reserved

Table 14: Installer Code Functions

0 Reserved

1 Reserved

2 Set The Number Of Days Until The First Test Report

If test reports are required "LOCATION 506 - 513" on page 125 will need to be programmed. After this has been carried out, test reports need to be initiated by setting the first test report. If the first test report is not set, the test report will be transmitted in the number of days as programmed in the repeat interval programmed in "LOCATION 506 - 513".

Note: Each time Installer's Programming Mode has been entered, you will need to reset the number of days until the first test report. Otherwise, the next test report will report as programmed in the repeat interval time.

How To Set The First Test Report

1. Enter the **INSTALLER CODE** followed by **2** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **No. OF DAYS** to wait (1-99) until the first test report.
3. Press the **AWAY** button when finished.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

INSTALLER CODE + **2** + **AWAY** + **No. OF DAYS** + **AWAY**

Note: Test reports will not be transmitted if the Subscriber ID Number is 0000. The number of days decrements by one at 2400 hours as set in "LOCATION 901 - 904" on page 152.

3 Event Memory Recall Mode

This feature allows you to playback the last forty events that have occurred to the system. The event memory recall mode reports all alarms and arming/disarming of the system in the AWAY Mode, STAY Mode 1 and STAY Mode 2. This function helps with trouble shooting system faults. The events are displayed via the codepad indicators.

How To Enter The Event Memory Recall Mode

1. Enter your **INSTALLER CODE** followed by **3** and the **AWAY** button.
Three beeps will be heard. The events will be played back via the ZONE indicators on the codepad in reverse chronological order.

INSTALLER CODE + **3** + **AWAY**

If the system has been partitioned, only the last ten events will be recorded for each of the four areas. You will be required to enter this mode at each of the four area codepads.

Example

If the events were as follows:

Event No	Description Of Event
1	System Armed In AWAY Mode
2	Alarm In Zone 3
3	Alarm In Zone 4
4	System Disarmed

Table 15: Event Memory Recall - Example Events

The event memory playback will report as follows:

Event No	Codepad Indicator	Event Description
4	All Indicators Off Except MAINS	System Disarmed
3	Zone 4 + AWAY Indicator Illuminates	Alarm In Zone 4
2	Zone 3 + AWAY Indicator Illuminates	Alarm In Zone 3
1	AWAY Indicator Illuminates	System Armed In AWAY Mode

Table 16: Event Memory Recall - Example Event Playback

Each event is indicated by a beep and an illuminated indicator. Resetting a 24 hour alarm in the disarmed state is indicated by one beep only. After the last event, three beeps will be heard to indicate the end of playback. The replay can be terminated at any time by pressing the **AWAY** button.

Note: If the control panel has been powered down, the memory of all events will be lost.

4 Walk Test Mode

Walk test mode allows you to test detection devices to ensure that they are functioning correctly. Before activating walk test mode, isolate any zones that are not required for testing. Refer to "Isolating Zones" on page 43 for further information.

How To Enter Walk Test Mode

1. Enter the **INSTALLER CODE** followed by **4** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash. The codepad will beep once every second while the system is in the walk test mode.
2. Unseal and seal the zones to be tested.
The codepad will sound a long beep while the horn speaker will sound a short beep every time a zone is sealed or unsealed.
3. Press the **AWAY** button to exit this mode.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

INSTALLER CODE + **4** + **AWAY**

5 Satellite Siren Service Mode

If an EDMSAT is connected to Output 1, this mode will allow you to perform service work on the satellite siren without triggering the siren or the strobe. The unit will return to its normal working state the next time the system is armed.

How To Enter Satellite Siren Service Mode

1. Enter your **INSTALLER CODE** followed by **5** and the **AWAY** button.
Three beeps will be heard.

INSTALLER CODE + **5** + **AWAY**

6 Reserved

7 Turning Telephone Monitor Mode On and Off

Telephone monitor mode allows the remote codepad to be used for a visual representation of data transmissions between the control panel and the base station receiver. The dialling sequence is also shown in this mode.

The codepad will beep once every two seconds while telephone monitor mode is turned on regardless of whether the system is in Installer's Programming Mode or normal operating mode. The first five indicators are used to display the progressive steps for a transmission to the base station receiver.

Zone LED	Dialling Event
1	Telephone Line Seized
2	Dialling Phone Number
3	Handshake Received
4	Data Is Being Transmitted
5	Kiss-Off Received
None	Telephone Line Released

Table 17: Telephone Monitor Mode Indications

How To Turn Telephone Monitor Mode On

1. Enter your **INSTALLER CODE** followed by **7** and the **AWAY** button.
Three beeps will be heard.

INSTALLER CODE + **7** + **AWAY**

How To Turn Telephone Monitor Mode Off

1. Enter your **INSTALLER CODE** followed by **7** and the **AWAY** button.
Two beeps will be heard.

INSTALLER CODE + **7** + **AWAY**

8 Reserved

9 Reserved

Master Code Functions

Master Code Functions are designed to allow those users that have the appropriate priority level to perform certain functions of a supervisory level.

Note: The default Master Code is **2580** and is known as User Code 1. It is possible for the system to have multiple Master Codes. Refer to "User Code Priority" on page 103 for more information.

MASTER CODE +
 FUNCTION +
 AWAY

These functions can only be carried out when the system is in the disarmed state.

Function	Description
0	Arming and Disarming All Areas At The Same Time - Partitioned Systems Only
1	Changing and Deleting User Codes
2	Changing Domestic Phone Numbers
3	Event Memory Recall Mode
4	Walk Test Mode
5	Turning Outputs On and Off
6	Setting The Date and Time
7	Turning Day Alarm On and Off (Software Version 1.10 Only)
8	Setting Zones For STAY Mode 2
9	Reserved

Table 18: Master Code Functions

0 Arming and Disarming All Areas At The Same Time- Partitioned Systems Only

This option allows the user to arm and disarm all areas at the same time that the code belongs to.

All areas that the code belongs to will arm or disarm to follow the state of the area that the code was entered from (ie. If you disarm an area, all other areas will disarm or if you arm an area, all other areas will arm as well).

This allows the user to ensure that all areas will be armed by pressing one extra button rather than entering a user code at each area codepad. For this feature to function, enable Option 1 in "LOCATION 670" on page 163.

This process can be carried out from either the "CP5 Area Addressable (CP500A)" codepads or the "CP5 Master Partitioned (CP500P)" codepads.

How To Arm Or Disarm All Areas That The Code Belongs To At The Same Time

1. Enter your MASTER CODE followed by **0** and the AWAY button.
Two beeps will be heard.

MASTER CODE +
 0 +
 AWAY

1 Changing and Deleting User Codes

This function allows a Master Code holder to add/change or delete any of the system user codes including Auxiliary Codes 1 and 2. The auxiliary codes are treated as user codes 33 and 34.

How To Add Or Change A User Code

1. Enter your **MASTER CODE** followed by **1** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **USER NUMBER** (1-34) that you wish to alter followed by the **AWAY** button.
Two beeps will be heard and the corresponding ZONE indicator will illuminate. Refer to "Table 19: Zone Indicators Showing Relative User Numbers" on page 56 .
3. Enter the digits required for the **NEW CODE** followed by the **AWAY** button.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

If you wish to change any further user codes, repeat this procedure as many times as required.

MASTER CODE + **1** + **AWAY**
 + **USER NUMBER** + **AWAY** + **NEW CODE** + **AWAY**

Note: When adding or changing user codes, this function will automatically terminate if a button is not pressed within sixty seconds. Pressing the **AWAY** button will also terminate the session at anytime. One long beep indicates the code entered already exists, an incorrect user number was selected, or the area allocation of the user code is incorrect if the system has been partitioned.

How To Delete A User Code (Software Version 1.10 Only)

1. Enter your **MASTER CODE** followed by **1** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **USER NUMBER** (1-34) that you wish to delete followed by the **AWAY** button.
Two beeps will be heard and the corresponding ZONE indicator will illuminate. Refer to "Table 19: Zone Indicators Showing Relative User Numbers" on page 56.
3. Press the **AWAY** button to delete the user code.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

If you wish to erase any further user codes, repeat this procedure as many times as required.

MASTER CODE + **1** + **AWAY**
 + **USER NUMBER** + **AWAY** + **AWAY**

How To Delete A User Code (Software Version 1.20 Onwards)

1. Enter your **MASTER CODE** followed by **1** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the **USER NUMBER** (1-34) that you wish to delete followed by the **AWAY** button.
Two beeps will be heard and the corresponding ZONE indicator will illuminate. Refer to "Table 19: Zone Indicators Showing Relative User Numbers" on page 56.
3. Press the **STAY** button to delete the user code.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

If you wish to erase any further user codes, repeat this procedure as many times as required.

MASTER CODE + **1** + **AWAY**
 + **USER NUMBER** + **AWAY** + **STAY**

Note: When deleting user codes, this function will automatically terminate if a button is not pressed within sixty seconds. Pressing the **AWAY** button will also terminate the session at anytime. One long beep indicates the code entered already exists, an incorrect user number was selected, or the area allocation of the user code is incorrect if the system has been partitioned.

Auxiliary Codes

Auxiliary Codes 1 and 2 are treated as user codes 33 and 34. To add or change either of these two codes, refer to "How To Add Or Change A User Code" on page 54. To delete either of these two codes, refer to "How To Delete A User Code" on page 55.

Zone Indicators Showing Relative User Numbers

User No	Zone 1 Indicator	Zone 2 Indicator	Zone 3 Indicator	Zone 4 Indicator	Zone 5 Indicator	Zone 6 Indicator	Zone 7 Indicator	Zone 8 Indicator	MAINS Indicator	FAULT Indicator
1	✓									
2		✓								
3			✓							
4				✓						
5					✓					
6						✓				
7							✓			
8								✓		
9	✓							✓		
10									✓	
11	✓								✓	
12		✓							✓	
13			✓						✓	
14				✓					✓	
15					✓				✓	
16						✓			✓	
17							✓		✓	
18								✓	✓	
19	✓							✓	✓	
20										✓
21	✓									✓
22		✓								✓
23			✓							✓
24				✓						✓
25					✓					✓
26						✓				✓
27							✓			✓
28								✓		✓
29	✓							✓		✓
30									✓	✓
31	✓								✓	✓
32		✓							✓	✓
33			✓						✓	✓
34				✓					✓	✓

Table 19: Zone Indicators Showing Relative User Numbers

2 Changing Domestic Phone Numbers

This option allows a Master Code holder to view and program the required telephone numbers that the system will call in the event of an alarm. For a more detailed description, refer to "Domestic Reporting" on page 82 for further information.

How To Change Domestic Phone Numbers

1. Enter your **MASTER CODE** followed by **2** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.

If there are telephone numbers programmed, they will be displayed one digit at a time via the zone indicators on the keypad. Refer to "Table 20: Indicators For Changing Phone Numbers" on page 57 for the indicators and their meanings.

If there are no telephone numbers programmed, a further two beeps will be heard after entering this mode. These two beeps are normally heard after the last digit of the last phone number has been displayed.

2. Enter the required phone number (Each number will be displayed as it entered).
3. After each phone number, press the **STAY** button before entering the next phone number. This separates the end of the first phone number and the beginning of the next.
4. After the last phone number has been entered, press the **AWAY** button.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **2** + **AWAY** + **PHONE No. 1** + **STAY**
 + **PHONE No. 2** + **STAY** + **PHONE No. 3** + **AWAY**

How To Disable Domestic Dialling

If at any time the user wishes to cancel domestic dialling for any reason (eg. They are moving house and they do not wish the system to continue calling their work place or mobile phone etc), they may enter the **MASTER CODE** followed by **2**, the **AWAY** button, the **STAY** button and the **AWAY** button to disable domestic dialling.

MASTER CODE + **2** + **AWAY** + **STAY** + **AWAY**

Indicators For Changing Phone Numbers

Digit	Zone 1 Indicator	Zone 2 Indicator	Zone 3 Indicator	Zone 4 Indicator	Zone 5 Indicator	Zone 6 Indicator	Zone 7 Indicator	Zone 8 Indicator	MAINS Indicator
0									✓
1	✓								
2		✓							
3			✓						
4				✓					
5					✓				
6						✓			
7							✓		
8								✓	
9	✓							✓	
Number Separator				✓					✓

Table 20: Indicators For Changing Phone Numbers

3 Event Memory Recall Mode

This feature allows you to playback the last forty events that have occurred to the system. The event memory recall mode reports all alarms and arming/disarming of the system in the STAY or AWAY Modes. This function helps with trouble shooting system faults. The events are displayed via the codepad indicators.

How To Enter The Event Memory Recall Mode

1. Enter your **MASTER CODE** followed by **3** and the **AWAY** button.
Three beeps will be heard.

The events will be played back via the ZONE indicators on the codepad in reverse chronological order.

MASTER CODE + **3** + **AWAY**

If the system has been partitioned, only the last ten events will be recorded for each of the four areas. You will be required to enter this mode at each of the four areas.

Example

If the events were as follows:

Event No	Description Of Event
1	System Armed In AWAY Mode
2	Alarm In Zone 3
3	Alarm In Zone 4
4	System Disarmed

Table 21: Event Memory Recall - Example Events

The event memory playback will report as follows:

Event No	Codepad Indicator	Event Description
4	All Indicators Off Except MAINS	System Disarmed
3	Zone 4 + AWAY Indicator Illuminates	Alarm In Zone 4
2	Zone 3 + AWAY Indicator Illuminates	Alarm In Zone 3
1	AWAY Indicator Illuminates	System Armed In AWAY Mode

Table 22: Event Memory Recall - Example Event Playback

Each event is indicated by a beep and an illuminated indicator. Resetting a 24 hour alarm in the disarmed state is indicated by one beep only. After the last event, three beeps will be heard to indicate the end of playback. The replay can be terminated at any time by pressing the **AWAY** button.

Note: If the control panel has been powered down, the memory of all events will be lost.

4 Walk Test Mode

Walk test mode allows you to test detection devices to ensure that they are functioning correctly. This should be performed on a weekly basis.

Before activating walk test mode, isolate any zones that are not required for testing. Refer to "Isolating Zones" on page 43 for more information on isolating zones.

How To Enter Walk Test Mode

1. Enter your **MASTER CODE** followed by **4** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash. The codepad will beep once every second while the system is in the walk test mode.
2. Unseal and seal the zones to be tested. The codepad will sound a long beep and the horn speaker will sound a short beep every time a zone is sealed or unsealed.
3. Press the **AWAY** button to exit this mode.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **4** + **AWAY**

5 Turning Outputs On and Off

If an output has been programmed for remote operation via the telephone or to automatically turn on at a particular time, it can be turned on and off using this Master Code Function via the remote codepad, over the telephone via the DTMF Command Module or the Alarm Link Software.

How To Turn An Output ON From The Remote Codepad

1. Enter your **MASTER CODE** followed by **5** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the required **OUTPUT No.** followed by the **AWAY** button.
Three beeps will be heard and the output will now turn on. Repeat step 2 if more than one output is required to be turned on.
3. Press the **AWAY** button again to exit this mode.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **5** + **AWAY** + **OUTPUT No.** + **AWAY** + **AWAY**

Output Number 1 = Output Event Type "2,8" (Refer to page 135)
 Output Number 2 = Output Event Type "2,9" (Refer to page 135)
 Output Number 3 = Output Event Type "2,10" (Refer to page 135)
 Output Number 4 = Output Event Type "2,11" (Refer to page 135)
 Output Number 5 = Output Event Type "1,1" (Refer to page 132)

How To Turn An Output OFF From The Remote Codepad

1. Enter your **MASTER CODE** followed by **5** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the required **OUTPUT No.** followed by the **STAY** button.
Two beeps will be heard and the output will turn off. Repeat step 2 if more than one output is required to be turned off.
3. Press the **AWAY** button to exit this mode.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **5** + **AWAY** + **OUTPUT No.** + **STAY** + **AWAY**

Output Number 1 = Output Event Type "2,8" (Refer to page 135)
 Output Number 2 = Output Event Type "2,9" (Refer to page 135)
 Output Number 3 = Output Event Type "2,10" (Refer to page 135)
 Output Number 4 = Output Event Type "2,11" (Refer to page 135)
 Output Number 5 = Output Event Type "1,1" (Refer to page 132)

6 Setting The Date and Time

This function needs to be used when the date and time requires to be changed or the system has been powered down.

How To Set The New Date and Time

1. Enter your **MASTER CODE** followed by **6** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the day, month, year, hour and minute using the (DD, MM, YY, HH, MM) format.
3. Press the **AWAY** button when finished.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **6** + **AWAY**

Example

If the date and time needs to be set for the 1st January 1996 at 10:00 PM, program the date and time as follows;

MASTER CODE + **6** + **AWAY**
+ **0** + **1** + **0** + **1** + **9** + **6** + **2** + **2** + **0** + **0** + **AWAY**

7 Turning Day Alarm On and Off (Software Version 1.10 Only)

Day alarm enables a combination of zones to be monitored while the system is in the disarmed state. Indications are available via any of the programmable outputs including the codepad buzzer.

How To Turn Day Alarm ON

1. Enter your **MASTER CODE** followed by **7** and the **AWAY** button.
Three beeps will be heard.

How To Turn Day Alarm OFF

1. Enter your **MASTER CODE** followed by **7** and the **AWAY** button.
Two beeps will be heard.

MASTER CODE + **7** + **AWAY**

8 *Setting STAY Mode 2 Zones*

This function allows the Master Code holder to select which zones are to be automatically isolated when the system is armed in STAY Mode 2. Every time the system is armed in STAY Mode 2, the zones programmed using this function will be automatically isolated until the system has been powered down or the Master Code holder changes the zones numbers required to be automatically isolated in STAY Mode 2.

This function will not operate when the system has been partitioned.

How To Set STAY Mode 2 Zones

1. Enter your **MASTER CODE** followed by **8** and the **AWAY** button.
Three beeps will be heard and the STAY indicator will begin to flash.
2. Enter the **ZONE NUMBER** that you wish to automatically isolate followed by the **STAY** button. The ZONE indicator will now begin to flash.
3. If more than one zone is required to be automatically isolated, repeat step 2 until all zones required have been set.
4. Press the **AWAY** button to exit this function.
Two beeps will be heard and the STAY indicator will extinguish.

MASTER CODE + **8** + **AWAY**
 + **ZONE NUMBER** + **STAY** + **ZONE NUMBER** + **STAY** + **AWAY**

9 *Reserved*

User Code Functions - Partitioned Systems Only



Function	Description
0	Arming and Disarming All Areas At The Same Time - Partitioned Systems Only

Table 23: User Code Functions

0 Arming and Disarming All Areas At The Same Time - Partitioned Systems Only

This option allows the user to arm and disarm all areas that the code belong to at the same time.

 
All areas that the code belongs to will arm or disarm to follow the state of the area that the code was entered from (ie. If you disarm an area, all other areas will disarm or if you arm an area, all other areas will arm as well).

This allows the user to ensure that all areas will be armed by pressing one extra button rather than entering a user code at each area codepad. For this feature to function, enable Option 1 in "LOCATION 670" on page 163.

This process can be carried out from either the "CP5 Area Addressable (CP500A)" codepads or the "CP5 Master Partitioned (CP500P)" codepads.

How To Arm Or Disarm All Areas That The Code Belongs To At The Same Time


1. Enter your **USER CODE** followed by **0** and the **AWAY** button.
Two beeps will be heard.





Hold Down Functions

Hold down function have been incorporated to allow easy activation of specific operations. When a button is held down for two seconds, two beeps will be heard and a particular function will operate. The functions available are listed below.


Arm The System In AWAY Mode


Holding the  button down until two beeps are heard will arm the system in the AWAY Mode. Refer to Option 2 in "LOCATION 670" on page 163 for setting this feature.

If the system has been partitioned, holding the  button down until two beeps are heard on the "CP5 Area Addressable (CP500A)" codepad will only arm the area that the codepad is allocated to in AWAY Mode.


This hold down function does not operate on the "CP5 Master Partitioned (CP500P)" codepad as pressing the  button will toggle you to the next area display.

* Arm The System In STAY Mode 1


Holding the  button down until two beeps are heard will arm the system in STAY Mode 1. Option 2 in "LOCATION 670" on page 163 will need to be enabled for this function to operate.


If there has not been an alarm during the armed cycle, holding the  button down a second time will disarm the system from STAY Mode 1. Option 4 in "LOCATION 670" on page 163 will need to be enabled for this hold down function to operate.

If an alarm has occurred or entry warning has been triggered, a valid user code will need to be used to disarm the system.

If the system has been partitioned, holding down the  button on the "CP5 Area Addressable (CP500A)" codepad will only arm the area that the codepad belongs to in STAY Mode 1. This function does not operate on the "CP5 Master Partitioned (CP500P)" codepad.

○ Arm The System In STAY Mode 2


Holding the  button down until two beeps are heard will arm the system in STAY Mode 2. Option 2 in "LOCATION 670" on page 163 will need to be enabled for this function to operate.

If there has not been an alarm during the armed cycle, holding the  button down again until two beeps are heard will disarm the system. Option 4 in "LOCATION 670" on page 163 will need to be enabled for this hold down function to operate.

If an alarm has occurred or entry warning has been triggered, a valid user code will need to be used to disarm the system.

STAY Mode 2 is not available when the system has been partitioned, therefore this hold down function does not operate when the system has been partitioned.

1 Horn Speaker Test

Holding the  button down until two beeps are heard will sound the horn speaker for a two second burst. No other sounding device will sound in this mode. If An EDMSAT (SS914) has been connected to the control panel, this function will test the horn speaker for a two second burst followed by the strobe connected to the satellite siren.

2 Bell Test

Holding the **2** button down until two beeps are heard will sound the speakers for a two second burst. No other sounding device will sound in this mode.

If an EDMSAT (SS914) has been connected to the control panel, this function will test the horn speaker for a two second burst followed by the strobe connected to the satellite siren.

3 Strobe Test

Holding the **3** button down will operate the strobe. No other device will operate in this mode.

If an EDMSAT (SS914) has been connected to the control panel, this function will also test the strobe on the satellite siren.

How To Turn Strobe Test ON

1. Hold down the **3** button until three beeps are heard.
The strobe will begin to flash.

How To Turn Strobe Test OFF

1. Hold down the **3** button until two beeps are heard.
The strobe will stop flashing.

4 Turning Day Alarm On and Off (New - Software Version 1.20 Onwards)

Holding the **4** button down will turn day alarm on or off.

How To Turn Day Alarm ON

1. Hold down the **4** button until three beeps are heard.
Day alarm has now been turned on.

How To Turn Day Alarm OFF

1. Hold down the **4** button until two beeps are heard.
Day alarm has now been turned off.

If the STAY indicator is required to indicate the status of day alarm operation (enabled/disabled), refer to "LOCATION 669" on page 162 for further information.

5 *Fault Analysis Mode*

There are various system faults that can be detected by the control panel. When any of these are present, the FAULT indicator will begin to flash and the codepad will beep once every minute. Refer to "Fault Descriptions" on page 45 for a more detailed description on each fault type.

How To Determine The Type Of Fault

1. Hold the **5** button down until two beeps are heard.
The STAY and AWAY indicators will begin to flash in unison with the FAULT indicator. One or more ZONE indicators (1-8) will illuminate to indicate the type of fault.

How To Exit Fault Analysis Mode

1. To exit fault analysis mode, press the **AWAY** button.
The STAY and AWAY indicators will extinguish.

<i>Zone Indicator</i>	<i>Fault Description</i>
1	Low Battery
2	Date and Time
3	Sensor Watch
4	Horn Speaker Disconnected
5	Telephone Line Fault
6	E ² Fault
7	Zone 16 In Alarm - Partitioned Systems Only
8	Communications Failure

Table 24: Fault Indicators

6 *Initiate A Modem Call*

Holding the **6** button down until two beeps are heard will force the control panel to dial the callback telephone number programmed in "LOCATION 032 - 047" on page 97 in an attempt to connect to the remote computer.

The remote computer will be required to be running the Alarm Link Software (CC816) and will need to be set to "Waiting For An Incoming Call". If no callback telephone number has been programmed, entering this function will have no effect.

7 *Reset Latching Outputs*

Holding the **7** button down until two beeps are heard will reset any programmable output that has been programmed to remain on once it has been activated.

The output will need to be programmed with a latching polarity. Refer to "Output Polarity" on page 138 for further information.

8 Codepad ID and Beeper Tone Change

Holding the **8** button down for two seconds performs one of two functions.

The first function is to indicate the area that the codepad belongs to when the system has been partitioned.

The second function changes the tone of the codepad buzzer. There are fifty different tones to choose from between 1500 Hz and 5000 Hz and they are specific to each codepad. In a multiple codepad installation, each codepad can have a different tone.

How To Determine The Area That The Codepad Belongs To

1. Hold the **8** button down until two beeps are heard.
A ZONE indicator will illuminate. If no ZONE indicator illuminates, the codepad cannot be used when the system has been partitioned.

Z1 = Area One Codepad.

Z2 = Area Two Codepad.

Z3 = Area Three Codepad.

Z4 = Area Four Codepad.

Z7 = "CP5 Master Partitioned (CP500P)" codepad.

2. Press the **AWAY** button to exit this mode.

How To Change The Tone Of The Buzzer

1. To change the tone of the codepad buzzer, hold the **8** button down continuously.
The tone of the buzzer will start to increase in pitch.
2. If the codepad is a "CP5 Area Addressable (CP500A)" codepad, or a "CP5 Master Partitioned (CP500P)" codepad, two beeps will be heard indicating the area that the codepad belongs to as in above when you determine which area that the codepad belongs to when the system has been partitioned. Shortly after hearing the two beeps, the tone of the buzzer will start to increase in pitch. (Ranges from 1500 Hz - 5000 Hz).
3. Release the **8** button when the desired tone has been reached.
4. Press the **AWAY** button to exit this mode.

9 Initiate A Test Report

Holding the **9** button down until two beeps are heard will transmit a "Test" report which is used to test the dialling and reporting capabilities of the system without causing the sirens to sound.

A "Test" report will not be transmitted if the Subscriber ID Number is 0000. This feature is only applicable if the control panel has a dialler hybrid fitted and enabled in "LOCATION 663" on page 154.

Remote Operations

This Section Includes The Following:

- *Remote Arming Via The Telephone*
- *Operating The Control Panel Using The DTMF Command Module*
- *Upload/Download Via Alarm Link Software*

Remote Operations

This section covers all aspects of operating and programming the *Solution- 16* control panel other than by a remote codepad or the hand held programmer. There are a number of methods that can be used via the telephone line to gain access to the control panel. These methods will prove to be time saving and easy to perform.

Remote Arming Via The Telephone

This feature allows you to arm your system from any remote location via the telephone line. For obvious security reasons, the control panel cannot be disarmed using this method. To make use of this feature, you will require the Phone Controller (CC911).

How To Remotely Arm Your System Via The Telephone

1. Call the telephone number that your control panel has been connected to.
2. When the control panel answers the incoming call, a short jingle will be heard. Hold the phone controller to the mouth piece of the telephone and press the button on the side of the unit for 3 seconds.
3. After releasing the button on the phone controller, two beeps will be heard to indicate that the system has armed in the AWAY Mode. If the control panel has been partitioned, ALL areas will arm in AWAY Mode.
4. Hang up the telephone and the system will remain armed.

If you hear a number of strange sounding tones when the control panel answers the incoming call, this means that the system has been programmed for remote programming functions. Simply wait for a pause in the tones and follow the steps above to remotely arm the system.

If the control panel does not answer the call, this means that the system may already be armed or remote functions have not been enabled. Refer to "LOCATION 663" on page 154 to enable remote arming via the telephone.

Note: Where both remote arming and Upload/Download have been selected, the control panel will answer the call expecting the remote computer. This is easily noticed as the modem negotiating tones will be heard rather than the remote arming jingle.

Operating The Control Panel Using The DTMF Command Module

The DTMF Command Module (CC886) will allow you to operate the control panel remotely via the telephone line. Once a communications link has been established with the control panel, you can perform any system functions as you would using the codepad on a touch tone telephone. Master Code Functions, User Code Functions, Installer Code Functions and the ability to enter Installer's Programming Mode to remotely program the control panel are available options that may be performed via the telephone. Refer to "LOCATION 671" on page 164 to enable the options required to be used when using the DTMF Command Module.

The DTMF Command Module also allows domestic dialling to be acknowledged by pressing the **#** button on your telephone (New - Software Version 1.32 Onwards).

Operation - Software From Version 1.10

How To Establish A Communication Link With Your Control Panel (Non Partitioned System)

1. Dial the telephone number that the control panel has been connected to. When the control panel answers your call, a short jingle will be heard.
2. After the jingle, press the **#** button on your telephone during the pause. You will then hear a second jingle. You have now established a communication link.

Operation - Software From Version 1.20

How To Establish A Communication Link With Your Control Panel (Non Partitioned System)

1. Dial the telephone number that the control panel has been connected to. When the control panel answers your call, a short jingle will be heard.
2. After the jingle, press the **O** button on your telephone during the pause. You will then hear a second jingle. You have now established a communication link.

Note: If your control panel has been partitioned, pressing **O** to establish a communication link will not work.

To Establish A Communication Link With Your Control Panel (Partitioned System)

1. Dial the telephone number that the control panel has been connected to. When the control panel answers your call, you will hear a short jingle.
2. After the jingle, press the corresponding area number that you wish to establish a communication link with (ie. 1, 2, 3 or 4). You will now hear a second jingle and have established a communication link.

Once a communication link has been established with a partitioned control panel, you cannot toggle from area to area like you can on a "CP5 Master Partitioned (CP500P)" codepad. To access another area, you will need to terminate the communication link, redial the control panel and then select the required area.

You can arm and disarm all areas at the same time when linked to a partitioned control panel provided that the user code is valid for all areas and that Option 1 - "Enable User Code + 0 + AWAY Function To Arm/Disarm All Areas" has been enabled in "LOCATION 670" on page 163.

Once connected, any normal system function can be performed by simply entering the numbers on the telephone as you would from a codepad. HOLD DOWN FUNCTIONS however will not work.

While you are connected to the control panel, if a button is not pressed within a sixty second period, you will hear a jingle of decreasing pitch which will indicate that the link has been terminated.

To Terminate The Communication Link With Your Control Panel

1. Press the **#** button on the telephone twice to terminate the communication link. You will hear a short jingle of decreasing pitch to indicate termination of the communication link.

When Installer's Programming Mode has been entered, pressing the **#** button twice on the telephone will not terminate the call. You will need to exit Installer's Programming Mode by entering command **960** followed by the **#** button before pressing the **#** button twice to terminate the communication link.

Upload/Download Via Alarm Link Software

The *Solution- 16* control panel can be remotely programmed or controlled via an IBM or compatible personal computer via the Alarm Link Software (CC816). This facility will allow you to make alterations to your customers control panel without the need to leave your office, thus improving customer service and saving you time and money. For country locations where a control panel may be situated hundreds of kilometres from your office, the Upload/Download feature is invaluable.

When selecting the control panel type during the setup of a new customer database in the Alarm Link Software, refer to the table below to select the software version number that corresponds to the control panel type required.

<i>Control Panel's Software Version</i>	<i>Select Panel Type</i>
<i>Solution- 16 1.10</i>	SOL16_11
<i>Solution- 16 1.20</i>	SOL16_12
<i>Solution- 16 1.3x</i>	SOL16_13
<i>Solution- 16 1.40</i>	SOL16_14

Table 25: Alarm Link Panel Forms

After selecting the correct panel type when adding a new customer in the Alarm Link Software, the Subscriber ID Number and the Installer Code will need to match that of the control panel for synchronisation when making connection to the control panel. If these two locations do not match that of the control panel, the computer and the control panel will not synchronise.

Direct Connect

The direct connect feature has been incorporated giving the installer a simple method for programming the *Solution- 16* control panel at the office. There is no need for telephone lines or modems which makes programming of the control panel completed easily in minutes. It can also be used on site visits where the installer is using a portable personal computer.

All that is required is the Direct Link Cable (CC808) connected to the relevant serial port on your IBM or compatible computer and the other end to the "Auxiliary Module" socket on the control panel.

When using the direct connect method of connecting to the control panel, Option 4 in "LOCATION 663" on page 154 does not require to be enabled. The direct connect method of connecting to the control panel will operate regardless of this option set.

Note: If the *Solution- 16* has an optional Voice Module connected and enabled, the direct connect method of connecting to the control panel will not function unless Option 15 in "LOCATION 050" has been disabled and the Voice Module disabled prior to the connection being made.

Remote Connect

The remote connect feature allows you to establish a connection through the telephone network from your IBM or compatible computer to the *Solution- 16* control panel anywhere in the country where a telephone line is present. The advantages of this are very obvious and having this facility will allow you to offer faster service to your clients.

Remote Connect With Customer Control

If you wish to configure the control panel so that a remote connection can only be established when the client initiates it through the remote codepad, you will need to program the following information.

"LOCATION 032 - 047" will need to have the "Callback Telephone Number" programmed and Option 4 in "LOCATION 663" on page 154 will need to be disabled. The control panel has now been set so that the client has control for when a remote connection can be established.

To cause the control panel to dial the remote computer to establish a link, hold down the **6** button to two seconds on the remote codepad.

Remote Connect Without Callback Verification

Remote connect without callback verification can be handy where you have a need to perform Upload/Download functions from multiple locations. It should be noted that by using this feature you are reducing the security of your control panel.

"LOCATION 032 - 047" should be cleared and Option 4 in "LOCATION 663" on page 154 will need to be enabled. The control panel will now allow a connection of the first call without calling the remote computer back to make contact.

Remote Connect With Callback Verification

Remote connect with callback verification offers the highest degree of data security by incorporating a two level security check.

The first is the Installer Code combined with the Subscriber ID Number needs to match that of the control panel. Secondly, the control panel will callback the programmed callback phone number to establish the valid connection. The "Callback Telephone Number" is the phone line that the modem and computer has been connected to.

"LOCATION 032 - 047" must be programmed with the "Callback Telephone Number" and Option 4 in "LOCATION 663" on page 154 will need to be enabled.

Reporting Formats

This Section Includes The Following:

- *Contact ID Format*
- *Event Codes*
- *Point ID Codes*
- *General Reporting Formats*
- *Securitel*
- *Securitel and Partitioning*
- *Domestic Reporting*
- *Domestic Dialling Function*
- *Synthesised Voice Reporting*
- *Synthesised Voice Dialling Function*
- *Operation Of The Voice Module*
- *Basic Pager Format Reporting*
- *PET Alpha Pager Reporting*
- *PET Alpha Pager Messages*
- *Logging System Events Via Serial Printer*

Reporting Formats

When making use of the control panel's dialling and communication features, there are a number of transmission formats available. Refer to "LOCATION 050" on page 98 to set the required transmission format. The *Solution- 16* control panel comes factory default to report in the Contact ID Format.

Contact ID Format

This format can identify hundreds of protection zones by their unique code and provides a single digit event qualifier and a three digit event code which quickly identifies the condition being reported.

<i>Subscriber ID Number</i>	<i>Qualifier</i>	<i>Event Code</i>	<i>Group Number</i>	<i>Point ID Number</i>
SSSS	Q	XYZ	GG	CCC
Four Digit Subscriber ID Number	Event Qualifier, Which Gives Specific Event Information. 1 = New Event Or Opening 3 = New Restore Or Closing	Event Code (Made Up Of 3 Hex Digits)	Group Number (Made Up Of 2 Hex Digits)	Point ID Number (Made Up Of 3 Hex Digits)

Table 26: Contact ID Format Breakdown

In general, Contact ID reporting format is very simple as most of the Event Codes and Point ID Codes have been predefined. The Event Code is programmable whereas the Point ID Codes are fixed. The base station software usually only has the ability to identify a zone going into alarm by its Point ID Code and usually pays little attention to the Event Code.

Refer to "Table 28: Point ID Codes" on page 78 for further information on the *Solution- 16* Point ID Codes and "Table 27: Contact ID Event Codes" on page 77 for the list of Event Codes that are supported by the control panel.

Event Codes

Event	Description	Event	Description	Event	Description
Medical Alarms		24 Hour Non Burglary		Peripheral Troubles	
100	Medical	150	25 Hour Non Burg	330	System Peripheral
101	Pendant Transmitter	151	Gas Detected	331	Polling Loop Open
102	Fail To Report In	152	Refrigeration	332	Polling Loop Short
Fire Alarms		153	Loss Of Heat	333	Exp Module Failure
110	Fire Alarm	154	Water Leakage	334	Fail To Communicate
111	Smoke	155	Foil Break	335	Lcl Printer Paper Out
112	Combustion	156	Day Trouble	336	Local Printer Failure
113	Water Flow	157	Bottled Gas Low	Comms Trouble	
114	Heat	158	High Temperature	350	Communication
115	Pull Station	159	Low Temperature	351	Telecom Line 1 Fail
116	Duct	161	Loss Of Air Flow	352	Telecom Line 2 Fail
117	Flame	Fire Supervisory		353	Long Radio TX Fail
118	Near Alarm	200	Fire Supervisory	354	Fail To Communicate
Panic Alarms		201	Low Water Pressure	355	Loss Of Radio Super
120	Panic Alarm	202	Low CO2	356	Loss Of Central Poll'g
121	Duress Alarm	203	Gate Valve Sensor	Protection Loop Trouble	
122	Silent Alarm	204	Low Water Level	370	Protection Loop
123	Audible Alarm	205	Pump Activated	371	Protection Loop Open
Burglary Alarms		206	Pump Failure	372	Protection Loop Short
130	Burglary	System Troubles		373	Fire Trouble
131	Perimeter	300	System Trouble	Sensor Troubles	
132	Interior	301	AC Loss	380	Sensor Trouble
133	24 Hour	302	Low System Battery	381	Loss Of Super - RF
134	Entry/Exit	303	RAM Checksum Bad	382	Loss Of Super - RPM
135	Day/Night	304	ROM Checksum Bad	383	Sensor Tamper
136	Outdoor	305	System Reset	384	RF XMTR Low Battery
137	Tamper	306	Panel Program Altered	Access Control	
138	Near Alarm	307	Self Test Failure	421	Access Denied
General Alarms		308	System Shutdown	Zone Bypass	
140	General Alarm	309	Battery Test Failure	570	Zone Bypass
141	Polling Loop Open	310	Ground Fault		
142	Polling Loop Short	Sounder Relay Troubles			
143	Exp'n Module Fail	320	Sounder/Relay		
144	Sensor Tamper	321	Bell 1		
145	Exp'n Module Tamper	322	Bell 2		
		323	Alarm Relay		
		324	Trouble Relay		
		325	Reversing	602	Test

Table 27: Contact ID Event Codes

Point ID Codes

Point ID	Event Description	Event Code	Explanation	Page
Zone Specific	Burglary Zones 1-7 and 9-16	130	Burglary	108
Zone Specific	Burglary Zone 8 (24 Hour)	133	24 Hour Burglary	108
User Specific	Open/Close	401 Fixed	Opening - User ## Closing - User ##	124
User Specific	Open/Close (Partitioned)	402 Fixed	Opening - Group - User ## Closing - Group - User ##	177
030	AC Mains Fail	301	AC Power	122
031	Low Battery	309	Battery Test Failure	123
040	Duress Alarm	121	Codepad Duress Alarm	120
041	Panic Alarm	120	Codepad Panic Alarm	121
042	Access Denied	421	Code Retry Exceeded	122
043	Program Change	306	Programming Information Changed	123
044	Test Report	602 Fixed	Test Report	125
045	Medical Alarm	100 Fixed	Codepad Medical Alarm (New - 1.37)	121
046	Fire Alarm	110 Fixed	Codepad Fire Alarm (New - 1.37)	121
Zone Specific	Sensor Watch	307 Fixed	Sensor Tamper (1.10 Only)	124
Zone Specific	Sensor Watch	307 Fixed	Sensor Tamper (1.20 Onwards)	124
Zone Specific	Zone Trouble	380 Fixed	Zone Unsealed After End Of Exit Time	119
Zone Specific	Zone Bypass	570 Fixed	Zone Manually Isolated	118

Table 28: Point ID Codes

This table shows the different Point ID Codes and Event Codes that are transmitted to the base station receiver when using Contact ID Reporting Format. Some event codes are fixed while others are user definable. The event codes that are fixed will always transmit the same code as there are no programming locations made available to alter these. The other event codes may be changed when required.

Example

If zone 8 is being used as a 24 hour medical alarm rather than a 24 hour burglary, its event code may be changed from Event Code 133 (24 Hour Burglary) and instead programmed as Event Type 100 (Medical).

Note: Before changing any event codes, consult your base station supervisor to ensure that you select the correct code.

General Reporting Formats

The following formats may be designated to report in either Standard or Extended Formats. In all cases, the standard format will report to the central monitoring station a Subscriber ID Number followed by an Alarm, Trouble, Restore or Open/Close codes.

The Expanded 3+1 and Expanded 4+1 Formats will report a Subscriber ID Number followed by an Expansion Code, followed by a second line where the Expansion Code is repeated as the Subscriber ID Number followed by the Reporting Channel (Or User ID) relevant to that report.

If 4+2 Format is selected then no second line is transmitted and the reporting channel number is transmitted directly after the expansion code.

<i>Event</i>	<i>3+1/4+1 Universal</i>	<i>3+1/4+1 Expanded</i>	<i>4+2</i>
Alarm	SSS (S) A	SSS (S) A AAA (A) C _H	SSSS AC _H
Trouble	SSS (S) T	SSS (S) T TTT (T) C _H	SSSS TC _H
Bypass	SSS (S) B	SSS (S) B BBB (B) C _H	SSSS BC _H
AC Fail	SSS (S) E	SSS (S) E EEE (E) A _C	SSSS EA _C
Low Battery	SSS (S) L	SSS (S) L LLL (L) L _B	SSSS LL _B
Open	SSS (S) O	SSS (S) O OOO (O) U	SSSS OU
Close	SSS (S) C	SSS (S) C CCC (C) U	SSSS CU
Test	SSS (S) T _E	SSS (S) T _E	SSSS T _E O
Program Altered	SSS (S) P	SSS (S) P	SSSS P0
Duress	SSS (S) D	SSS (S) D	SSSS DD ₀
<i>Restore</i>	<i>3+1/4+1 Universal</i>	<i>3+1/4+1 Expanded</i>	<i>4+2</i>
Alarm	SSSS (S) R	SSS (S) R RRR (R) C _H	SSSS R CH
Trouble	SSS (S) T _R	SSS (S) T _R T _R T _R T _R (T _R) C _H	SSSS T _R C _H
Bypass	SSS (S) B _R	SSS (S) B _R B _R B _R B _R (B _R) C _H	SSSS B _R C _H
AC Fail	SSS (S) E _R	SSS (S) E _R E _R E _R E _R (E _R) A _{CR}	SSSS E _R A _{CR}
Low Battery	SSS (S) L _{BR}	SSS (S) L _{BR} L _{BR} L _{BR} L _{BR} (L _{BR}) L _B	SSSS L _{BR} L _B

Table 29: General Reporting Formats

<i>Code</i>	<i>Description</i>	<i>Code</i>	<i>Description</i>
SSSS	Subscriber ID Number	R	Alarm Restore Code
A	Alarm	T_R	Trouble Restore Code
C_H	Channel Number	B_R	Bypass Restore Code
0	Zero	E_R	AC Fail Restore Code 1 st digit
T	Trouble	A_{CR}	AC Fail Restore Code Second Digit
B	Bypass	L_R	Low Battery Restore Code 1 st Digit
E	AC Fail Code 1 st Digit	L_{BR}	Low Battery Restore Code 2 nd Digit
A_C	AC Fail Code 2 nd Digit	D	Duress Code 1 st Digit
L	Low Battery Code 1 st Digit	D₀	Duress Code 2 nd Digit
L_B	Low Battery Code 2 nd Digit	P	Panic Code 1 st Digit
O_P	Open	P_{CH}	Panic Code 2 nd Digit
C_P	Close	T_P	Test Code
U	User Number		

Table 30: 3+1/4+1 Transmission Code Descriptions

Securitel

The *Solution-16* control panel can communicate to base stations via the Securitel Network using an EDMSTU (CS800). Not all messages can be transmitted via securitel as they can via the communication dialler transmitting in Contact ID Format. Refer to "Table 31: Securitel Reporting Messages" below for the list of messages that are supported by securitel.

<i>Event</i>	<i>Location</i>	<i>Page No</i>
Alarms and Restores	340 - 467	108
Zone Bypass Reports *	468 - 471	118
Zone Trouble Reports *	472 - 475	119
Open/Close Reports	504 - 505	124
AC Fail	488 - 491	122
Low Battery	492 - 495	123
Codepad Panic	480 - 483	121
Codepad Duress	476 - 479	120
Codepad Tamper	484 - 487	122

Table 31: Securitel Reporting Messages

Note: Zone bypass and zone trouble reports are not transmitted separately. They are transmitted as one combined isolate report.

How To Program and Setup Securitel

To connect and setup the EDMSTU, follow the procedures below:

1. Program the Subscriber ID Number in "LOCATION 052 - 055".
2. Program Output 2 as all zero's in "LOCATION 546 - 552".
3. Disable Option 1 in "LOCATION 663" if the control panel is not going to use the on-board dialler.
4. Connect the EDMSTU to the *Solution-16* control panel using the table below.
5. Once the EDMSTU has been connected to the control panel, the EDMSTU will now need to be 'upped' by the monitoring station.

<i>Solution-16</i>	<i>EDMSTU</i>
Output 2	D
GND	-
+ COM	+

Table 32: EDMSTU Connection Terminals

Refer to your EDMSTU Installation Manual for further information.

Securitel and Partitioning

The EDMSTU (CS800) was not designed to transmit individual Open/Close Reports for each area via the Securitel Network. It will however transmit "First To Open/Last To Close Reporting" if Option 2 in "LOCATION 664" has been enabled.

Domestic Reporting

The "Primary Telephone Number" and the "Secondary Telephone Number" locations which are normally used for base station reporting can be added together making provision to store up to 32 digits. The 32 data locations are now used to store any number of telephone numbers and subject to the length of each of the telephone numbers it is possible to store 3 or more different telephone numbers for Domestic Dialling Format.

Programming Domestic Reporting

Programming the control panel for "Domestic Reporting" has been made extremely simple by the use of the Installer's Programming Command 965. Refer to "Installers Programming Commands" on page 25 for more information.

How To Set Up The Control Panel For Domestic Dialling

1. Enter Installer's Programming Mode (EG: **1234** followed by the **AWAY** button).
Two beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter Command **965** followed by the **AWAY** button.
Two beeps will be heard. The control panel has now been set up for Domestic Dialling Format.
3. Exit Installer's Programming Mode by entering Command **960** followed by the **AWAY** button.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.
4. To program your telephone numbers, enter the **MASTER CODE** followed by **2** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash. Refer to "Master Code Functions" on page 53 for more information.

If there are telephone numbers already programmed, they will be displayed one digit at a time via the ZONE indicators on the codepad.

If there are no previous programmed telephone numbers, a further two beeps will be heard after entering this mode. These two beeps are normally heard after the last digit of the last telephone number has been displayed.

5. Enter all the digits for **PHONE No. 1**, one digit at a time. You will notice as each digit is entered, the corresponding codepad indicators will illuminate.
6. After you have entered all the digits of the first telephone number press the **STAY** button if there is more than one phone number. This will insert a break between the first telephone number and the second telephone number. If there is only one phone number, press the **AWAY** button to exit this mode.
7. Enter all the digits for **PHONE No. 2**, one digit at a time. You will notice as each digit is entered, the corresponding codepad indicators will illuminate.
8. After the last digit of the second telephone number, press the **AWAY** button to exit this mode unless a third telephone number is required.

Your control panel has now been set up to report in the Domestic Dialling Format. Test the dialling functions by triggering the control panel to report to your programmed telephone numbers.

How To Disable Domestic Dialling Using The Master Code

If at any time the Master Code holder wishes to cancel domestic dialling for any reason (eg. They are moving house and they do not wish the system to continue calling their place of work or mobile phone etc), they can enter the **MASTER CODE** followed by **2** and then the **AWAY** button, the **STAY** button and the **AWAY** button to disable domestic dialling.

MASTER CODE + **2** + **AWAY** + **STAY** + **AWAY**

Domestic Dialling Function

When the control panel has activated into alarm condition, it will commence dialling the first programmed telephone number. If a busy or engaged tone has been detected, the control panel will hang up and commence dialling the second telephone number (if one is programmed). The first call however will be counted as one unsuccessful dialling attempt. If the second telephone number is also busy or an engaged tone is detected, the control panel will hang up and commence dialling the third telephone number (if one is programmed).

If a busy tone is not detected, the control panel will assume that the phone has been answered and will begin sending its transmission. The transmission consists of a siren tone followed by a unit identification beep. The identification beep will allow the customer to verify which control panel made the call if more than one control panel is reporting to the same telephone number. The identification beep is programmed in "LOCATION 55" of the Subscriber ID Number.

Note: A maximum of 6 calls per alarm event will be made when the control panel has been set up for "Domestic Dialling Format". This count includes any unsuccessful calls. The counter will be reset if the zone retriggers and a further 6 attempts will be made. The control panel will stop dialling after 6 attempts or 3 successful calls. The control panel will also stop dialling if a valid user code has been entered at the remote codepad.

How To Acknowledge Domestic Dialling

Once the call has been received, if it is not acknowledged using a Phone Controller (CC911), the control panel will continue to send its transmission for a period of 2 minutes. It will then hang up and commence dialling the next telephone number. If the call is acknowledged, the control panel will hang up and no further calls will be made for that event.

Note: From Software Version 1.32 onwards, you can acknowledge the call by pressing the * button on your telephone without the DTMF Command Module (CC886) connected.

For Software Version 1.10 - 1.31, the DTMF Command Module will need to be connected to your control panel to acknowledge Domestic Dialling by pressing the # button on your telephone.

Synthesised Voice Reporting

The Voice Module (CC888) has been designed so that a clear concise voice message can be transmitted by the control panel to the telephone numbers of your choice when an alarm condition occurs. This allows the person receiving your call to easily understand that the alarm at your home or office has been activated and that action is required. This voice message is pre-recorded and can be changed as many times as necessary. The message can be from between 1-16 seconds in length.

There is no longer a need to put up with having to decipher alarm tones and trying to explain to your relatives just what the tones actually mean. A recorded message is perfect as it can easily be interpreted by any person receiving the call and therefore immediate action can be taken according to your specific message. The voice message can be recorded in any language and once programmed, it will be retained indefinitely irrespective of power loss. No messy batteries are required.

How To Set Up The Control Panel For Synthesised Voice Format

1. Enter Installer's Programming Mode (EG: **1 2 3 4** followed by the **AWAY** button).
Two beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter Command **965** followed by the **AWAY** button.
Two beeps will be heard. The control panel has now been set up for Domestic Dialling Format.
3. Enable "Synthesised Voice Format" by programming "LOCATION 050" as 15.
4. Exit Installer's Programming Mode by entering Command **960** followed by the **AWAY** button.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.
5. To program your telephone numbers, enter the **MASTER CODE** followed by **2** and the **AWAY** button. Three beeps will be heard and the STAY and AWAY indicators will begin to flash. Refer to "Master Code Functions" on page 53 for more information.

If there are telephone numbers already programmed, they will be displayed one digit at a time via the ZONE indicators on the codepad.

If there are no previous programmed telephone numbers, a further two beeps will be heard after entering this mode. These two beeps are normally heard after the last digit of the last telephone number has been displayed.

6. Enter all the digits for **PHONE No. 1**, one digit at a time. You will notice as each digit is entered, the corresponding codepad indicators will illuminate.
7. After you have entered all the digits of the first telephone number press the **STAY** button if there is more than one phone number. This will insert a break between the first telephone number and the second telephone number. If there is only one phone number, press the **AWAY** button to exit this mode.
8. Enter all the digits for **PHONE No. 2**, one digit at a time. You will notice as each digit is entered, the corresponding codepad indicators will illuminate.
9. After the last digit of the second telephone number, press the **AWAY** button to exit this mode unless a third telephone number is required.

Your control panel has now been set up to report in Synthesised Voice Format. Test the dialling functions by triggering the control panel to report to your programmed telephone numbers.

How To Disable Synthesised Voice Dialling Using The Master Code

If at any time the Master Code holder wishes to cancel Synthesised Voice dialling for any reason (eg. They are moving house and they do not wish the system to continue calling their place of work or mobile phone etc), they can enter the **MASTER CODE** followed by **2** and then the **AWAY** button, the **STAY** button and the **AWAY** button to disable domestic dialling.

MASTER CODE + **2** + **AWAY** + **STAY** + **AWAY**

Synthesised Voice Dialling Function

When the control panel has activated into alarm, it will commence dialling the first programmed telephone number. If a busy or engaged tone has been detected, the control panel will hang up and commence dialling the second telephone number (if one is programmed). The first call however will be counted as one unsuccessful dialling attempt. If the second telephone number is also busy or an engaged tone is detected, the control panel will hang up and commence dialling the third telephone number (if one is programmed).

If a busy tone is not detected, the control panel will assume that the phone has been answered and will begin sending its transmission. The transmission consists of the recorded voice message repeating itself for a period of about 90 seconds followed by two beeps.

Note: A maximum of 6 calls per alarm event will be made when the control panel has been set up for "Synthesised Voice Dialling Format". This count includes any unsuccessful calls. The counter will be reset if the zone retriggers and a further 6 attempts will be made. The control panel will stop dialling after 6 attempts or 3 successful calls or a user code has been entered from the remote codepad.

How To Acknowledge Synthesised Voice Dialling Without DTMF Command Module Fitted

Once the call has been received, if the call is not acknowledged once the message has completed by pressing the button on the Phone Controller (CC911) for three seconds or alternatively by pressing the ***** button on the touch tone telephone for 3 seconds, the control panel will commence dialling the next telephone number. If the call has been acknowledged, the control panel will hang up and no further calls will be made for that event.

How To Acknowledge Synthesised Voice Dialling With DTMF Command Module Fitted

Once the call has been received, if the call is not acknowledged by pressing the **#** button on the telephone at any time during the message playback, the control panel will then hang up after the message has completed and commence dialling the next telephone number. If the call has been acknowledged, the control panel will hang up and no further calls will be made for that event.

Operation Of The Voice Module

The unit has two modes of operation being:

1. Record Mode - Crystal Earpiece Not Plugged In.
2. Replay Mode - Crystal Earpiece Plugged In.

Recording The Voice Message

In the RECORD mode, the crystal earpiece should not be connected. To record a message on the voice module, press and hold the Record/Play switch. At the same time commence speaking into the microphone slowly and clearly dictating your desired message.

The status indicator will illuminate as the Record/Replay switch is pressed and will remain on while ever the switch is being held in or until the maximum recording time of 16 seconds has expired. If your message is less than 16 seconds long, simply release the switch to stop recording.

For good recording results, keep all background noise to a minimum and speak clearly into the microphone approximately 30 cm away.

WARNING

**Do not press the Record/Play switch without the earpiece connected unless you want to record.
If you do, the current message will be erased and a new message recorded.**

Replay The Voice Message

There are two different Replay modes available. One is to check the message and the other is used during an alarm condition.

The first replay mode is to check the message with the crystal earpiece connected. By pressing the Record/Replay switch once, the voice module will replay the message it currently has stored so that it can be checked for accuracy and clarity. This mode will automatically terminate as soon as the programmed message has been completely replayed.

The second replay mode occurs when an alarm condition occurs and the control panel that the voice module is connected to dials the programmed telephone numbers. This can be achieved by triggering a zone or by sending a test report. Once triggered, the control panel will dial the programmed telephone number and commence playing its recorded voice message.

The message consists of a 90 second period during which time the recorded voice message will be repeated continuously. The 90 second timer commences as soon as the last digit of the telephone number has been dialled. At the end of the 90 seconds, the control panel will send two beeps followed by a pause. This will be repeated over a 20 second period. During this pause, the control panel looks for an acknowledge tone. If it is received within the next 20 seconds, the control panel will hang up and make no further calls.

Connection Of The Voice Module

The Voice Module plugs onto the AUXILIARY MODULE socket on the control panel. Please ensure that all power to the control panel has been removed before connecting the voice module. Remember to align the arrows on the voice module to those on the control panel. Reconnect the power to the control panel once the voice module has been connected correctly.

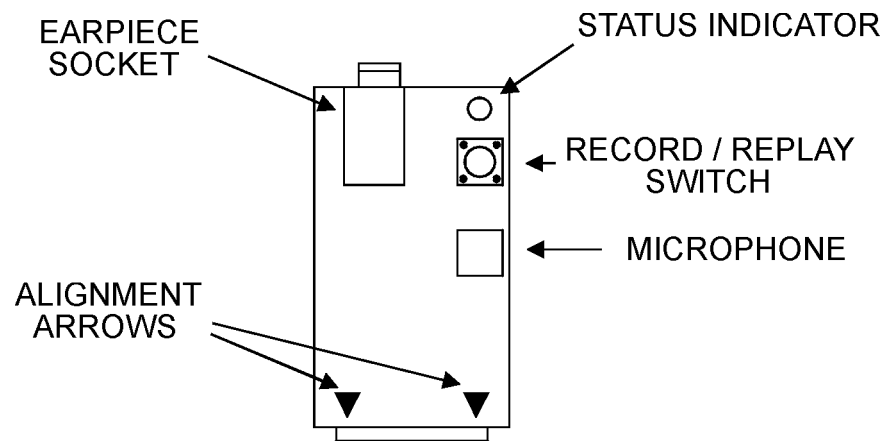


Figure 2: Diagram Of EDM Voice Module (CC888)

Basic Pager Format Reporting

Basic Pager Format requires some interpretation of the numbers that appear on the display, however, it is possible to differentiate between 1000 different control panels when a number of control panels are reporting to the one pager.

To use this feature, you will require to program the following software options.

1. "LOCATION 000 - 015" requires the Basic Pager's access telephone number programmed.
2. "LOCATION 049" requires "Option 5 - Pager Handshake" to be programmed.
3. "LOCATION 050" requires "Option 12 - Basic Pager Reporting" to be programmed.

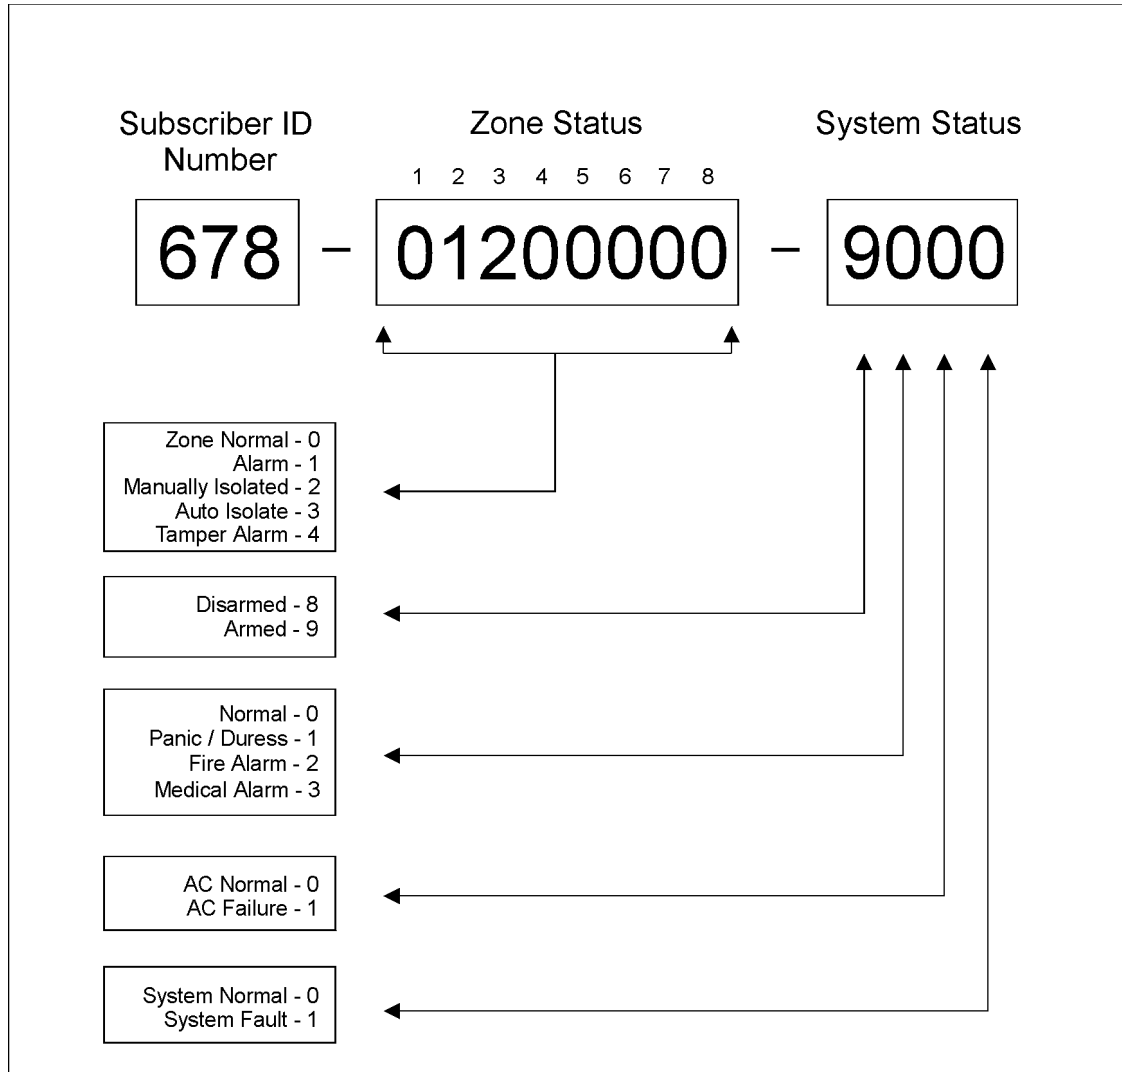


Figure 3: Basic Pager Display

The example in "Figure 3: Basic Pager Display" shows that the transmission has come from Subscriber ID Number 678 and that Zone 2 is in alarm, Zone 3 has been manually isolated, the system is armed, the panic zone is normal, the AC is connected and there is no fault condition.

Note: Basic Pager Format Only Supports Zones 1-8

PET Alpha Pager Reporting

The *Solution- 16* control panel is capable of transmitting PET Alpha characters at the rate of 300 baud to a pocket pager using the PET Protocol (Page Entry Terminal). Using this method of reporting will allow people who are on the move to monitor burglary alarms, medical alarms, refrigeration alarms and virtually any other event which can be used to trigger the *Solution- 16* control panel.

Programming and Hardware Requirements

To use PET Alpha Pager Reporting Format, the following programming and hardware options are required.

1. The EDM Modem Module (CC811 or CC811B) will be required to be fitted to the AUXILIARY MODULE socket on the control panel.

Note: Some pager companies use the BELL communication frequencies and others use the CCITT frequencies. It is important to obtain this information from the pager company so that you can connect the appropriate modem module for the format used. Use EDM Modem Module (CC811) for Telecom Paging CCITT frequencies and (CC811B) for BELL frequencies.

2. The "Primary Telephone Number" in "LOCATION 000 - 015" will require the PET Alpha Pager's Access Telephone Number.
3. Option 5 - "Pager Reporting" in "LOCATION 049" will need to be enabled.
4. Option 14 - "Alpha Pager" in "LOCATION 050" will need to be enabled.
5. "LOCATION 514 - 529" requires the PET Alpha Pager's network password.
6. "LOCATION 530 - 539" requires the 7 digit Alpha Pager ID Number.

Note: All Contact ID Event Codes will require any ZERO in the Event Code to be programmed to other than zero. If the Event Code has a zero, the report for that event will not transmit to the PET Alpha Pager.

The *Solution- 16* only communicates to the PET Network at the rate of 300 BAUD.

Telecom Access Telephone Numbers

Each state has different access numbers to the PET Network. The access telephone numbers to the Telecom Paging Networks for CCITT frequencies are as follows:

State	Access Number	State	Access Number
NSW	02 9 281 9255	VIC/TAS	03 9 510 4451
QLD	07 3 891 6824	SA/NT	08 231 1493
WA	09 321 3528		

Table 33: Telecom Access Telephone Numbers

PET Alpha Pager Messages

This transmission format is the most informative method of reporting alarm activity to the end user. When using the PET Alpha Pager Format, the control panel will transmit all alarm information using English language messages. Once the alarm message has been received on the pager, appropriate action can be taken.

The following table lists the events which will cause the control panel to transmit to the PET Alpha Pager and the messages that will be displayed on the pager.

<i>Event At Panel</i>	<i>Pager Message</i>
AC Fail	AC Fail
AC Restore	AC Restore
Area Has Been Armed	Close Area #, User #
Area Has Been Disarmed	Open Area #, User #
Burglary Zone Has Triggered	Alarm Zone #
Burglary Zone Has Restored	Restore Zone #
Burglary Zone Has Triggered, Area #	Alarm Zone #, Area #
Burglary Zone Has Restored, Area #	Restore Zone #, Area #
Codepad Tamper - Code Retries Exceeded	Codepad Tamper
Data Programming Change	Data Change
System Has Been Armed	Close User #
System Has Been Disarmed	Open User #
Codepad Duress	Duress, Open User #
Low Battery	Low Battery
Low Battery Restored	Battery Restored
Codepad Panic Alarm	Panic
Codepad Fire Alarm (Version 1.37 Onwards)	Fire
Codepad Medical Alarm (Version 1.37 Onwards)	Medical
Test Report	Test
Zone Automatically Isolated When Armed	Bypass Zone #
Disarming When Zones Have Been Isolated	Bypass Restore Zone #
Zone Unsealed At End Of Exit Time	Trouble Zone #
Zone Has Resealed After End Of Exit Time	Trouble Restore Zone #
24 Hour Zone Triggered	24 Hour Alarm #
24 Hour Zone Restored	24 Hour Restore #
24 Hour Fire Zone Triggered	Fire Zone #
24 Hour Fire Zone Restored	Fire Restore #

Table 34: Alpha Pager Messages

The # symbol represents the zone number or user code number in the transmission.

The following example shows how a single transmission will be received on the PET Alpha Pager. A similar message to the one below will be seen when user 1 has armed the system.

<i>Subscriber ID Number</i>	<i>System Armed</i>	<i>User</i>
1111	CLOSE USER	01

Table 35: Example Of PET Alpha Pager Transmission

LOCATION 514 - 529**70 61 73 73 77 64 00 00**

A provision has been made in the PET protocol for a mandatory six digit ASCII character password to be transmitted before the alarm message is transmitted. However, at the time of writing this manual, neither Telecom nor Hutchinson are making full use of this feature. There is however an important difference in what both organisations expect to see as the password for all pagers at the present time.

Telecom expect to see the password "passwd" sent before the message is transmitted. The password is programmed using ASCII text.

Example

To communicate with Telecom, program "70, 61, 73, 73, 77, 64" as the password.

ASCII Characters

<i>ASCII</i>	<i>Character</i>	<i>ASCII</i>	<i>Character</i>	<i>ASCII</i>	<i>Character</i>
30	0	4C	L	67	g
31	1	4D	M	68	h
32	2	4E	N	69	I
33	3	4F	O	6A	j
34	4	50	P	6B	k
35	5	51	Q	6C	l
36	6	52	R	6D	m
37	7	53	S	6E	n
38	8	54	T	6F	o
39	9	55	U	70	p
41	A	56	V	71	q
42	B	57	W	72	r
43	C	58	X	73	s
44	D	59	Y	74	t
45	E	5A	Z	75	u
46	F	61	a	76	v
47	G	62	b	77	w
48	H	63	c	78	x
49	I	64	d	79	y
4A	J	65	e	7A	z
4B	K	66	f		

Table 36: ASCII Character Table

Converting ASCII Characters To Hexadecimal

To program an ASCII letter character and convert that to a number to be programmed, refer to "Table 37: Hexadecimal Conversion Table" for converting letters and numbers to decimal numbers.

Example

If you need to program an Alpha Pager Password with the letter 'L' in upper case, you would then program that letter as: 4,12.

<i>Hexadecimal Conversion Table</i>	
<i>Hexadecimal Number</i>	<i>Decimal Number</i>
A	10
B	11
C	12
D	13
E	14
F	15

Table 37: Hexadecimal Conversion Table

PET Alpha Pager ID Number

LOCATION 530 - 539

OOOOOOOOOO

The Pager ID Number locations are used to store the unique number which allows the network to identify individual pagers.

To program the Pager ID Number, enter the decimal characters which represent the Pager ID Number. Remember to substitute a 10 for a zero and to terminate the number with a zero as you would if you were programming the telephone numbers.

Note: If the Pager ID Number is less than 7 digits, it must be prefixed with the digit 6 until the number of digits equal 7. This is only relevant when using the PET format.

Example

If the Pager ID Number is 123456, it must be programmed as 6123456.

Logging System Events Via Serial Printer

A serial printer can be connected to the control panel to report all events that have occurred. The logging of an event will include the time and date along with a description of the event that occurred.

The serial printer is required to be connected to Output 3 and programmed as follows:

OUTPUT 3 - LOCATION 552 - 557

OOOOOO

Select the required baud rate that the printer is to communicate at with the control panel.

Printer Output Baud Rate

LOCATION 756

2

<i>Option</i>	<i>Printer Baud Rate</i>
1	300 BPS
2	600 BPS
4	1200 BPS
8	2400 BPS

Table 38: Location 756 Option Bits

Refer to "Table 41: Serial Printer Messages" on page 94 for a full list of events that will be logged by the serial printer connected to output 3.

<i>Additional Messages When System Has Been Partitioned</i>	
Zone # On Area # Triggered Into Alarm	Alarm Zone # Area #
Zone # On Area # Restored	Alarm Restore Zone # Area #
Area # Armed	Area # Armed By User #
Area # Disarmed	Area # Disarmed By User #
Zone Bypassed In Area #	Bypass Zone # Area #
Zone Bypass Restore In Area #	Bypass Restore Zone # Area #
Zone Trouble In Area #	Trouble Zone # Area #
Zone Trouble Restore In Area #	Trouble Zone Restore # Area #

Table 39: Additional Serial Printer Messages When Partitioned

The # symbol represents the zone or area number in the transmission.

The following example shows how a single transmission will be displayed via the serial printer connected to output 3. A similar message to the one below will be seen when the alarm system is armed by user 1.

<i>Date</i>	<i>Time</i>	<i>Event</i>
09/12/96	12:30:42	System Armed By User #

Table 40: Example Serial Printer Log Report

<i>System Event</i>	<i>Printer Log Report</i>
Set Date and Time	Time Altered By User #
Enter Installer's Programming Mode	Entering Installer's Mode
Communications Failure	Comms Fail
Change Programming Information	Eprom Data Changed
Exit Installer's Programming Mode	Exit Installer's Mode
System Armed	System Armed By User #
System Disarmed	System Disarmed By User #
Zone Triggered	Alarm Zone #
Zone Restored	Restore Zone #
Auto Operation Of Output	Auto Operating Output
Auto Arm	System Armed By User 32
Auto Arm Pre-Alert Warning	Initiating Auto Arm Sequence
Incoming Alarm Link Call	Answering Incoming Call
Alarm Link Connection	Opened Alarm Link Session
Terminate Alarm Link Session	Closed Alarm Link Session
AC Fail	Mains Failure
AC Restore	Mains Restore
Low Battery	Battery Failed Load Test
Low Battery Restore	Battery Passed Load Test
Codepad Medical Alarm	Medical Codepad Alarm
Codepad Fire Alarm	Fire Codepad Alarm
Codepad Panic Alarm	Panic Codepad Alarm
Codepad Duress Alarm	Duress Codepad Alarm
Telephone Line Fault	Phone Line Failure
Telephone Line Restore	Phone Line Restore
No Handshake	Handshake Failure
Zone Bypass	Bypass Zone #
Zone Bypass Restore	Bypass Restore Zone #
Zone Trouble	Trouble Zone #
Zone Trouble Restore	Trouble Zone Restore #
Sensor Watch Fault	Sensor Watch Alert Zone #
Test Report	Test Report Requested
Request To Call Remote Computer	Request To Call Alink Received
Dialling Callback Telephone Number	Dial Call Back Number
Access Denied	Access Denied Alert
Printer Congested	Printer Congested
Satellite Siren Service Mode - On	Satellite Siren Off Line
Satellite Siren Service Mode - Off	Satellite Siren On Line
Dialling Primary Telephone Number	Dialling Primary Number
Dialling Secondary Telephone Number	Dialling Secondary Number
Horn Speaker Has Been Disconnected	Siren Disconnected
Horn Speaker Has Been Reconnected	Siren Reconnected
No Kiss Off Received	Kiss Off Failure
No Handshake Received	Handshake Failure
Battery Falls Below 10.5V With No AC	Low Battery Detected
System Has Been Defaulted	System Defaulted
Copying Information From Key To Panel	Solution Key Uploaded

Table 41: Serial Printer Messages

Base Station Information

This Section Includes The Following:

- *Base Station Information*
- *Primary Telephone Number*
- *Secondary Telephone Number*
- *Callback Telephone Number*
- *Dialling Format*
- *Handshake Tone*
- *Transmission Format*
- *Transmission Speed*
- *Subscriber ID Number*
- *Ring Count*

Base Station Information

This section outlines the programming information required for the *Solution- 16* control panel when communicating with base station receivers. Typically these parameters specify the telephone numbers to call, the transmission formats, handshake tones and transmission speeds.

How To Program A Phone Number

When programming the telephone number, if a '0' is required, it must be programmed as a '10'. Each location in the primary, secondary and callback telephone numbers hold one digit of the telephone number.

Example

To program the telephone number 9 672 1055, you would program **96721¹⁰55**.

Programming The End Of A Phone Number

To tell the dialler when the end of the telephone number has been reached, a '0' must be inserted at the end of the telephone number. Therefore the dialling sequence will be terminated when a zero appears.

Example

To program the number 9 672 1055 completely, you would program **96721¹⁰550**.

Programming A Four Second Pause In The Phone Number

To enter a four second pause in the dialling sequence, you would need to program the value '13'. This may be necessary when the dialler is communicating through an old (slower) telephone exchange or where a PABX system is in place.

Example

To program the number 02 pause 9 672 1055, you would program **¹⁰2¹³96721¹⁰550**.

<i>Digit Required</i>	<i>Number To Program</i>	<i>Digit Required</i>	<i>Number To Program</i>
0	10	8	8
1	1	9	9
2	2	Stop	0
3	3	*	11
4	4	#	12
5	5	Pause	13
6	6	Break	14
7	7		

Table 42: Dialling Digits

Primary Telephone Number

LOCATION 000 - 015

OOOOOOOOOOOOOOOOOO

When the control panel has triggered, the control panel will dial this number in an attempt to contact the monitoring station, pager etc. If the call is successful, the relevant information will be transmitted and the dialler will return back to the stand-by mode.

If unsuccessful, the dialler will try twice more using the "Primary Telephone Number" after which the "Secondary Telephone Number" will be called three times. This procedure will be repeated only once again (ie. Maximum of 12 call attempts per alarm) after ten minutes if none of the first six attempts were successful.

Note: When programming the telephone number, if a '0' is required, it must be programmed as a '10'.

Please contact your monitoring station or pager company for the relevant telephone numbers before programming this location.

Secondary Telephone Number

LOCATION 016 - 031

00000000000000000000

Refer to the Primary Telephone Number for programming information.

Callback Telephone Number

LOCATION 032 - 047

00000000000000000000

This location contains the telephone number that will be called when Upload/Download is requested or the number **6** button is held down to initiate a modem call from the control panel to establish a communications link with the remote computer. The computer must be running the Alarm Link Software (CC816) and will need to be set to "Waiting For An Incoming Call". The "Callback Telephone Number" is also required to be programmed if "Remote Connect With Callback Verification" on page 74 is required.

Dialling Format

LOCATION 048

1

The method for dialling telephone numbers is entered here. Options 3 and 6 will alternate the dialling sequence between DTMF and Decadic if the call to the base station receiver was unsuccessful. Caution should be exercised when selecting the dialling method.

Only use the Australian method if the control panel is to be connected to the Australian Telecommunications Network. The International DTMF dialling option should only be used in those countries that allow both the caller and the receiver to terminate the phone call. Using the incorrect format will disable EDM's patent Telephone Anti-Jamming feature.

Option	Dialling Format	Option	Dialling Format
1	Australian DTMF (Touch Tone)	4	International DTMF (Touch Tone)
2	Australian Decadic	5	Reversed Decadic (10 Minus 1)
3	Alternating DTMF & Australian Decadic	6	Alternating DTMF & Reversed Decadic

Table 43: Dialling Formats

Note: The alternating sequence is as follows; DTMF - Decadic - DTMF - Decadic - DTMF - Decadic

Handshake Tone**LOCATION 049****1**

This location sets the type of handshake tone required before data transmissions to the monitoring station will begin.

1. Hi Lo Handshake Tone is required when the control panel requires to communicate in Contact ID Format or High Speed DTMF.
2. 1400 Hz Handshake Tone is required when the control panel requires to communicate in Ademco Lo Speed Format, Domestic Dialling Format or Synthesised Voice Formats.
3. 2300 Hz Handshake Tone is required when the control panel needs to communicate in SESCOA Lo Speed Format.
4. No Handshake Tone is not recommended.
5. Pager Handshake is required when the control panel needs to communicate in Basic Pager Format or PET Alpha Pager Format.

Option	Handshake Tone	Option	Handshake Tone
1	HI LO Handshake (Contact ID Format)	4	No Handshake
2	1400 Hz Lo Speed (Ademco Tx At 1900Hz)	5	Pager Handshake
3	2300 Hz Lo Speed (SESCOA Tx At 1800 Hz)		

Table 44: Handshake Tones

Transmission Format**LOCATION 050****1**

Enter the desired transmission format here. This location selects the data format that will be transmitted to the monitoring station receiver. This location also allows you to configure the control panel for domestic, synthesised voice or pager reporting formats.

Option	Transmission Format	Option	Transmission Format
1	Contact ID	9	Reserved
2	4+2 Express	10	Reserved
3	4+2 Pulsed	11	Domestic
4	4+2 Pulsed + Checksum	12	Basic Pager
5	4+1 Pulsed Universal	13	Reserved
6	4+1 Pulsed Expanded	14	Alpha Pager
7	3+1 Pulsed Universal	15	Synthesised Voice
8	3+1 Pulsed Expanded		

Table 45: Transmission Formats

LOCATION 051

This location selects the speed at which data is transmitted to the base station receiver when Low-Speed Pulsed transmission formats are used. Altering this location will only effect pulsed transmission formats.

<i>Option</i>	<i>Transmission Speed</i>	<i>Option</i>	<i>Transmission Speed</i>
1	1 Pulse Per Second	4	20 Pulses Per Second
2	10 Pulses Per Second	5	20 Pulses Per Second Fixed Digit Length
3	15 Pulses Per Second	6	40 Pulses Per Second

Receivers and Their Formats

The following is a list of some compatible control room receivers, their specific handshake tones and transmission formats. Use this table only as a guide when selecting the transmission format.

<i>Receiver Type</i>	<i>Transmission Format</i>
Silent Knight Ademco Slow	10 PPS, 1400 Hz HS, 3+1, 3+2, 4+1, 4+2
Sescoa Franklin DCI Vertex	20 PPS, 2300 Hz, 3+1, 3+2, 4+1, 4+2
Silent Knight FAST	20 PPS, 2300 HS, 3+1, 3+2, 4+1, 4+2
Ademco	10 PPS, 1400 Hz HS, 3+1, 3+2, 4+1, 4+2 20 PPS, 2300 Hz HS, 3+1, 3+2, 4+1, 4+2 40 PPS, 1400 Hz HS, 3+1, 3+2, 4+1, 4+2 DTMF, Hi-Low HS, Expanded Format, 4+2 Express
FBI	10 PPS, 1400 Hz HS or 2300 Hz HS, 3+1, 3+2, 4+1, 4+2 20 PPS, 1400 Hz HS or 2300 Hz HS, 3+1, 3+2, 4+1, 4+2 40 PPS, 1400 Hz HS or 2300 Hz HS, 3+1, 3+2, 4+1, 4+2 DTMF, 1400 Hz HS or 2300 Hz or Hi-Low, 4+2 or 4+2+CS DTMF, Hi-Low HS, Expanded Format

Table 46: Receivers and Their Formats

If your base station receiver type is not listed above, do not despair, there are many combinations of formats, speeds and handshake tones. Try a few combinations and you will more than likely find the one that works for your receiver.

It should be noted that some formats offer much more detailed information than others, so take the time to consider the many alternatives being offered.

Subscriber ID Number**LOCATION 052 - 055****0000**

This number is transmitted to identify the calling control panel. Enter the desired Subscriber ID Number in the four locations provided. For Basic Pager Format, "LOCATION 052" is ignored and the first digit of the Subscriber ID Number required must start in "LOCATION 053". When using Domestic Dialling Format, the number of identification beeps will be the number that is programmed in "LOCATION 055". This gives the ability to identify between 15 different control panels calling the same telephone number.

Ring Count**LOCATION 063****8**

This location sets the number of rings before the control panel will answer an incoming call. This should be set at an acceptable level bearing in mind that one ring = "Ring, Ring - Ring, Ring" and that a ring count of 10 represents approximately 60 seconds. This location only has an effect if remote arming and/or remote Upload/Download via Alarm Link Software has been enabled. If this location is programmed as 'zero', then the answering of incoming calls will be totally disabled irrespective of any programmed options.

Answering Machine Bypass

Answering machine bypass has been incorporated so that it is possible to make a connection with the control panel for remote arming or Upload/Download when there is an answering machine or facsimile machine on the same telephone line. There are two different methods of using answering machine bypass as explained below. The secondary method should only be used when there is a large amount of traffic on the line (eg. A home office). It will reduce the chance of the control panel incorrectly answering incoming calls.

1. Programming the ring count as 15 will enable "Answering Machine Bypass" in the primary mode. When calling the control panel, let the phone ring for no more than 4 rings and then hang up. If you call again within 45 seconds, the control panel will answer the call on the first ring and the connection will be established. This will prevent the answering machine or facsimile from answering the call. Refer to "LOCATION 664" on page 155 if you wish to enable "Answering Machine Bypass Only When System Is Armed".
2. **(From Software Version 1.37 Onwards)**
Programming a 14 as the ring count will enable "Answering Machine Bypass" in the secondary mode. In this mode, when calling the control panel, allow the phone to ring for no more than 2 rings and then hang up. Wait a minimum of 8 seconds before calling the control panel again. The control panel will now answer on the first ring. If you don't wait the 8 seconds, the control panel will not answer the call. Refer to "LOCATION 664" on page 155 if you wish to enable "Answering Machine Bypass Only When System Is Armed".

Note: You should set the ring count on the answering machine or facsimile machine to be higher than two rings. Four or six rings would be preferred.

Access Codes

This Section Includes The Following:

- *Installer Code*
- *User Codes*
- *User Code Priority*
- *Auxiliary Codes*
- *Code Retries*

Access Codes

This section describes the access codes that are used to assign privileges and access functions for user code holders of the system. Three types of user codes exist within the system, the Installer Code, User Codes and Auxiliary Codes. Each of these codes allow specific access and operation of the varied functions of the control panel.

Installer Code

LOCATION 56 - 62

1 2 3 4 15 15 15

This code is used to access the Installer's Programming Mode and can be between one to seven digits long. However, after the control panel has been powered up, the Installer Code can disarm the system if it is the first code used. The next time the Installer Code is used, access into Installer's Programming Mode will be gained.

User Codes

LOCATION 064 - 319

The purpose of user codes is to arm and disarm the system as well as perform other specific functions as described in "Master Code Functions" on page 53.

User codes can be any length between one to seven digits long. Each user code can have a different priority level allocated to it. This controls the behaviour of the code, allowing it to arm only or to arm and disarm etc. This priority level of each user code is programmed in the last location of each user code.

2580 15 15 15 12
User Code *Priority*

User Code

Priority

There are a total of 32 user codes available that can be altered or deleted at any time by a Master Code holder. Multiple Master Codes can be programmed. Refer to "Master Code Functions" on page 53 for more information on adding, deleting or changing user codes.

Note: The priority level for each user code can only be programmed or altered by the installer.

User Code Priority

There are seven different priority levels that can be allocated to the user code. Each priority level allows or restricts the functions that different user code holders can perform.

Note: Once user code priority levels 4, 6 and 12 have been enabled to any of the available 32 user codes, the method of "Standard Isolating" will no longer operate. Only those user codes with the priority level of 4, 6 and 12 will be able to isolate zones using the method "Code To Isolate".

Priority Level	Description
0	Arming & Disarming
1	Arming Only
2	Patrolman Code
4	Arming & Disarming + Code To Isolate
6	Patrolman Code + Code To Isolate
8	Master Code Functions
12	Master Code Functions + Code To Isolate

Figure 4: Priority Levels

0 Arming & Disarming

This priority level allows the user code holder to arm and disarm the system.

1 Arming Only

This priority level allows the user code holder to arm the system but not disarm it.

2 Patrolman Code

A Patrolman Code will allow you to issue a code which will only disarm the system after an alarm has occurred. This will prevent unauthorised use of the code. A Patrolman Code can always arm the system. This code is designed to work in conjunction with Open/Close reports to gain maximum benefit. Refer to "LOCATION 664" on page 155 to enable "Open/Close Reports To Be Transmitted Only After An Alarm Has Occurred".

4 Arming/Disarming Allowed + Code To Isolate

This priority level allows arming and disarming of the control panel. Isolating of zones will only be allowed by using the method "Code To Isolate" once this priority level has been set. Refer to "Isolating Zones" on page 43 for further information.

6 Patrolman Code + Code To Isolate

This priority level allows the Patrolman Code to disarm the system once an alarm has occurred. Isolating zones will only be allowed by using the method "Code To Isolate" once this priority level has been set. A Patrolman Code can always arm the system. Refer to "Isolating Zones" on page 43 for further information.

8 Master Code Functions Are Allowed

This priority level allows arming and disarming of the control panel and the ability to carry out any of the Master Code Functions described on page 53. More than one user code can be allocated to this priority level.

12 Master Code Functions Are Allowed + Code To Isolate

This priority level allows arming and disarming of the control panel and the ability to carry out any of the Master Code Functions described on page 53. More than one user code can be allocated to this priority level. Isolating zones will only be allowed by using the method "Code To Isolate" once this priority level has been set. Refer to "Isolating Zones" on page 43 for further information.

		<i>User Code 1</i> Location 064 - 071 <div>2 5 8 0 15 15 15 8</div>	<i>User Code 2</i> Location 072 - 079 <div>15 15 15 15 15 15 15 0</div>
<i>User Code 3</i> Location 080 - 087 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 4</i> Location 088 - 095 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 5</i> Location 096 - 103 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 6</i> Location 104 - 111 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 7</i> Location 112 - 119 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 8</i> Location 120 - 127 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 9</i> Location 128 - 135 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 10</i> Location 136 - 143 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 11</i> Location 144 - 151 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 12</i> Location 152 - 159 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 13</i> Location 160 - 167 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 14</i> Location 168 - 175 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 15</i> Location 176 - 183 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 16</i> Location 184 - 191 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 17</i> Location 192 - 199 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 18</i> Location 200 - 207 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 19</i> Location 208 - 215 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 20</i> Location 216 - 223 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 21</i> Location 224 - 231 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 22</i> Location 232 - 239 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 23</i> Location 240 - 247 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 24</i> Location 248 - 255 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 25</i> Location 256 - 263 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 26</i> Location 264 - 271 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 27</i> Location 272 - 279 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 28</i> Location 280 - 287 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 29</i> Location 288 - 295 <div>15 15 15 15 15 15 15 0</div>	
<i>User Code 30</i> Location 296 - 303 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 31</i> Location 304 - 311 <div>15 15 15 15 15 15 15 0</div>	<i>User Code 32</i> Location 312 - 319 <div>0 15 15 15 15 15 15 1</div>	

Note: User Codes 16 - 32 report as user 15 except for Contact ID Format.

User Code 32 also reports when any of the following methods for arming and disarming are used.

1. Arm and disarm via Remote Radio Control equipment connected to the JP5 pins or the optional Radio Key/Keyswitch Interface (CC813).
2. Arm and disarm the system via Alarm Link Software (CC816).
3. Arm and disarm the system remotely over the telephone.
4. Single button arming in AWAY Mode, STAY Mode 1 or STAY Mode 2.
5. Single button disarming from STAY Mode 1 or STAY Mode 2.
6. Automatic arming in AWAY Mode or STAY Mode 1.

Auxiliary Codes

Auxiliary Codes can be used to operate programmable outputs. Refer to Output Event Types "2,12" and "2,13" on page 135 for further information.

Auxiliary Codes can be any length from one to seven digits long. Any unused location should be programmed with the value 15.

The priority level (Which is the last location of each Auxiliary Code) controls the behaviour of the code, allowing the code to operate when the system is armed or disarmed etc. Refer to "Table 47: Auxiliary Code Priority Levels" below for the available options.

Auxiliary Code 1

LOCATION 320 - 327

15 15 15 15 15 15 15 2

Auxiliary Code 2

LOCATION 328 - 335

15 15 15 15 15 15 15 2

Priority Level	Description
1	Operate When The System Is Armed
2	Operate When The System Is Disarmed
3	Operate When The System Is Armed Or Disarmed
4	Operate Always As Long As No Alarm memories Are Present
5	Operate If Armed & No Alarm Memories Are Present
6	Operate If Disarmed & No Alarm Memories Are Present
7	Operate If Armed Or Disarmed & No Alarm Memories Are Present

Table 47: Auxiliary Code Priority Levels

When the control panel has been partitioned, the Auxiliary Codes are global to all areas. This means that an output that is controlled from an Auxiliary Code can be operated from all areas. Auxiliary Codes cannot be dedicated to an area.

Code Retries

LOCATION 338

6

Code retries restricts the amount of times an invalid user code can be used in an attempt to operate the system.

This location sets the number of incorrect code attempts that will cause an alarm condition. When the number of incorrect code attempts equals the number programmed in this location, the system will carry out the following;

1. Activate the sirens, internal screamers and strobes connected to the control panel. Refer to "LOCATION 666" on page 157 to enable "Access Denied To Be Silent".
2. Shutdown all codepads (Including "CP5 Area Addressable (CP500A)" codepads and "CP5 Master Partitioned (CP500P)" codepads that are connected to the control panel and lock them out for the time period programmed in "LOCATION 640 - 641" on page 146.
3. Transmit an "Access Denied" (Contact ID Event Code 421) report to the base station receiver. Refer to "LOCATION 484 - 487" on page 122 for more information.

Each time the system is armed or disarmed, the counter is reset. The number of attempts can be anywhere between 1 - 15. If you program a zero into this location, the code attempts are unlimited and neither of the three points listed above will take place. This function works when the system is in the armed or disarmed state.

Zone Programming

This Section Includes The Following:

- *Zone Programming*
- *Zone Operating Information*
- *Zone Reporting Information*
- *Zone Defaults*
- *Zone Options*
- *Zone Pulse Count*
- *Zone Pulse Count Handover*
- *Zone Pulse Count Time*
- *Day Alarm*
- *Day Alarm Resetting*
- *Day Alarm Latching*
- *Day Alarm Operation*
- *Day Alarm In Partitioning*
- *EOL Resistor Value*

Zone Programming

Each zone contains eight locations which are divided into two groups of four. The first four locations determine how the zone operates, while the second four locations contain the dialler reporting information.

Zone Operating Information

<i>Zone Type</i>	This location programs the “Zone Type” required (eg. Delay-1, Instant, 24 Hour etc).
<i>Zone Option</i>	This location controls the zone (eg. Lockout Siren, Silent etc).
<i>Zone Pulse Count</i>	This location sets how many times the zone must trigger within the time specified in the “Zone Pulse Count Time.
<i>Zone Pulse Count Time</i>	This parameter sets the time period for the number of times the zone must trigger before activating an alarm.

Zone Reporting Information

<i>Hundreds Digit</i>	The hundreds digit of the Contact ID Event Code is programmed into this location. This location is also the “Alarm Restore” code in all other reporting formats.
<i>Tens Digit</i>	The tens digit of the Contact ID Event Code is programmed into this location. This location is the “Alarm” code in all other reporting formats.
<i>Units Digit</i>	The units digit of the Contact ID Event Code is programmed into this location. This location is the “Channel” code that the zone reports on in other reporting formats other than Contact ID Format.
<i>Dialler Channel</i>	This location is factory default to report on dialler channel 1. If the system has been partitioned, zones allocated to report on areas other than Area 1 should have their dialler channel correspond to the area number that the zone is allocated to.



*Zone
Type*



*Zone
Option*



*Zone Pulse
Count*



*Zone Pulse
Count Time*



*Hundreds
Digit*



*Tens
Digit*



*Units
Digit*



*Dialler
Channel*

Zone Defaults

		Zone 1 Location 340 - 347 <div>2 0 0 0 1 3 0 1</div>	Zone 2 Location 348 - 355 <div>1 0 0 0 1 3 0 1</div>
Zone 3 Location 356 - 363 <div>1 0 0 0 1 3 0 1</div>	Zone 4 Location 364 - 371 <div>1 0 0 0 1 3 0 1</div>	Zone 5 Location 372 - 379 <div>1 0 0 0 1 3 0 1</div>	
Zone 6 Location 380 - 387 <div>0 0 0 0 1 3 0 1</div>	Zone 7 Location 388 - 395 <div>0 0 0 0 1 3 0 1</div>	Zone 8 Location 396 - 403 <div>12 0 0 0 1 3 3 1</div>	
Zone 9 Location 404 - 411 <div>0 0 0 0 1 3 0 1</div>	Zone 10 Location 412 - 419 <div>0 0 0 0 1 3 0 1</div>	Zone 11 Location 420 - 427 <div>0 0 0 0 1 3 0 1</div>	
Zone 12 Location 428 - 435 <div>0 0 0 0 1 3 0 1</div>	Zone 13 Location 436 - 443 <div>0 0 0 0 1 3 0 1</div>	Zone 14 Location 444 - 451 <div>0 0 0 0 1 3 0 1</div>	
Zone 15 Location 452 - 459 <div>0 0 0 0 1 3 0 1</div>	Zone 16 Location 460 - 467 <div>0 0 0 0 1 3 0 1</div>		

Zone Types

There are sixteen different zone types to choose from. Each zone has the ability to be programmed as any one of the types listed below;

<i>Zone Type</i>	<i>Description</i>	<i>Zone Type</i>	<i>Description</i>
0	Instant	8	Delay-1 + Isolated In STAY Mode 1
1	Handover	9	Delay-2 + Isolated In STAY Mode 1
2	Delay-1	10	Delay-3 + Isolated In STAY Mode 1
3	Delay-2	11	Delay-4 + Isolated In STAY Mode 1
4	Delay-3	12	24 Hour Burglary
5	Delay-4	13	24 Hour Fire
6	Instant + Isolated In STAY Mode 1	14	Chime Only
7	Handover + Isolated In STAY Mode 1	15	Zone Not Used

Table 48: Zone Types

0 *Instant Zone*

An Instant zone will sound the sirens and operate the dialler as soon as it registers as unsealed after the exit time has expired.

1 *Handover Zone*

A Handover zone will act as an instant zone if it has been triggered by itself. If a handover zone is triggered after a delay zone, the remaining delay time will handover from the delay zone to the handover zone. Handover may be sequential or random. Refer to Option 2 in "LOCATION 666" on page 157 if you require handover to be sequential or non sequential.

2 *Delay-1 Zone*

A Delay-1 zone will have a delay time determined by the value in "Entry Timer 1" on page 144.

3 *Delay-2 Zone*

A Delay-2 zone will have a delay time determined by the value in "Entry Timer 2" on page 144.

4 *Delay-3 Zone*

A Delay-3 zone will have a delay time determined by the value in "Entry Timer 3" on page 144.

5 *Delay-4 Zone*

A Delay-4 zone will have a delay time determined by the value in "Entry Timer 4" on page 144.

6 *Instant Zone + Isolated In STAY Mode 1*

This zone will act as an Instant zone when the system is armed in the AWAY Mode, but will be automatically isolated when the system is armed in STAY Mode 1.

7 *Handover Zone + Isolated In STAY Mode 1*

This zone will act as a Handover zone when the system is armed in the AWAY Mode, but will be automatically isolated when the system is armed in STAY Mode 1.

8 *Delay-1 Zone + Isolated In STAY Mode 1*

This zone will act as a Delay-1 zone when the system is armed in the AWAY Mode, but will be automatically isolated when the system is armed in STAY Mode 1.

9 *Delay-2 Zone + Isolated In STAY Mode 1*

This zone will act as a Delay-2 zone when the system is armed in the AWAY Mode, but will be automatically isolated when the system is armed in STAY Mode 1.

10 *Delay-3 Zone + Isolated In STAY Mode 1*

This zone will act as a Delay-3 zone when the system is armed in the AWAY Mode, but will be automatically isolated when the system is armed in STAY Mode 1.

11 *Delay-4 Zone + Isolated In STAY Mode 1*

This zone will act as a Delay-4 zone when the system is armed in the AWAY Mode, but will be automatically isolated when the system is armed in STAY Mode 1.

12 *24 Hour Burglary Zone*

A 24 Hour Burglary zone is always ready to trigger the horn speaker, bell and strobe regardless of whether the system is in the armed or disarmed state.

13 *24 Hour Fire Zone*

A 24 Hour Fire zone is always ready to trigger the horn speaker, bell and strobe regardless of whether the system is in the armed or disarmed state. A distinct fire sound is emitted through the horn speaker to indicate this type of alarm condition. This fire sound is completely different to the burglary sound.

14 *Chime Zone (Follow Me)*

A Chime zone is not a burglary zone. It can never sound the sirens or trigger the dialler. Its purpose is to map it to a programmable output for an indication of sealed or unsealed. Refer to Output Event Type "4,5" on page 136.

Chime zones require EOL resistors and they will register at a remote codepad. These zones do not effect the operation of forced arming.

15 *Zone Not Used*

If a zone is not used, program it as a zone type of 15. This zone will never sound the sirens or trigger the dialler. An EOL resistor is not required if this zone type is used.

Zone Options

Option	Description
1	Lockout Siren
2	Lockout Dialler
4	Silent Alarm
8	Sensor Watch

Table 49: Zone Options

1&2 Lockout Siren & Lockout Dialler

Lockout means one activation per arming cycle (ie. A zone programmed for "Lockout" can only cause the sirens or dialler to operate once).

When the system is next armed, the zone can cause the sirens and dialler to operate once more. As can be seen by "Table 49: Zone Options", the sirens can be locked out but still leave the dialler to transmit all reports to the base station receiver by programming "Zone Option 1". Programming "Zone Option 2" will lockout the dialler but leave the sirens to be reset. Programming "Zone Option 3" (ie. 1+2=3), will lockout both the sirens and dialler. Restore signals will be transmitted when the system has been disarmed.

The *Solution-16* control panel performs lockout different to most other control panels in that only the first zone to trigger an alarm condition will be locked out. All other zones that are triggered during the same siren run time will reset when the sirens reset. This prevents an intruder from triggering all zones then waiting for the sirens to stop before re-entering the premises.

Example

All zones are programmed for both lockout siren and dialler. Zone 1 is triggered followed by all other zones causing the sirens to sound and the dialler to report to the base station receiver. Zone 1 will be the only zone that stops reporting to the base station receiver because of the first zone to trigger is locked out. The remaining zones will continue to report if they are triggered again.

(Solution-16 With Software Version 1.10 - 1.37)

For *Solution-16* control panels with software version 1.10 - 1.37, refer to "Swinger Shutdown Count" in "LOCATION 662" on page 150 to set the number of times the siren and/or dialler will activate before lockout will take effect.

(Solution-16 With Software Version 1.40 Onwards)

For *Solution-16* control panels with software version 1.40, refer to "LOCATION 662" on page 151 to set the number of times the siren will be allowed to activate before it will be locked out and "LOCATION 757" on page 151 to set the number of times the dialler will activate before lockout will take effect.

4 Silent Alarm

A zone programmed to be silent will not trigger the HORN SPEAKER, RELAY, STROBE or EDMSAT outputs. The dialler and all other programmable outputs will function as per their particular programming.

8 Sensor Watch

Sensor watch gives the control panel the ability to recognise that detection devices may have stopped working. This is a feature that monitors the operation of a zone over a programmed time period. Refer to "LOCATION 642 - 643" on page 146 for programming "Sensor Watch Time".

This value determines how many 24 hour periods a zone may remain continuously sealed before it registers as a "Sensor Watch" fault. The number of hours required to fulfil these 24 hour periods is only calculated while the system is in the disarmed state. Every time the system is armed the counter pauses calculating. Sensor watch will continue calculating the next time the system has been disarmed.

Example

If the "Sensor Watch Time" is programmed for two days in a situation where a premises is armed for twelve hours and disarmed for twelve hours each day, it will take four days before a zone can register as a faulty sensor watch zone.

Zone Pulse Count

Zone pulse count is the number of times a zone must be triggered before the zone registers as an alarm. The number of pulses vary between 0 - 15. The zone pulse count value is relative to a time frame (ie. The number of pulses must be present during a particular time frame). Refer to "Table 51: Zone Pulse Count Times" on page 113 for time frame settings.

Option	Number Of Pulses	Option	Number Of Pulses
0	None	8	8
1	1	9	9
2	2	10	10
3	3	11	11
4	4	12	12
5	5	13	13
6	6	14	14
7	7	15	15

Table 50: Number Of Pulses

Zone pulse count does not effect the LED indicators on a keypad. The triggering of a zone will always illuminate the respective indicator but an alarm condition will not occur until the total number of pulses has been reached.

A zone programmed as a day alarm zone is not effected by any pulse count setting (ie. Pulse count is only relevant when the system is in the armed state).

Note: A pulse count of zero disables both the zone pulse count and zone pulse count time. The zone will cause an alarm as soon as it becomes unsealed. The loop response time in this instance defaults to 150 ms.

Zone Pulse Count Handover

Zone pulse count handover will only operate with zone pulse count time options 8 - 15. Refer to "Zone Pulse Count Time" on page 113 for more information.

Any zone which registers one trigger pulse will automatically increment any other zones pulse count which has already registered at least one trigger pulse during its respective time. To enable this option refer to "LOCATION 667" on page 158 for further details.

Note: From Software Version 1.37 onwards, 24 hour zones do not receive any handover pulses from other zones. 24 hour zones may handover pulses to other zones.

Zone Pulse Count Time

Zone pulse count time is the time frame or period over which the programmed number of pulses must register before an alarm condition is generated.

<i>20 ms Loop Response Time</i>		<i>150 ms Loop Response Time</i>	
<i>Option</i>	<i>Pulse Count Time</i>	<i>Option</i>	<i>Pulse Count Time</i>
0	0.5 Seconds	8	20 Seconds
1	1 Second	9	30 Seconds
2	2 Seconds	10	40 Seconds
3	3 Seconds	11	50 Seconds
4	4 Seconds	12	60 Seconds
5	5 Seconds	13	90 Seconds
6	10 Seconds	14	120 Seconds
7	15 Seconds	15	200 Seconds

Table 51: Zone Pulse Count Times

For zone pulse count time, options 0 - 7 have a zone loop response time of 20 ms. For zone pulse count time, options 8 - 15 have a zone loop response time of 150 ms. Loop response time is the length of time a zone must be triggered before it can register as unsealed or as a valid pulse.

Inertia sensors should use options 0 - 7, while PIR detectors should use options 8 - 15.

Note: Zones which trigger for more than 10 seconds continuously will be considered unsealed and cause an alarm condition irrespective of any zone pulse count or zone time settings

LOCATION 336

1

Option	Day Alarm Zone
1	Zone 1
2	Zone 2
4	Zone 3
8	Zone 4

Table 52: Day Alarm Zones 1-4

LOCATION 337

O

Option	Day Alarm Zone
1	Zone 5
2	Zone 6
4	Zone 7
8	Zone 8

Table 53: Day Alarm Zones 5-8

Day alarm enables a combination of zones to be monitored while the system is in the disarmed state. Indications are available via any of the programmable outputs including the codepad buzzer. This function has been expanded to accommodate latching and non latching day alarm output event types. Refer to Output Event Types "0,14" and "0,15" on page 132 for further information on programming an output for monitoring day alarm zones.

When the system has been armed in the AWAY Mode or STAY Mode 1/STAY Mode 2, zones that have been programmed as day alarm zones will activate the sirens and dialler just as non day alarm zones do. When day alarm has been activated, it will ignore any zone pulse count settings that have been programmed for that zone (ie. Zone pulse count is only relevant when the system has been armed).

Day Alarm Resetting

An output that is programmed as "Day Alarm Resetting" will operate when a zone programmed for day alarm has been triggered. The output will reset when the zone has returned to normal. This will only occur when the system is disarmed.

Day Alarm Latching

An output that is programmed as "Day Alarm Latching" will operate when a zone programmed for day alarm has been triggered. The ZONE indicator and the latching output will reset when the **AWAY** button has been pressed. This will only occur when the system is disarmed. Refer to "Output Event Type - 0,15" on page 132 for more information.

If the codepad buzzer has been programmed to operate when a day alarm zone has triggered, all relevant zone indicators will flash while the codepad beeps once a second until the **AWAY** button is pressed.

Day Alarm Operation - (Software Version 1.10)

How To Turn Day Alarm ON

1. Enter your **MASTER CODE** followed by **7** and the **AWAY** button.
Three beeps will be heard.

How To Turn Day Alarm OFF

1. Enter your **MASTER CODE** followed by **7** and the **AWAY** button.
Two beeps will be heard.

Day Alarm Operation - (Software Version 1.20 Onwards)

How To Turn Day Alarm ON

1. Hold down the **4** button until three beeps are heard.

How To Turn Day Alarm OFF

1. Hold down the **4** button until two beeps are heard.

If a zone has been programmed for day alarm, the zone can be isolated in the normal way so that it does not register as a day alarm zone. Only zones 1 - 8 can be used as day alarm zones.

The STAY indicator can be programmed to indicate whether day alarm has been turned "On" or "Off". When day alarm has been turned "On", the STAY indicator will flash every three seconds. Refer to "LOCATION 669" on page 162 to enable this option.

Monitoring of zones 9 - 16 can be achieved by programming an output to mimic a zone. Refer to Output Event Types on page 131 for further information.

Day Alarm In Partitioning

Day alarm operates independently for each area when the system has been partitioned. Any area can turn day alarm "On" or "Off" without effecting another area.

LOCATION 339

4

Option	Resistor Value	Option	Resistor Value
1	1K (Brown, Black, Red)	9	10K (Brown, Black, Orange)
2	1K5 (Brown, Green, Red)	10	12K (Brown, Red, Orange)
3	2K2 (Red, Red, Red)	11	22K (Red, Red, Orange)
4	3K3 (Orange, Orange, Black, Brown) 1%	12	Reserved
5	3K9 (Orange, White, Red)	13	Reserved
6	4K7 (Yellow, Violet, Red)	14	Reserved
7	5K6 (Green, Blue, Red)	15	3K3 + 6K8 (Split EOL For 16 Zones)
8	6K8 (Blue, Grey, Black, Brown) 1%		

Table 54: EOL Resistor Values

The control panel has the ability to be programmed for different values of EOL resistors. This feature is only applicable to zones one through to eight. This is a global parameter and will effect all eight zones simultaneously. It gives the ability to fit the *Solution- 16* control panel into an existing installation without having to change the EOL resistors. This feature also increases the security of the system as there are eleven possible EOL resistor values that can be used. This makes it extremely difficult for anyone to tamper with the system.

The EOL resistor value for the zones can be chosen from any of the different values listed. If 16 zones are required, an EDM Zone Expansion Board will be required to be fitted to the control panel and enabled in "LOCATION 672" on page 165.

If split EOL resistors have been selected, the control panel will look for sixteen EOL resistors consisting of 3K3 resistors for zones 1 - 8 and 6K8 resistors connected in parallel for zones 9 - 16. The zone 1 termination on the PCB becomes the termination for zones 1 and 9.

Note: Caution should be exercised when using split EOL resistors to create 16 zones. This configuration is only suitable for normally closed contacts. If normally open contacts are used, as is the case with most types of smoke detectors, a short circuit on one zone will trigger both zones connected in parallel.

If there is a requirement to use a normally open contact with split EOL, program either the primary or secondary zone as not used.

If split EOL resistors are not suitable, there is a choice of two eight zone expansion boards which can be purchased and fitted to the control panel. The Eight Zone Expansion Board (CC883) can be programmed for different resistor values, whereas the Eight Zone Expansion Board (CC885) is fixed for 3K3 EOL resistors. These eight zone expansion boards provide additional terminations for zones 9 - 16. Refer to "LOCATION 672" on page 165 to enable the expansion board fitted.

System Status Information

This Section Includes The Following:

- *Bypass Codes For Zones 1-8*
- *Bypass Codes For Zones 9-16*
- *Trouble Codes For Zones 1-8*
- *Trouble Codes For Zones 9-16*
- *Codepad Duress*
- *Codepad Panic*
- *Access Denied*
- *AC Fail*
- *Low Battery*
- *Program Altered Code*
- *Sensor Watch*
- *Open/Close Codes*
- *Test Reports*

System Status Information

This section covers features that are involved with the basic house keeping of the system. This includes monitoring of the zones - whether they are isolated from the system or more importantly that they are actually operating, the status of both the AC mains and DC power to the system and codepad generated alarms activated by the user.

Bypass Codes For Zones 1-8

LOCATION 468 - 469

99

Location	Description
468	Alarm Or Expansion Code In 4+2 Format
469	Restore Code In 4+2 Format

Table 55: Zone Bypass Codes For Zones 1-8

A zone is bypassed when it is manually isolated. A "Zone Bypass" report (Contact ID Event Code 570) will be transmitted at the end of exit time for zones that have been manually isolated. 24 hour zones cannot be manually isolated, therefore they will never transmit bypass reports.

A "Zone Bypass Restore" report will be transmitted when the system has been disarmed. If bypass restore is not programmed, it can be assumed that it will transmit a bypass restore report when an opening report is transmitted. All bypassed zones are automatically cleared when the system has been disarmed.

The bypass code parameter is used as the expansion digit in 4+2 Formats. It has no effect on Contact ID Format as a zone bypass will always be reported on event code 570.

A "Zone Bypass" report will be transmitted on which ever dialler channel the respective zone has been allocated to when the system has been partitioned.

Note: If "Zone Bypass" reports are not required, program "LOCATION 468 - 471" with a zero.

Bypass Codes For Zones 9-16

LOCATION 470 - 471

99

Location	Description
470	Alarm Or Expansion Code In 4+2 Format
471	Restore Code In 4+2 Format

Table 56: Zone Bypass Codes For Zones 9-16

Refer to "Bypass Codes For Zones 1-8" for more information.

Trouble Codes For Zones 1-8**LOCATION 472 - 473****99**

<i>Location</i>	<i>Description</i>
472	Alarm Or Expansion Code In 4+2 Format
473	Restore Code In 4+2 Format

Table 57: Zone Trouble Codes For Zones 1-8

A zone is in trouble when it is unsealed at the end of exit time. A "Sensor Trouble" report (Contact ID Event Code 380) will be transmitted to indicate that one or more zones have been automatically isolated by the system. 24 hour zones that are unsealed at the end of exit time will not transmit a "Sensor Trouble" report as the restore for that zone is still outstanding.

A "Sensor Trouble" restore report will be transmitted for burglary zones when the zone reseals or when the system is next disarmed (which ever happens first). A 24 hour zone will only transmit a restore signal when it has resealed.

The trouble code parameter is used as the expansion digit in 4+2 Format. It has no effect on Contact ID Format as a "Sensor Trouble" report will always be reported on event code 380.

A "Sensor Trouble" report will be transmitted on which ever dialler channel the respective zone has been allocated to when the control panel has been partitioned.

Note: If "Sensor Trouble" reports are not required, program "LOCATION 472-475" with a zero.

"Zone Trouble" and "Zone Trouble Restore" reports will not be transmitted via securitel for software version 1.10 and software version 1.20

Trouble Codes For Zones 9-16**LOCATION 474 - 475****99**

<i>Location</i>	<i>Description</i>
474	Alarm Or Expansion Code In 4+2 Format
475	Restore Code In 4+2 Format

Table 58: Zone Trouble Codes For Zones 9-16

Refer to "Trouble Codes For Zones 1-8" for more information.

Codepad Duress**LOCATION 476 - 479****1 2 1 1**

<i>Location</i>	<i>Description</i>
476	Contact ID Event Code - Hundreds Digit
477	Contact ID Event Code - Tens Digit Or Alarm Or Expansion Digit In 4+2 Format
478	Contact ID Event Code - Units Digit Or Channel Location For All Other Formats
479	Dialler Channel (Dialler Channel 1, 2, 3 or 4)

Table 59: Codepad Duress Locations

A "Duress" report (Contact ID Event Code 121) will be transmitted to the base station receiver when the **9** button is added to the end of any valid user code being used to disarm the system. This alarm will always be silent. A duress alarm can be triggered during exit time (ie. If the system has been armed and then disarmed by adding the **9** button to the end of the user code before exit time has expired, a "Duress" report will be transmitted. Adding **9** to the end of a user code when arming the system will not cause a duress alarm.

Note: Restore signals are not transmitted for this event. If a "Duress" report is not required, program the dialler channel "LOCATION 479" with a zero.

LOCATION 480 - 483**1201**

<i>Location</i>	<i>Description</i>
480	Contact ID Event Code - Hundreds Digit
481	Contact ID Event Code - Tens Digit Or Alarm Or Expansion Digit In 4+2 Format
482	Contact ID Event Code - Units Digit Or Channel Location For All Other Formats
483	Dialler Channel (Dialler Channel 1, 2, 3 or 4)

*Table 60: Codepad Panic Locations**Software Version 1.10 - 1.36*

A "Panic Alarm" report (Contact ID Event Code 120) will be transmitted to the base station receiver when any two outside buttons in the same horizontal row on a codepad are pressed simultaneously. This is an audible alarm. Refer to "LOCATION 666" on page 157 if you require codepad panic to be silent.

If Installer's Programming Mode has been entered and a codepad panic alarm has been triggered, the Installer's Programming Mode will be terminated as the panic alarm has priority.

Note: Restore signals are not transmitted for this event. If a "Panic Alarm" report is not required, program the dialler channel "LOCATION 483" with a zero.

Software Version 1.37 Onwards

A "Panic Alarm" report (Contact ID Event Code 120) will be transmitted to the base station receiver when either the two outside buttons **1** and **3** or **STAY** and **AWAY** are pressed simultaneously. This is an audible alarm. Refer to "LOCATION 666" on page 157 if you require codepad panic to be silent.

A "Fire Alarm" report (Contact ID Event Code 110) will be transmitted to the base station receiver when the **4** and **6** buttons are pressed simultaneously. This is an audible alarm.

A "Medical" report (Contact ID Event Code 100) will be transmitted to the base station receiver when the **7** and **9** buttons are pressed simultaneously. This is an audible alarm.

Note: To disable both the reporting and the audible alarms for ALL codepad alarm events, the dialler channel for "Codepad Panic" in "LOCATION 483" will need to be programmed as zero and enable "Enable Codepad Panic To Be Silent" in "LOCATION 666" on page 157.

Access Denied**LOCATION 484 - 487****4211**

<i>Location</i>	<i>Description</i>
484	Contact ID Event Code - Hundreds Digit
485	Contact ID Event Code - Tens Digit Or Alarm Or Expansion Digit In 4+2 Format
486	Contact ID Event Code - Units Digit Or Channel Location For All Other Formats
487	Dialler Channel (Dialler Channel 1, 2, 3 or 4)

Table 61: Access Denied Locations

An "Access Denied" report (Contact ID Event Code 421) will be transmitted to the base station receiver when the number of incorrect code attempts equals the number programmed in "LOCATION 338" on page 105. This is an audible alarm. Refer to Option 8 in "LOCATION 666" on page 157 if you require this alarm to be silent.

Note: Restore signals for this event are not transmitted. If an "Access Denied" report is not required, program the dialler channel "LOCATION 487" with a zero.

AC Fail**LOCATION 488 - 491****3011**

<i>Location</i>	<i>Description</i>
488	Contact ID Event Code - Hundreds Digit
489	Contact ID Event Code - Tens Digit Or Alarm Or Expansion Digit In 4+2 Format
490	Contact ID Event Code - Units Digit Or Channel Location For All Other Formats
491	Dialler Channel (Dialler Channel 1, 2, 3 or 4)

Table 62: AC Fail Locations

An "AC Loss" report (Contact ID Event Code 301) will be transmitted to the base station receiver when the AC mains supply has been disconnected for two minutes. If you require an "AC Loss" report to be transmitted to the base station receiver when the AC mains supply has been disconnected for 1 hour, enable Option 4 in "LOCATION 667" on page 158.

A restore signal will be transmitted when the AC mains has been reconnected for two minutes. If you wish to ignore AC fail, enable Option 4 in "LOCATION 668" on page 160.

Note: If an "AC Loss" report is not required, program the dialler channel in "LOCATION 491" with a zero.

*Low Battery***LOCATION 492 - 495****3091**

<i>Location</i>	<i>Description</i>
492	Contact ID Event Code - Hundreds Digit
493	Contact ID Event Code - Tens Digit Or Alarm Or Expansion Digit In 4+2 Format
494	Contact ID Event Code - Units Digit Or Channel Location For All Other Formats
495	Dialler Channel (Dialler Channel 1, 2, 3 or 4)

Table 63: Low Battery Locations

A "Battery Test Failure" report (Contact ID Event Code 309) will be transmitted to the base station receiver when the systems battery voltage falls below 10.5 volts or when a dynamic battery test detects a low capacity battery.

The control panel continually monitors the battery voltage. Refer to "Fault Descriptions" on page 45. A dynamic battery test is performed every time the system (or an area) has been armed as well as every four hours from power up of the control panel.

A "Low Battery Restore" signal will be transmitted if the back up battery has been restored the next time the system is armed, or when the dynamic battery test reports the battery test is OK.

Note: If a "Battery Test Failure" report is not required, program the dialler channel "LOCATION 495" with a zero.

*Program Altered Code***LOCATION 496 - 499****3061**

<i>Location</i>	<i>Description</i>
496	Contact ID Event Code - Hundreds Digit
497	Contact ID Event Code - Tens Digit Or Alarm Or Expansion Digit In 4+2 Format
498	Contact ID Event Code - Units Digit Or Channel Location For All Other Formats
499	Dialler Channel (Dialler Channel 1, 2, 3 or 4)

Table 64: Program Altered Code

A "Panel Program Altered" report (Contact ID Event Code 306) will be transmitted to the base station receiver when data in one or more locations has been altered in the Installer's Programming Mode.

The transmission will report once Installer's Programming Mode has been terminated. Changes made via the Master Code functions do not cause the "Panel Program Altered" report to be transmitted.

Note: Restore signals are not transmitted for this event. If a "Panel Program Altered" report is not required, program the dialler channel in "LOCATION 499" with a zero.

Sensor Watch**LOCATION 500 - 503****3071**

<i>Location</i>	<i>Description</i>
500	Contact ID Event Code - Hundreds Digit
501	Contact ID Event Code - Tens Digit Or Alarm Or Expansion Digit In 4+2 Format
502	Contact ID Event Code - Units Digit Or Channel Location For All Other Formats
503	Dialler Channel (Dialler Channel 1, 2, 3 or 4)

Table 65: Sensor Watch Code

A "Self Test Failure" report (Contact ID Event Code 307) will be transmitted to the base station receiver when a zone has not been triggered during the "Sensor Watch Time" in "LOCATION 642 - 643" on page 146. This report will continue to be transmitted (according to the frequency of the sensor watch time) until the fault has been rectified.

Note: Software Version 1.10 - 1.31 transmitted "Sensor Trouble" as Contact ID Event Code 383. From Software Version 1.32, the Contact ID Event Code was changed to 307 - "Self Test Failure".

To clear the fault and stop any further reporting, the zone which registered the fault must be unsealed and resealed again. Refer to "LOCATION 642 - 643" on page 146 to set the number of days a zone may remain sealed before registering as a fault. Refer to "Zone Options" on page 111 to enable a zone to be monitored by the sensor watch feature.

Note: Restore signals are not transmitted for this event. If a "Self Test Failure" report is not required, program the dialler channel "LOCATION 503" with a zero.

Open/Close Codes**LOCATION 504 - 505****89**

<i>Location</i>	<i>Description</i>
504	Opening Report Code
505	Closing Report Code

Table 66: Open/Close Locations

An "Opening" report (Contact ID Event Code 401) will be transmitted to the base station receiver when the system has been disarmed from AWAY Mode. A "Closing" report (Contact ID Event Code 401) is transmitted at the end of exit time when the system has been armed in the AWAY Mode.

If an expanded format has been selected, this code will be used as the expansion code and the user number that armed or disarmed the system will follow in the same transmission.

Refer to "LOCATION 664" on page 155 for enabling "Open/Close" reports in STAY Mode. To enable "Open/Close" reports only after a previous alarm, refer to "LOCATION 664" on page 155.

Note: If you do not require "Open/Close" reports, program "LOCATION 504 - 505" with zero.

LOCATION 506 - 513

00000090

Location	Description
506	Actual Required Hour Of The Day (Tens Digit)
507	Actual Required Hour Of The Day (Units Digit)
508	Actual Required Minute Of The Day (Tens Digit)
509	Actual Required Minute Of The Day (Units Digit)
510	Repeat Interval In Days (Tens Digit)
511	Repeat Interval In Days (Units Digit)
512	Expansion Code For 4+2 Format
513	Test Report Options

Table 67: Test Report Locations

A "Test" report (Contact ID Event Code 602) is a specific signal that is transmitted to the base station receiver and is normally used to test the dialling and reporting functions of the control panel. Test reports will not be transmitted if the Subscriber ID Number is 0000.

When programming test reports, the control panel needs to know the hour and minute of the day the report is required as well as how often to transmit the report. Test reports are transmitted on a daily basis ranging from every day to every ninety nine days. Refer to "Installer Code Functions" on page 48 to set the first test report.

Note: If you do not require "Test" reports, program the repeat interval in "LOCATIONS 510-511" as zero.

Test Report Options

Option	Description
1	Send Test Reports Only If The System Is Armed
2	Send Test Reports On All Active Diallers - Partitioning Only

Table 68: Test Report Options

1 Send Test Reports Only If The System Is Armed

If this option has been enabled, test reports will only be transmitted when the system has been armed in the AWAY Mode or STAY Mode 1/STAY Mode 2. It is no longer necessary to send a test report as well as an opening and closing report every day.

During the working week most commercial premises would be open and therefore a test report is not necessary as "Open" and "Close" reports would have been transmitted. On the weekend however, the control panel would be armed and thus test reports would be sent at the programmed time.

2 Send Test Reports On All Active Diallers - Partitioned Systems Only

This location enables a "Test" report to be transmitted to the base station receiver for each of the Subscriber ID Numbers that have been programmed when the control panel has been partitioned.

Programmable Outputs


This Section Includes The Following:

- *Programmable Outputs*
- *Redirecting Outputs To The Codepad Buzzer*
- *Output Configurations*
- *Output Polarity*
- *Timing*
- *Pulsing Polarities*
- *One Shot Polarities*

Programmable Outputs


The *Solution- 16* control panel has six fully programmable outputs on the main PCB and an option of adding an extra eight outputs via the 8 Channel Output Expansion Board (CC884). The 8 Channel Output Expansion Board connects onto the pins marked JP5 and JP6 on the control panel and must be enabled in "LOCATION 672" on page 165. Programmable outputs require four parameters to be programmed in order to operate correctly.

<i>Event Type</i>	When To Operate
<i>Polarity</i>	How To Operate
<i>Time Base</i>	How Long To Operate For
<i>Time Multiplier</i>	How Often To Operate

 


<i>When To Operate</i>	Is selected from the Output Event Types listed on page 131. Each digit should be entered into the two corresponding locations for the output event type required.
<i>How To Operate</i>	Is selected from the “Table 70: Event Type Polarities For Software Version 1.20 - 1.40” on page 138 or “Table 71: Event Type Polarities Only For Software Version 1.10” on page 139. This determines whether the output remains operating for the duration of the event, pulses for the duration, operates once only (one shot) or latches on.
<i>How Long To Operate For</i>	Is determined by a time base and a multiplier. Refer to "Timing" on page 140 for further details.
<i>How Often To Operate For</i>	Is determined by a time base and a multiplier. Refer to "Timing" on page 140 for further details.


Output Configurations

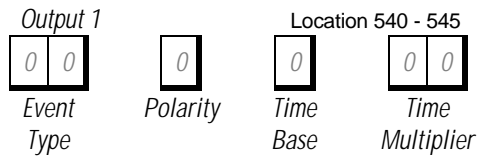


Default For EDMSAT Operation

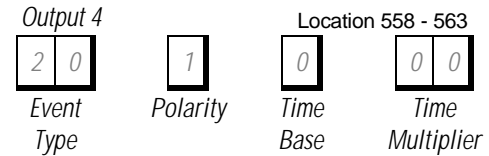


Default For Strobe Operation

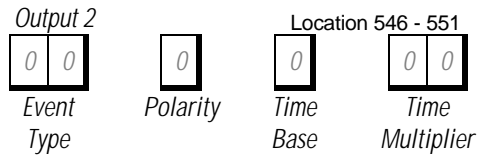


Default For EDMSTU Operation

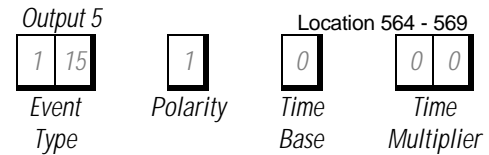

Default For Screammers - RELAY

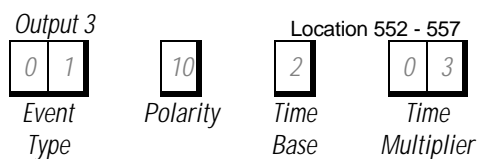


Default For Smoke Reset Operation

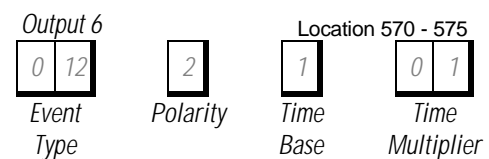


Default For Codepad Buzzer


The following outputs are available via an optional plug-on 8 Channel Output Expansion Board (CC884)

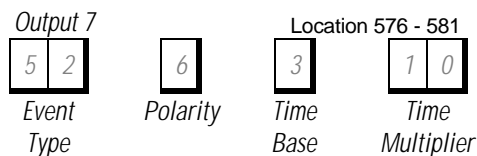


Default For Siren Operation - Area 1

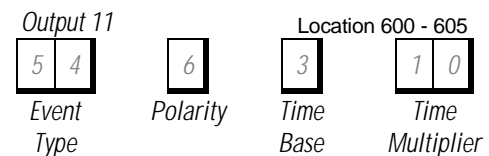


Default For Siren Operation - Area 3

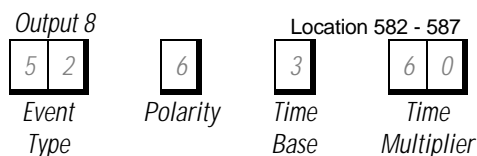


Default For Strobe Operation - Area 1

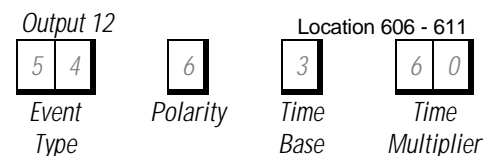


Default For Strobe Operation - Area 3

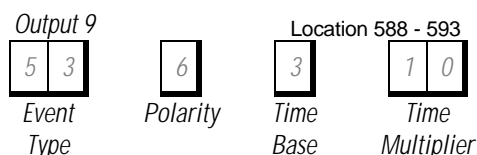


Default For Siren Operation - Area 2

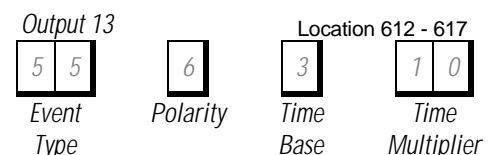

Default For Siren Operation - Area 4

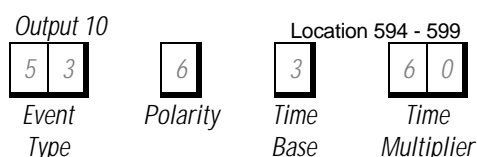

Default For Strobe Operation - Area 2

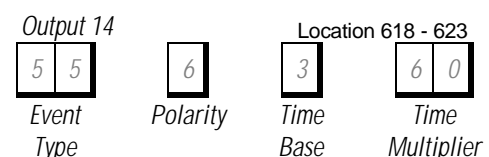

Default For Strobe Operation - Area 4

Redirecting Outputs To The Codepad Buzzer

Multiple output event types can be directed to the codepad buzzer so that it may be used to indicate any number of events.

This is achieved by selecting an output and programming it for the required output event type. When you are satisfied that the output is functioning correctly, change the first digit of the output event type (ie. The tens digit) by adding the value 8.

Example

3,0 Communications Failure

This event will operate when the dialler has made all possible attempts to reach the base station receiver. It will reset when the first "Kiss-Off" is received. This output event type is not applicable to domestic or voice reporting.

To redirect the above output event type to operate a codepad buzzer, program the output event type as below:

11,0 Communications Failure

This event will operate when the dialler has made all possible attempts to reach the base station receiver. It will reset when the first "Kiss-Off" is received. This output event type is not applicable to domestic or voice reporting.

The codepad buzzer will now operate instead of the output that has been programmed. The output is no longer functional and cannot be used for any other output event type.

Note: If you have used all programmable outputs on the control panel and require an additional output, program the output event type on any output between 7-14 and redirect the output to the remote codepad buzzer. This enables you and your customer to save money on purchasing the additional 8 Channel Output Expansion Board (CC884).

Output Event Types

There are approximately ninety different output event types to choose from. Each output event type is designated by two numbers. These two numbers need to be programmed into the appropriate locations of the output being used to indicate when the output should operate.

Note: All reset times are in reference to polarity 1 and 8. Reset times will vary depending on the polarity used.

O,0 EDMSAT - Satellite Siren (Output 1 Only)

This output controls all functions of an EDMSAT satellite siren (SS914). The option of speaker indication beeps will not operate via the EDMSAT for remote operations.

O,0 EDMSTU - Securitel Unit (Output 2 Only)

This output controls all functions of an EDMSTU Securitel unit (CS800).

O,0 PRINTER (Output 3 Only)

This output allows connection of a serial printer to be used to log all reports with a date and time stamp. Refer to "LOCATION 756" on page 93 to select the required baud rate that the serial printer will communicate.

O,1 System Armed

This output will operate when the system is armed in the AWAY Mode, STAY Mode 1 or STAY Mode 2. It will reset when the system has been disarmed. If the system has been partitioned, this event will operate when all areas have been armed in either AWAY Mode or STAY Mode 1.

O,2 System Disarmed

This output will operate when the system is in the disarmed state. It will reset as soon as the system becomes armed. If the system has been partitioned, this event will operate when all areas have been disarmed.

O,3 Armed In STAY Mode

This output will operate when the system has been armed in STAY Mode 1 or STAY Mode 2. When the system has been partitioned, this event will operate when any area has been armed in STAY Mode 1 or STAY Mode 2.

O,4 Armed In AWAY Mode (Software Version 1.20 Onwards)

This output will operate when the system has been armed in the AWAY Mode and will reset when the system is next disarmed. If the system has been partitioned, this event will operate when any area has been armed in the AWAY Mode.

O,4 Pre-Arming Alert Time (Software Version 1.10)

This output will operate during the time period before the control panel will automatically arm in AWAY Mode or STAY Mode 1. Once the control panel has automatically armed in the AWAY Mode or STAY Mode 1, the output will reset. To program the Pre-Arming Alert Time, refer to "LOCATION 654" on page 148.

O,5 Pre-Arming Alert Time (Software Version 1.20 Onwards)

This output will operate during the time period before the control panel will automatically arm in AWAY Mode or STAY Mode 1. Once the control panel has automatically armed in the AWAY Mode or STAY Mode 1, the output will reset. To program the Pre-Arming Alert Time, refer to "LOCATION 654" on page 148.

O,6 Exit Warning With All Zones Sealed Or Entry Warning

This output will operate during exit time when the control panel has been armed in AWAY Mode, STAY Mode 1 or STAY Mode 2 if all zones are sealed. This output event type will reset once exit time has expired.

The next time this output event type will operate will be during entry time and will reset once entry time has expired or the system has been disarmed. This output event type will also operate if a zone has triggered when the system has been armed in STAY Mode 1 or STAY Mode 2 if the Entry Guard Timer For STAY Mode has been programmed in "LOCATION 638 - 639" on page 145.

O,7 Exit Warning

This output operates during exit time when the system has been armed in AWAY Mode, STAY Mode 1 or STAY Mode 2. The output will reset once exit time has expired.

O,8 Exit Warning Finished

This output operates when the exit time has expired if the system has been armed in AWAY Mode, STAY Mode 1 or STAY Mode 2. The output will reset when the system has been disarmed.

O,9 Kiss-Off After End Of Exit Time

This output will operate after the first successful transmission to the base station receiver when exit time has expired. The output will reset when the system has been disarmed.

O,11 Entry Warning

This output will operate when either Entry Timer 1, Entry Timer 2, Entry Timer 3, Entry Timer 4 or Entry Guard Timer For STAY Mode are operating. The output will reset when the entry time expires.

O,12 Entry Warning + Day Alarm Resetting

This output combines both Entry Warning and Day Alarm Resetting so that either of these two events will activate the output.

If the output has been triggered by either Entry Timer 1, Entry Timer 2, Entry Timer 3, Entry Timer 4 or Entry Guard Timer For STAY Mode, the output will reset once the entry timer has expired or the system has been disarmed.

If the output has been triggered by a zone programmed for day alarm, the output will reset when the zone has resealed.

O,14 Day Alarm Resetting

This output will operate when a zone programmed for day alarm has been triggered. The output will reset when the day alarm zone has resealed.

O,15 Day Alarm Latching

This output will operate when a zone programmed for day alarm has been triggered. The output will reset when the **AWAY** button has been pressed.

If the control panel has been partitioned, pressing the **AWAY** button on a "CP5 Area Addressable (CP500A)" codepad other than that the zone was allocated or pressing the **AWAY** button on a "CP5 Master Partitioned Codepad (CP500P)" codepad will not reset the output. You can only reset this output on the area codepad that the zone has been allocated to when the system has been partitioned.

1,O Day Alarm Enabled (Software Version 1.20 Onwards)

This output will operate as soon as day alarm has been enabled. The output will reset when day alarm has been turned off. Refer to "Hold Down Functions" on page 64 for further information day alarm.

1,1 Timed Output

This output will operate when the time set in "LOCATION 656 - 659" on page 149 has been reached. This output can also be activated using the following methods:

1. Remote Codepad - Refer to "Turning Outputs On and Off" on page 60 for more information.
2. Via Touch Tone Telephone - Refer to "Operating The Control Panel Using The DTMF Command Module" on page 71 and "Turning Outputs On and Off" on page 60 for more information.
3. Via Alarm Link Software (CC816) - Refer to the Alarm Link Instruction Manual for more information.

1,2 Pre-Alert Warning For Timed Output

This output will operate for the duration of the pre-alert time set in "LOCATION 655" on page 149.

1,4 AC Fail

This output will operate as soon as the AC mains has failed. It will reset as soon as the AC mains has restored. This output will operate irrespective if Option 4 in "LOCATION 668" on page 160 has been enabled or disabled.

1,5 Low Battery

This output will operate when a dynamic battery test detects that the battery has failed or the battery voltage has fallen below 10.5 volts. The dynamic battery test is performed every four hours from when the system has been powered up or every time the system has been armed in AWAY Mode, STAY Mode 1 or STAY Mode 2.

This output will reset only after a dynamic battery test reports the backup battery is OK.

1,6 Horn Speaker Monitor Fail

If Option 4 in "LOCATION 665" on page 156 has been enabled, this output will operate when the horn speaker has been disconnected. The output will reset when the horn speaker has been reconnected.

1,7 Sensor Watch Alarm

This output will operate when the sensor watch count has been reached. Refer to "Zone Options" on page 111 for more information on programming zones for sensor watch. Refer to "LOCATION 642 - 643" on page 146 for setting how many days before a zone can register as a faulty sensor watch zone.

1,8 Codepad Medical Alarm (New - Software Version 1.37 Onwards)

This output will operate when a codepad medical alarm has been initiated by pressing the **7** and **9** buttons on the remote codepad simultaneously. This output will reset once a valid user code has been entered.

1,9 Codepad Fire Alarm (New - Software Version 1.37 Onwards)

This output will operate when a codepad medical alarm has been initiated by pressing the **4** and **6** buttons on the remote codepad simultaneously. This output will reset once a valid user code has been entered.

1,10 Codepad Panic Alarm (Software 1.10 - 1.36)

This output will operate when a codepad panic alarm (audible or silent) has been initiated by pressing the **1** and **3** buttons, the **4** and **6** buttons, the **7** and **9** buttons or the **STAY** and **AWAY** buttons on the remote codepad simultaneously. This output will reset once a valid user code has been entered.

1,10 Codepad Panic Alarm (Software 1.37 Onwards)

This output will operate when a codepad panic alarm (audible or silent) has been initiated by pressing the **1** and **3** buttons or the **STAY** and **AWAY** buttons on the remote codepad simultaneously. This output will reset once a valid user code has been entered at the remote codepad.

1,11 Codepad Duress Alarm

This output will operate when a duress alarm has been initiated by adding a **9** to the end of the user code being used to disarm the system. The output will reset the next time the system has been armed.

1,12 Codepad Tamper

This output will operate when the wrong code has been entered more times than allowed. Refer to "LOCATION 338" on page 105 for setting the number of incorrect attempts that may be allowed. This output will reset once a valid user code has been entered.

1,13 Speaker Beeps (New - Software Version 1.37)

This output will function during all remote radio/keyswitch operations allowing you to fit a 12V DC buzzer or light to provide status indication for the end user. Option 8 in "LOCATION 665" on page 156 is not required to be enabled for this event type to operate. Refer to "Table 69: Horn Speaker Beeps" for the identification beeps and their meanings.

No Of Beeps	System Status
1	System Disarmed
2	System Armed In AWAY Mode
3	System Armed In STAY Mode 1

Table 69: Horn Speaker Beeps

1, **15** Sirens Running

This output will operate for the duration of the siren run time programmed in "LOCATION 660" on page 149. When the sirens have been activated, this output will reset once the siren run time has expired.

2, **0** Strobe Operating

This output will operate when an alarm condition occurs and will reset once a valid user code has been entered, or when the system is next armed or disarmed.

2, **1** Silent Alarm

This output will operate whenever a zone programmed as silent has triggered. The output will reset when the siren run time expires, an audible alarm has triggered, or a valid user code has been entered.

2, **2** Alarm When In STAY Mode

This output will operate whenever an audible or silent zone alarm has triggered when the system has been armed in STAY Mode 1 or STAY Mode 2. The output will reset when the system has been disarmed.

2, **3** Alarm When In AWAY Mode

This output will operate whenever an audible or silent zone alarm has triggered when the system has been armed in the AWAY Mode. The output will reset when the system has been disarmed.

2, **5** Fire Alarm Resetting

This output will operate when a 24 hour fire zone is triggered. The output will reset once a valid user code has been entered or when siren run time expires. If the control panel has been partitioned, a user code allocated to another area may reset this output.

2, **6** Fire Alarm Latching

This output will operate when a 24 hour fire zone has triggered and will reset when the system has been armed or disarmed. If the system has been partitioned, the output will reset when any area has been armed or disarmed.

2, **7** Fire Alarm Verification (New - Software Version 1.37 Onwards)

This feature is used on some commercial fire control panels to reduce false alarms on smoke detectors. It is conceptually very similar to zone pulse count as used in some motion detectors. Basically, a fire zone is allotted a pulse count of 3 pulses over a period of 3 minutes.

If the smoke detector trips, the voltage to the smoke detector is disconnected for 15 seconds and then reapplied. No alarm has registered.

If within 3 minutes of the first trigger the unit triggers again, no alarm will be registered and the voltage to the smoke detector will again be disconnected for 15 seconds and then reapplied.

If a third trigger is detected within 3 minutes of the first trigger, (ie. 3 pulses in 3 minutes) a fire alarm will be registered. Power to the smoke detector will be maintained to facilitate unit identification via the detector memory.

This output should be connected to the negative side of any fire/smoke detector. To configure an output for this feature, use the following settings.

EVENT TYPE = 2,7 POLARITY = 10 TIMEBASE = 2 MULTIPLIER = 15

The zone which the fire/smoke detector is connected to should be programmed as follows:

ZONE TYPE = 13 OPTION = 0 ZONE PULSE COUNT = 3 ZONE TIME = 15

2,8 Remote Control 1

2,9 Remote Control 2

2,10 Remote Control 3

2,11 Remote Control 4

These outputs can be remotely activated (Turned "On" or "Off") via the following methods:

1. Remote Codepad - Refer to "Turning Outputs On and Off" on page 60 for further information.
2. Remotely Via Touch Tone Phone - Refer to "Operating The Control Panel Using The DTMF Command Module" on page 71 and "Turning Outputs On and Off" on page 60 for further information.
3. Remotely Via Alarm Link Software - Refer to your Alarm Link Instruction Manual for further information.

2,12 Auxiliary Code 1

This output will operate when Auxiliary Code 1 has been entered. The output will reset when Auxiliary Code 1 has been entered again. The output can be activated via the remote codepad, the Alarm Link Software (CC816) or a touch tone telephone if a DTMF Command Module (CC886) has been enabled and connected to the control panel.

2,13 Auxiliary Code 2

This output will operate when Auxiliary Code 2 has been entered. The output will reset when Auxiliary Code 2 has been entered again. The output can be activated via the remote codepad, the Alarm Link Software (CC816) or a touch tone telephone if a DTMF Command Module (CC886) has been enabled and connected to the control panel.

2,14 Telephone Line Fault

This output will operate when the Solution Line Fault Module (CC887) detects that the telephone line has been disconnected for more than 40 seconds. The output will reset once the telephone line has been restored continuously for more than 40 seconds. This output will not operate unless the Solution Line Fault Module (CC887) has been enabled in "LOCATION 673" on page 168.

2,15 Communications Failure After 3 Unsuccessful Calls

This output will operate when the communication dialler has made 3 unsuccessful calls to the base station receiver. The output will reset when all messages have been transmitted (ie. When the buffer is empty or when all possible attempts have been made).

3,0 Communications Failure

This event will operate when the communication dialler has made all possible attempts to reach the base station receiver. It will reset when the first "Kiss-Off" has been received. This output does not operate for domestic or voice reporting formats.

3,1 Dialler Disabled

This output will operate as long as the communication dialler has been disabled in "LOCATION 663" on page 154. The output will reset once the dialler reporting functions has been enabled in "LOCATION 663".

3,2 Dialler Active

This output will operate when the communication dialler is on-line. The output will reset when the communication dialler has released the telephone line.

3,3 Ring Detect (New - Software Version 1.37 Onwards)

This output will operate when an incoming call has been detected. The output will reset when the ringing has stopped or when the call has been answered.

- 3,5 Mimic Zone 1**
- 3,6 Mimic Zone 2**
- 3,7 Mimic Zone 3**
- 3,8 Mimic Zone 4**
- 3,9 Mimic Zone 5**
- 3,¹⁰ Mimic Zone 6**
- 3,¹¹ Mimic Zone 7**
- 3,¹² Mimic Zone 8**

- 3,¹³ Mimic Zone 9**
- 3,¹⁴ Mimic Zone 10**
- 3,¹⁵ Mimic Zone 11**
- 4,0 Mimic Zone 12**
- 4,1 Mimic Zone 13**
- 4,2 Mimic Zone 14**
- 4,3 Mimic Zone 15**
- 4,4 Mimic Zone 16**

These output types will mimic the zone inputs. The output will operate when the zone is unsealed and will reset when the zone has resealed. They will operate regardless of the zone type chosen (ie. A zone "Not Used" can still operate a mimic output). This feature operates when the system is armed or disarmed.

4,5 Global Chime

This output will operate when any zones programmed as "Chime" have triggered. The output will reset when the zone has resealed.

4,6 Zone Not Sealed

This output will operate whenever a burglary zone is unsealed. Chime zones will not operate this output event type.

4,7 Zone Not Sealed After Exit Time

This output will operate at the end of exit time if a burglary zone is unsealed. The output will reset when all zones are sealed or the system has been disarmed. Chime zones will not operate this output event type.

4,¹⁰ Area 1 Has Zone Unsealed

4,¹² Area 3 Has Zone Unsealed

4,¹¹ Area 2 Has Zone Unsealed

4,¹³ Area 4 Has Zone Unsealed

These outputs will operate when a zone in their corresponding area has registered as unsealed in either the armed or disarmed state. The output will reset once the zone has resealed.

Example

Zone 1 is allocated to Area 1. If Zone 1 becomes unsealed, Output Event Type 4,10 will activate. The output will reset once the zone has resealed.

5,1 AC Mains 60 Hz Or 50 Hz

This output will activate when the AC mains has a frequency of 60 Hz. The output will reset once the AC mains has returned to 50 Hz.

5,2 Area 1 In Alarm

5,4 Area 3 In Alarm

5,3 Area 2 In Alarm

5,5 Area 4 In Alarm

These outputs will operate when a zone in their corresponding area has triggered an alarm. These outputs will reset once a valid user code has been entered.

Example

Zone 1 has been allocated to Area 1. If zone 1 has triggered into alarm, Output Event Type 5,2 will activate. The output will reset once a valid user code allocated to Area 1 has been entered.

5,6 Area 1 Is Armed

5,7 Area 2 Is Armed

These outputs will operate once their corresponding area has been armed in either AWAY Mode or STAY Mode 1. The output will reset once the corresponding area has been disarmed.

Example

If Area 1 has been armed in AWAY Mode or STAY Mode 1, Output Event Type 5,6 will activate. The output will reset once Area 1 has been disarmed.

5,8 Area 3 Is Armed

5,9 Area 4 Is Armed

5,10 Area 1 Is Disarmed

5,11 Area 2 Is Disarmed

5,12 Area 3 Is Disarmed

5,13 Area 4 Is Disarmed

These outputs will operate once their corresponding area has been disarmed. The output will reset once the corresponding area has been armed in AWAY Mode or STAY Mode 1.

Example

If Area 1 has been disarmed, Output Event Type 5,10 will operate. If Area 1 has been armed in AWAY Mode or STAY Mode 1, the output will reset.

5,14 Any Areas Armed

5,15 Any Areas Disarmed

Output Event Type 5,14 will operate when any area becomes armed if the control panel has been partitioned. The output will reset when all areas have been disarmed.

Output Event Type 5,15 will operate when any area becomes disarmed if the control panel has been partitioned. The output will reset when all areas have been armed.

6,0 Area 1 Codepad Data

6,1 Area 2 Codepad Data

6,2 Area 3 Codepad Data

6,3 Area 4 Codepad Data

If the control panel has been partitioned, "CP5 Area Addressable (CP500A)" codepads are required to be connected to separate outputs and programmed for the required area that the codepad belongs to.

Refer to "Codepad Connections For Partitioning" on page 184 for further information on connecting the "CP5 Area Addressable (CP500A)" codepads to the control panel.

Example

If the Area 1 codepad is to be connected to Output 2, you would then set DIP Switch 1 on the back of the "CP5 Area Addressable (CP500A)" codepad into the "ON" position. For the Area 1 codepad to communicate to and from the control panel, Output 2 will need to be programmed with Output Event Type 6,0.

Only Outputs 1 - 4 on the control panel can be used for these output event types. The 8 Channel Output Expansion Board (CC884) cannot be used for these output event types.

Output Polarity - (Software Version 1.20 - 1.40)

There are fifteen different polarities to choose from. Each polarity is designated by a number. This number needs to be programmed into the appropriate location of the output being used to indicate how the output should operate.

Option	Polarity	Option	Polarity
0	Output Not Used		
1	Normally Open, Going Low	8	Normally Low, Going Open
2	Normally Open, Pulsing Low	9	Normally Low, Pulsing Open
3	Normally Open, One Shot Low	10	Normally Low, One Shot Open
4	Normally Open, One Shot Low (Retrigger)	11	Normally Low, One Shot Open (Retrigger)
5	Normally Open, One Shot Low (Can Reset)	12	Normally Low, One Shot Open (Can Reset)
6	Normally Open, One Show Low (Alarm)	13	Normally Low, One Shot Open (Alarm)
7	Normally Open, Latching Low	14	Normally Low, Latching Open

Table 70: Event Type Polarities For Software Version 1.20 - 1.40

0 Output Not Used

If an output is not required for use, the polarity should be programmed as zero.

1 Normally Open, Going Low

This polarity is normally open circuit and will switch to zero volts when the event occurs. The output will switch back to open circuit when the event has restored. Time parameters are not applicable to this polarity.

2 Normally Open, Pulsing Low

This polarity is normally open circuit and will switch to pulsing zero volts when the event occurs. It will switch back to open circuit when the event has restored. Time parameters vary the "On" time of the pulse.

3 Normally Open, One Shot Low

This one shot polarity is normally open circuit and will switch to zero volts when the event occurs. It will switch back to open circuit when the time parameter setting has expired. This one shot time setting will always run its full duration and cannot be manually reset.

4 Normally Open, One Shot Low With Retrigger

This one shot polarity is normally open circuit and will switch to zero volts when the event occurs. Every time the event occurs, it will restart the one shot timer. The output will switch back to open circuit once the one shot time has expired.

This polarity is ideally suited for lighting control. A PIR can be used to trigger an output for turning on lights. While ever there is movement, the PIR will keep re-triggering the output and lengthen the time the lights will remain switched on.

5 Normally Open, One Shot Low With Reset

This one shot polarity is normally open circuit and will switch to zero volts when the event occurs. The output will switch back to open circuit when the one shot time has expired or when the event has returned to normal. This means the operation of the output can be shortened regardless of the time parameter.

6 Normally Open, One Shot Low With Alarm

This one shot polarity is normally open circuit and will switch to zero volts when the event occurs. The output will switch back to open circuit once the one shot time has expired, when the event has returned to normal or when the system has been disarmed.

This polarity is ideally suited for the operation of strobe lights as they can be timed (Up to 99 hours) to reset and prevent them from burning out or becoming annoying to others from prolonged operation.

7 Normally Open, Latching Low

This polarity is normally open circuit and will switch to zero volts when the event occurs. The output will switch back to open circuit once the 7 button on the remote codepad is held down until two beeps are heard. Time parameters are not applicable to this polarity.

8 Normally Low, Going Open

This polarity is normally zero volts and will switch to open circuit when the event occurs. The output will switch back to zero volts when the event has restored. Time parameters are not applicable to this polarity.

9 Normally Low, Pulsing Open

This polarity is normally zero volts and will switch to pulsing open circuit when the event occurs. It will switch back to zero volts when the event has restored. Time parameters vary the "On" time of the pulse.

10 Normally Low, One Shot Open

This one shot polarity is normally zero volts and will switch to open circuit when the event occurs. The output will switch back to zero volts when the time parameter has expired. This one shot time setting will always run its full duration and cannot be manually reset.

11 Normally Low, One Shot Open With Retrigger

This one shot polarity is normally zero volts and will switch to open circuit when the event occurs. Every time the event occurs, it will restart the one shot timer. The output will switch back to zero volts once the one shot time has expired.

12 Normally Low, One Shot Open With Reset

This one shot polarity is normally zero volts and will switch to open circuit when the event occurs. The output will switch back to zero volts when the one shot time has expired or when the event has returned to normal. This means the one shot timer can be shortened regardless of the time setting.

13 Normally Low, One Shot Open With Alarm

This one shot polarity is normally zero volts and will switch to open circuit when the event occurs. The output will switch back to zero volts when the one shot time has expired, when the event has returned to normal or when the system has been disarmed. This means that the one shot timer can be shortened regardless of the time setting.

14 Normally Low, Latching Open

This polarity is normally zero volts and will switch to open circuit when the event occurs. The output will switch back to zero volts once the 7 button on the remote codepad has been held down until two beeps are heard. Time parameters are not applicable to this polarity.

Output Polarity - (Software Version 1.10 Only)

There are thirteen different polarities to choose from. Each polarity is designated by a number. This number needs to be programmed into the appropriate location of the output being used to indicate how the output should operate.


Note: Refer to "Output Polarity - (Software Version 1.20 - 1.40)" on page 138 for the description of the different polarity types.

Option	Polarity	Option	Polarity
0	Output Not Used		
1	Normally Open, Going Low	8	Normally Low, Going Open
2	Normally Open, Pulsing Low	9	Normally Low, Pulsing Open
3	Normally Open, One Shot Low	10	Normally Low, One Shot Open
4	Normally Open, One Shot Low (Can Reset)	11	Normally Low, One Shot Open (Can Reset)
5	Normally Open, One Shot Low (Retrigger)	12	Normally Low, One Shot Open (Retrigger)
6	Normally Open, Latching Low	13	Normally Low, Latching Open

Table 71: Event Type Polarities Only For Software Version 1.10

Timing Of Outputs

The timing of outputs is calculated by a time base and a multiplier. These two values play different roles depending on the polarity selected. When programming pulsing outputs, both the "On" and "Off" times can be set. One shot polarities can be timed between 200 ms up to 99 hours in duration.

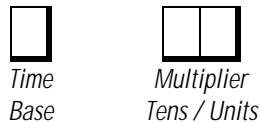

The maximum value that can be programmed in the two multiplier locations is **9,9**.

Option	Time Base
1	200 ms
2	1 Second
3	1 Minute (60 Seconds)
4	1 Hour (60 Minutes)


Table 72: Time Base Settings

The time base settings can be set to only one of the values listed in "Table 72: Time Base Settings". This is not like other options where more than one can be selected and the option numbers added together to give various combinations. The multiplier value is a two digit decimal number from 00-99. For greater accuracy, use 60 seconds for 1 minute intervals and use 60 minutes for one hour intervals.

Pulsing Polarities

When calculating pulsing polarities both the "On" and "Off" times need to be set. The duration or "On" time of an output is determined by selecting only one of the time bases from "Table 72: Time Base Settings" on page 140. This means there are only four "On" times to choose from.

 The "Off" time is calculated as a multiple of the "On" time by choosing a decimal number between 0 and 99. If an output is required to operate for 200 ms every five seconds, program the time settings as follows;



ON Time	OFF Time	Increments	Tolerance
200 ms	200 ms - 19.8 ms	200 ms	+/- 200 ms
1 Sec	1 Sec - 99 Sec's	1 Sec	+/- 1 Sec
1 Min	1 Min - 99 Min's	1 Min	+/- 1 Min
1 Hour	1 Hour - 99 Hours	1 Hour	+/- 1 Hour

Table 73: Pulsing Time Settings

One Shot Polarities

The duration or "On" time of an output is determined by the product of the time base and the multiplier.

If an output is required to operate for five seconds, program the time settings as follows;



The "On" time is calculated by multiplying the time base setting (1 second) by the multiplier value (05).
(ie. 5 x 1 = 5 seconds)

On Time	Increments	Tolerance
200 ms - 19.8 Sec's	200 ms	+/- 200 ms
1 Sec - 99 Sec's	1 Sec	+/- 1 Sec
1 Min - 99 Min's	1 Min	+/- 1 Min
1 Hour - 99 Hours	1 Hour	+/- 1 Hour

Table 74: One Shot Time Settings

System Event Timers

This Section Includes The Following:

- *How To Program Entry/Exit Timers*
- *Entry Timer 1*
- *Entry Timer 2*
- *Entry Timer 3*
- *Entry Timer 4*
- *Exit Timer For AWAY Mode*
- *Exit Timer For STAY Mode 1*
- *Exit Timer For STAY Mode 2*
- *Entry Guard Timer For STAY Mode*
- *Codepad Lockout Time*
- *Sensor Watch Time*
- *System Date*
- *Auto Arming*
- *Auto Arming Pre-Alert Timer*
- *Auto Operation Pre-Alert Timer*
- *Auto Operation Of The Timed Output*
- *Siren Run Time*
- *Siren Sound Rate*
- *Swinger Shutdown Count*
- *Swinger Shutdown Count For Siren*
- *Swinger Shutdown Count For Dialler*
- *System Time*

System Event Timers

This section covers the features that involve timing. Features such as entry and exit times, sensor watch time, siren run time and system date and time along with a host of other timers are discussed extensively in this section.

How To Program Entry/Exit Timers

There are two locations to be programmed for Entry Timer 1, Entry Timer 2, Exit Time For AWAY Mode, Exit Time For STAY Mode 1/STAY Mode 2 and Entry Guard Time For STAY Mode.

The first location of the timer is for programming increments of between 0 - 15 seconds. The second location of the timer is for programming increments of 16 seconds. By adding these two locations together will give the total time required.

Entry Time

The *Solution- 16* control panel has four separate entry timers. Entry time can be programmed between 0 and 255 seconds in increments of one second. These will prove to be helpful when the control panel has been partitioned or in any installation that requires more than one entry timer.

Entry Timer 1

LOCATION 624 - 625 (Defaulted To 10 Seconds)

10 

Location	Description
624	1 Second Increments For Entry Timer 1
625	16 Second Increments For Entry Timer 1

Table 75: Entry Timer 1 Locations

Entry Timer 2

LOCATION 626 - 627 (Defaulted To 20 Seconds)

4 1

Location	Description
626	1 Second Increments For Entry Timer 2
627	16 Second Increments For Entry Timer 2

Table 76: Entry Timer 2 Locations

Entry Timer 3

LOCATION 628 - 629 (Defaulted To 30 Seconds)

14 **1**

Location	Description
628	1 Second Increments For Entry Timer 3
629	16 Second Increments For Entry Timer 3

Table 77: Entry Timer 3 Locations

Entry Timer 4

LOCATION 630 - 631 (Defaulted To 40 Seconds)

8 2

Location	Description
630	1 Second Increments For Entry Timer 4
631	16 Second Increments For Entry Timer 4

Table 78: Entry Timer 4 Locations

Exit Time

The control panel has three separate exit timers. Exit time can be programmed to be between 0 and 255 seconds in increments of one second. The remote codepad will always give one beep at the end of exit time when arming in AWAY Mode or one short beep at the end of exit time when arming in STAY Mode 1 or STAY Mode 2.

Exit Timer For AWAY Mode

LOCATION 632 - 633 (Defaulted To 60 Seconds)

12 **3**

Location	Description
632	1 Second Increments For Exit Timer For AWAY Mode
633	16 Second Increments For Exit Timer For AWAY Mode

Table 79: Exit Timer For AWAY Mode Locations

Exit Timer For STAY Mode 1

LOCATION 634 - 635 (Defaulted To 60 Seconds)

12 **3**

Location	Description
634	1 Second Increments For Exit Timer For STAY Mode 1
635	16 Second Increments For Exit Timer For STAY Mode 1

Table 80: Exit Timer For STAY Mode 1 Locations

Exit Timer For STAY Mode 2

LOCATION 636 - 637 (Defaulted To 60 Seconds)

12 **3**

Location	Description
636	1 Second Increments For Exit Timer For STAY Mode 2
637	16 Second Increments For Exit Timer For STAY Mode 2

Table 81: Exit Timer For STAY Mode 2 Locations

Entry Guard Timer For STAY Mode

LOCATION 638 - 639 (Defaulted To 60 Seconds)

12 **3**

Location	Description
638	1 Second Increments For Entry Guard Timer For STAY Mode
639	16 Second Increments For Entry Guard Timer For STAY Mode

Table 82: Entry Guard Timer For STAY Mode Locations

"Entry Guard Timer For STAY Mode" is the delay time used for ALL ZONES except 24 hour burglary and 24 hour fire zones when the system is armed in STAY Mode 1 or STAY Mode 2. Each zone including delay zones will have the entry delay as programmed in "LOCATION 638 - 639" (ie. The delay time programmed for a delay zone will be overridden by the entry guard timer). If the entry guard timer has been programmed as "0" each zone will act as per its programmed zone type.

*Codepad Lockout Time***LOCATION 640 - 641**

<i>Location</i>	<i>Description</i>
640	1 Second Increments For Codepad Lockout Time
641	16 Second Increments For Codepad Lockout Time

Table 83: Codepad Lockout Timer Locations

All codepads will be locked out for the specified time programmed if the wrong code has been entered more times than allowed by the code retry attempts in "LOCATION 338" on page 105. If the "Codepad Lockout Time" is programmed as zero, no lockout will occur.

*Sensor Watch Time***LOCATION 642 - 643**

<i>Location</i>	<i>Description</i>
642	Number Of Days (Tens Digit)
643	Number Of Days (Units Digit)

Table 84: Sensor Watch Timer Locations

The time set in these two locations determines how many days (0-99) a zone may remain sealed before registering as a fault. This feature is only active when the system is in the disarmed state. If a zone programmed for sensor watch has not triggered and reset during this time, the FAULT indicator will illuminate. Refer to "Fault Descriptions" on page 45 for further information on sensor watch faults.

System Date

LOCATION 644 - 649 (Software Version 1.20 - 1.40)

010195

Location	Description
644	Day Of The Month (Tens Digit)
645	Day Of The Month (Units Digit)
646	Month Of The Year (Tens Digit)
647	Month Of The Year (Units Digit)
648	Current Year (Tens Digit)
649	Current Year (Units Digit)

Table 85: System Date Locations (Software Version 1.20 - 1.40)

LOCATION 644 - 649 (Software Version 1.10 Only)

110195

Location	Description
644	Day Of The Week (Sun = 1 Sat = 7)
645	Month Of The Year (Jan = 1 Dec = 12)
646	Day Of The Month (Tens Digit)
647	Day Of The Month (Units Digit)
648	Current Year (Tens Digit)
649	Current Year (Units Digit)

Table 86: System Date Locations (Software Version 1.10 Only)

Solution- 16 has a real time 12 month calendar that needs to be set during installation.

Setting The Date and Time

This function needs to be used when the date and time requires to be changed or the system has been powered down.

How To Set The New Date and Time

1. Enter your **MASTER CODE** followed by **6** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the day, month, year, hour and minute using the (DD, MM, YY, HH, MM) format.
3. Press the **AWAY** button when finished.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **6** + **AWAY**

Example

If the date and time needs to be set for the 1st January 1996 at 10:00 PM, program the date and time as follows;

MASTER CODE + **6** + **AWAY**
 + **0** + **1** + **0** + **1** + **9** + **6** + **2** + **2** + **0** + **0** + **AWAY**

*Auto Arming***LOCATION 650 - 653****0000**

<i>Location</i>	<i>Description</i>
650	Actual Hour Of The Day (Tens Digit)
651	Actual Hour Of The Day (Units Digit)
652	Actual Minute Of The Day (Tens Digit)
653	Actual Minute Of The Day (Units Digit)

Table 87: Auto Arming Locations

This time parameter is used to select the actual time of the day that the system will automatically arm itself in the AWAY Mode or STAY Mode 1. This time must be set in 24 hour format (ie. 10:30 PM would be programmed as 2230). Refer to "LOCATION 668" on page 159 and page 160 for selecting whether the control panel should arm in the AWAY Mode or STAY Mode 1.

If forced arming has been disabled, the feature of auto arming will operate regardless of zones being sealed or unsealed.

If the control panel has been partitioned, ALL areas will automatically arm. If automatic arming is not required, program "LOCATION 650 - 653" with zeros.

*Auto Arming Pre-Alert Timer***LOCATION 654****5**

<i>Location</i>	<i>Description</i>
654	Pre-Alert Timer In 1 Minute Increments

Table 88: Auto Arming Pre-Alert Timer Locations

This is the time period before the control panel will automatically arm itself. The codepad will beep once every second until the pre-alert timer has expired, after which time the system will arm in the AWAY or STAY Mode 1.

Once the control panel has automatically armed in the AWAY Mode or STAY Mode 1, exit time will commence. If a valid user code has been entered during the pre alert time, the auto arming time as programmed in "LOCATION 650 - 653" will extend by one hour.

Refer to "Output Event Type - Pre-Arming Alert Time" on page 131 if you required an indication via a programmable output during the "Pre-Alert Timer".

*Auto Operation Pre-Alert Timer***LOCATION 655****5**

<i>Location</i>	<i>Description</i>
655	Auto Operation Pre-Alert Timer

Table 89: Auto Operation Pre-Alert Timer Locations

This location sets the amount of time in minutes (0-15) that will operate an output programmed with the "Output Event Type - Pre-Alert Warning For Timed Output" on page 132 to warn you before the timed output will automatically operate. Refer to "LOCATION 656 - 659" for programming the output time operation. Refer to "Output Event Types" on page 131 for more information.

*Auto Operation Of The Timed Output***LOCATION 656 - 659****0000**

<i>Location</i>	<i>Description</i>
656	Actual Hour Of The Day (Tens Digit)
657	Actual Hour Of The Day (Units Digit)
658	Actual Minute Of The Day (Tens Digit)
659	Actual Minute Of The Day (Units Digit)

Table 90: Auto Operation Of The Timed Output Locations

These locations set the time of the day that an output programmed with "Output Event Type - Timed Output" will automatically operate. Refer to "Output Event Types" on page 131 for more information.

This time must be set in 24 hour format (ie. 10:30 PM would be programmed as 2230).

*Siren Run Time***LOCATION 660****10**

<i>Location</i>	<i>Description</i>
660	Siren Run Time - Increments Of 1 Minute

Table 91: Siren Run Time Locations

The siren run time determines how long the horn speaker will activate during alarm condition. The siren run time can be programmed between 0 - 15 minutes (+/- 1 minute).

*Siren Sound Rate***LOCATION 661****7**

<i>Location</i>	<i>Description</i>
661	Siren Sound Rate (0 = SLOWEST - 15 = FASTEST)

Table 92: Siren Run Time Locations

The siren sound rate varies the frequency of the siren tone. Zero rate is the slowest and fifteen is the fastest rate. This siren sound rate does not change the frequency rate for the fire alarm tone.

Swinger Shutdown Count**LOCATION 662 (Software Version 1.10 - 1.37)**

<i>Location</i>	<i>Description</i>
662	Swinger Shutdown Count (0 - 15)

Table 93: Swinger Shutdown Count Locations

Swinger shutdown determines the amount of times the sirens and dialler can be triggered before any lockout options will take effect. A minimum of one zone must be programmed for lockout siren or lockout dialler for swinger shutdown to be effective.

Only alarms triggered from zone inputs will increment the swinger shutdown counter. This means alarms such as codepad panic, code retries and any other system alarms will not effect the swinger shutdown count.

While the sirens are operating, the counter for the sirens is only incremented by the first zone that causes the alarm. Any other zones that are triggered during siren time will not effect the counter. While the dialler is on line, its counter is only incremented by the first zone that causes the alarm. Any other zones that are triggered while the dialler is on line will not effect the counter.

When the swinger shutdown count (As programmed in "LOCATION 662") has been reached, all zones that have been triggered will be locked out according to their individual lockout settings.

If "Lockout Dialler" has been programmed for any zone, the last restore signal will not be transmitted until the system or area (if partitioned) has been disarmed.

*Swinger Shutdown Count For Siren***LOCATION 662 (Software Version 1.40 Only)**

<i>Location</i>	<i>Description</i>
662	Swinger Shutdown Count For Siren (0 - 15)

Table 94: Swinger Shutdown Count For Siren Locations

This location determines the amount of times the sirens can be triggered before any lockout options will take effect. A minimum of one zone must be programmed for lockout siren for this location to be effective.

Only alarms triggered from zone inputs will increment the swinger shutdown counter. This means alarms such as codepad panic, code retries and any other system alarms will not effect the swinger shutdown count.

While the sirens are operating, the counter for the sirens is only incremented by the first zone that causes the alarm. Any other zones that are triggered during siren time will not effect the counter. While the dialler is on line, its counter is only incremented by the first zone that causes the alarm. Any other zones that are triggered while the dialler is on line will not effect the counter.

When the swinger shutdown count (As programmed in "LOCATION 662") has been reached, all zones that have been triggered will be locked out according to their individual lockout settings.

*Swinger Shutdown Count For Dialler***LOCATION 757 (Software Version 1.40 Only)**

<i>Location</i>	<i>Description</i>
757	Swinger Shutdown Count For Dialler (0 - 15)

Table 95: Swinger Shutdown Count For Dialler Locations

This location determines the amount of times the dialler can be triggered before any lockout options will take effect. A minimum of one zone must be programmed for lockout dialler for this location to be effective.

Only alarms triggered from zone inputs will increment the swinger shutdown counter. This means alarms such as codepad panic, code retries and any other system alarms will not effect the swinger shutdown count.

While the sirens are operating, the counter for the dialler is only incremented by the first zone that causes the alarm. Any other zones that are triggered during siren time will not effect the counter. While the dialler is on line, its counter is only incremented by the first zone that causes the alarm. Any other zones that are triggered while the dialler is on line will not effect the counter.

When the swinger shutdown count (As programmed in "LOCATION 757") has been reached, all zones that have been triggered will be locked out according to their individual lockout settings.

Note: If "Lockout Dialler" has been enabled for any zone, the last restore signal will not be transmitted until the system or area (If partitioned) has been disarmed.

*System Time***LOCATION 901 - 904****0000**

<i>Location</i>	<i>Description</i>
901	Current Hour In 24 Hour Time (Tens Digit)
902	Current Hour In 24 Hour Time (Units Digit)
903	Current Minute (Tens Digit)
904	Current Minute (Units Digit)

Table 96: System Time Locations

The *Solution- 16* control panel has a real time 24 hour clock that needs to be set during installation.

Setting The Date and Time

This function needs to be used when the date and time requires to be changed or the system has been powered down.

How To Set The New Date and Time

1. Enter your **MASTER CODE** followed by **6** and the **AWAY** button.
Three beeps will be heard and the STAY and AWAY indicators will begin to flash.
2. Enter the day, month, year, hour and minute using the (DD, MM, YY, HH, MM) format.
3. Press the **AWAY** button when finished.
Two beeps will be heard and the STAY and AWAY indicators will extinguish.

MASTER CODE + **6** + **AWAY**

Example

If the date and time needs to be set for the 1st January 1996 at 10:00 PM, program the date and time as follows;

MASTER CODE + **6** + **AWAY**
 + **0** + **1** + **0** + **1** + **9** + **6** + **2** + **2** + **0** + **0** + **AWAY**

Option Bits

This Section Includes The Following:

- *Dialler Options 1*
- *Dialler Options 2*
- *System Options 1*
- *System Options 2*
- *System Options 3*
- *System Options 4*
- *Consumer Options 1*
- *Consumer Options 2*
- *DTMF Command Module Options*
- *Expansion Board Type*
- *Telephone Line Fault Options*
- *System Options 5*
- *System Options 6*
- *Carrier Sync Options*

Option Bits

When programming these locations you will notice that there are four options per location. You may select one, two, three or all four of these options, however, only one number needs to be programmed. This number is calculated by adding the option bit numbers together. Program a seven (7) if you require options 1, 2 and 4 simultaneously (ie. $1+2+4=7$).

Dialler Options 1

LOCATION 663

5

Option	Description
1	Enable Dialler Reporting Functions
2	Enable Remote Arming Via The Telephone
4	Enable Upload/Download Via Alarm Link
8	Terminate "Alarm Link" Session On Alarm

Table 97: Dialler Options 1

1 Enable Dialler Reporting Functions

If this option has been enabled, the dialler will function for all operations. Upload/Download via Alarm Link Software (CC816) and telephone remote arming will remain operational regardless of this setting as long as a communication dialler hybrid has been fitted to the control panel.

Disable Dialler Reporting Functions

If this option is not enabled, the communication dialler will not operate. Upload/Download via Alarm Link Software (CC816) and telephone remote arming will remain operational regardless of this setting as long as a communication dialler hybrid has been fitted to the control panel.

2 Enable Remote Arming Via The Telephone

If this option has been enabled, you can arm your control panel via a standard telephone using a Phone Controller (CC911). Refer to "Remote Arming Via The Telephone" on page 70 for more information. Forced arming is automatically assumed when this feature is being used. Refer to Option 1 in "LOCATION 665" on page 156 for further details on forced arming.

A communication dialler hybrid must be fitted to the control panel for this feature to operate. Whether the reporting functions of the dialler have been enabled or disabled (Refer to Option 1 of this location), this will have no effect on remote arming via the telephone. Refer to "Ring Count" on page 100 for programming the number of rings before the control panel will answer an incoming call.

4 Enable Upload/Download Via Alarm Link Software

This option will need to be enabled if you require to use the Alarm Link Software (CC816) to remotely program the control panel. The control panel will not respond to the Alarm Link Software if this option has not been enabled.

For direct Upload/Download operations via the Direct Link Cable (CC808), this option does not need to be set. Whether the dialler reporting functions (Option 1 of this location) are enabled or disabled, this will have no effect on Upload/Download operations.

8 Terminate Alarm Link Session On Alarm

If the control panel is communicating with a remote computer via Alarm Link Software (CC816) and an alarm has registered, the "Alarm Link" session will be terminated and the relevant alarm message will be transmitted to the base station receiver.

If an alarm occurs that does not need to report to the base station receiver, the session will not be terminated. If this option is not enabled and an alarm has registered, the Alarm Link software will prompt the operator with a "Terminate" or "Continue" message.

LOCATION 664



Option	Description
1	Send Open/Close Reports Only If A Previous Alarm Has Occurred
2	Enable First To Open/Last To Close Reporting When Partitioned
4	Send Open/Close Reports When Armed In STAY Mode 1 & 2
8	Enable Answering Machine Bypass Only When System Is Armed (New - Software Version 1.31 Onwards)

Table 98: Dialler Options 2

1 *Send Open/Close Report Only If A Previous Alarm Has Occurred*

This option requires Open/Close Reports in "LOCATION 504 - 505" enabled on page 124 for it to be effective.

An opening report will be transmitted to the base station receiver when the system has been disarmed after an alarm has occurred. When the system has been armed, a closing report will be transmitted. This feature can also be used in conjunction with the Patrolman Code. Refer to "Patrolman Code" on page 103 for more information.

If the system has been partitioned, an Open/Close report will only be transmitted on the area that the alarm had occurred.

Note: If the system is disarmed when an alarm occurs, only a closing report will be transmitted when the system is next armed.

2 *Enable First To Open, Last To Close Reporting When Partitioned*

This option needs to be enabled if only one Open/Close report is required when the system has been partitioned. Rather than having individual Open/Close reports for each area, a closing report will be transmitted only when ALL areas have been armed and an opening report will be transmitted as soon as one area has been disarmed.

The reports will be transmitted on the Subscriber ID Number allocated to that particular area. Subscriber ID Numbers and Open/Close reports must be programmed for all areas.

4 *Send Open/Close Reports When In STAY Mode 1 and STAY Mode 2*

If open and close reports are required when the system is armed in STAY Mode 1 or STAY Mode 2, this option will need to be enabled.

8 *Enable Answering Machine Bypass Only When System Is Armed (New - Software Version 1.31 Onwards)*

This option needs to be enabled if the answering machine bypass feature is required to operate only when the system has been armed. When the system is disarmed, the control panel will not answer any incoming calls. This option is beneficial in high telephone traffic installations where the control panel could answer an incoming call. Refer to "LOCATION 063" on page 100 to enable answering machine bypass.

LOCATION 665

1

Option	Description
1	Enable Forced Arming
2	Enable EDM Smart Lockout
4	Enable Monitoring Of Horn Speaker
8	Enable Horn Speaker Beeps For Remote Control Operation

Table 99: System Options 1

1 Enable Forced Arming

If this option has been selected, the system can be armed with zones unsealed.

If this option is not selected, all zones must be sealed before the system can be armed. An attempt to arm the system with forced arming not enabled will clear any alarm memories present but arming will not be permitted.

This feature will be ignored if the system has been set for auto arming in AWAY Mode or STAY mode or has been remotely armed via the telephone using a Phone Controller (CC911), DTMF commands via the DTMF Command Module (CC886) or remote operation via the Radio Key/Keyswitch Interface (CC813).

2 Enable EDM Smart Lockout

This feature allows the control panel to remove any zones which are programmed for lockout from the lockout list while the sirens are running. This feature allows a monitoring station to receive codes from previously locked out zones during siren time.

4 Enable Monitoring Of Horn Speaker

If this option has been enabled, the control panel will detect when the horn speaker has been disconnected from the speaker terminals. The FAULT indicator will illuminate when the horn speaker has been disconnected and will extinguish when the horn speaker has been reconnected.

If an output is required to operate when the horn speaker has been disconnected, refer to "Output Event Type - Horn Speaker Monitor Fail" on page 133 for more information.

8 Allow Horn Speaker Beeps For Radio Remote Control Operation

No Of Beeps	System Status
1	System Disarmed
2	System Armed In AWAY Mode
3	System Armed In STAY Mode 1

Table 100: Horn Speaker Beeps

This feature will enable horn speaker beeps to be heard when the system is armed and disarmed via a hand held radio remote control unit. Devices connected to the bell output (RELAY OUTPUT) will not activate.

These speaker beeps are applicable when using the Radio Key/Keyswitch Interface (CC813) or connecting a switch to the JP5 pins (EXP + GND). If connecting a switch to the JP5 pins, enable the required input type in "LOCATION 672" on page 165.

Note: Arming the system in STAY Mode 1 will only sound the three beeps when carried out via a keyswitch interface. The two JP5 pins do not have access to this feature.

When using the Night Arm Station (CP105) to arm in STAY Mode 1, if this option has been enabled, three horn speaker beeps will be heard to indicate that the system has been armed in STAY Mode 1.

LOCATION 666

2

Option	Description
1	Enable Radio Key/Keyswitch Interface Or Night Arm Station
2	Enable Handover Delay To Be Sequential
4	Enable Codepad Panic To Be Silent
8	Enable Codepad Tamper To Be Silent

Table 101: System Options 2

1 *Enable Radio Key/Keyswitch Interface or Night Arm Station*

This option must be selected when using the Radio Key/Keyswitch Interface (CC813) or the Night Arm Station (CP105). This option allows the control panel to be operated using either of these two accessories.

2 *Enable Handover Delay To Be Sequential*

If this option has been enabled, handover delay will be sequential (ie. In numerical order from lowest to highest). If the sequence is broken before the entry time expires, an alarm will occur. If this option is not enabled, handover delay will follow the entry path provided that a delay zone has been triggered first.

4 *Enable Codepad Panic To Be Silent*

If this option has been enabled, a codepad panic alarm will not operate the horn speaker, the bell or the strobe outputs. If this option is not enabled, all three outputs will operate after a codepad panic alarm has been activated. Selecting this option does not effect the operation of the communication dialler.

Note: If the control panel has a Software Version Number 1.37 or higher, a codepad fire or a codepad medical alarm will be audible irrespective of this option being enabled or disabled.

To disable the codepad fire and codepad medical alarms, ALL codepad alarms will need to be disabled from transmitting alarms to the base station receiver. For this to be achieved, program "LOCATION 483" on page 121 as a zero. This will disable all reporting of codepad alarms and enable codepad fire and codepad medical alarms to be silent.

8 *Enable Codepad Tamper To Be Silent*

If this option has been enabled, a codepad tamper alarm will not operate the horn speaker, bell or the strobe outputs. If this option is not enabled, all three outputs will operate after a codepad tamper alarm has occurred.

Refer to "LOCATION 338" on page 105 to set the number of "Code Retries" before an alarm condition occurs. Enabling this option does not effect the operation of the communication dialler.

LOCATION 667



Option	Description
1	Enable Data Output To Display Data For Area 1- Partitioned Systems Only
2	Enable External Modem Module For Alarm Link Operation
4	Enabled = AC Fail In 1 Hour, Disabled = AC Fail In 2 Minutes
8	Enable Zone Pulse Count Handover

Table 102: System Options 3

1 *Enable Data Output To Display Data For Area 1 - Partitioned Systems Only*

If this option has been enabled, the DATA terminal on the panel will be configured to transmit status information that is relevant only to Area 1. A "CP5 Area Addressable (CP500A)" codepad would be used in this instance.

If this option is not enabled, the "CP5 Master Partitioned (CP500P)" codepad will need to be used because information for all areas will be transmitted on the DATA terminal.

An advantage in using this option is that it allows you to configure a system into separate areas while still leaving the maximum number of programmable outputs available for other uses.

2 *Enable External Modem Module For Alarm Link*

If this option has been enabled, the control panel will use the external plug-in Modem Module (CC811) for remote programming via the Alarm Link Software (CC816). This option should only be enabled in situations where the telephone line is susceptible to noise.

If this option is not enabled, the control panel will use its own built in modem.

4 *Enabled = AC Fail In 1 Hour, Disabled = AC Fail In 2 Minutes*

If this option has been enabled, the MAINS indicator will begin to flash and an "AC Loss" signal will be transmitted to the base station receiver after the AC mains has been disconnected continuously for more than 60 minutes.

If this option is not enabled, the MAINS indicator will begin to flash and an "AC Loss" signal will be transmitted to the base station receiver after the AC mains power has been disconnected continuously for 2 minutes.

The MAINS indicator will cease to flash once the AC mains has been restored for more than two minutes.

8 *Enable Zone Pulse Count Handover*

If this option has been enabled, any zone pulse count readings will handover and accumulate to any zone that is triggered during the same arming cycle. Zone pulse count handover will only operate with zone pulse count options 8-15.

Refer to "Zone Pulse Count" on page 112 and "Zone Pulse Count Time" on page 113 for more information.

Note: From Software Version 1.37 onwards, 24 hour zones do not receive any handover pulses from other zones. 24 hour zones can handover pulses to other zones.

LOCATION 668 - Software Version 1.10 Only



<i>Option</i>	<i>Description</i>
1	Delay Siren Until Transmission Is Complete
2	Enable Resetting Of Sirens From All Areas - Partitioned Systems
4	Enable Auto Arming In AWAY Mode
8	Enable Auto Arming In STAY Mode 1

Table 103: System Options 4 - Software Version 1.10 Only

1 *Delay Siren Until Transmission Is Complete*

If this option has been enabled, the horn speaker, bell, strobe and EDMSAT outputs will not activate until the base station receiver has sent a "Kiss-Off" back to the control panel after the message has been transmitted. If multiple messages are transmitted, the sirens will activate after the last "Kiss-Off" has been sent.

If the transmission back to the base station was unsuccessful and a "Kiss-Off" was not received, the horn speaker, bell, strobe and EDMSAT outputs will activate after the third call attempt.

24 hour alarms are not effected by this option. The sirens will always activate immediately upon a 24 hour alarm.

2 *Enable Resetting Of Sirens From All Areas (Partitioned Systems Only)*

This option is only applicable when the control panel has been partitioned. If this option has been enabled, any valid user code from any area will be able to stop the horn speaker, strobe, bell and EDMSAT outputs from operating. This option does not allow a user code allocated from one area to disarm another area.

4 *Enable Auto Arming In AWAY Mode*

If automatic arming in AWAY Mode is preferred to automatic arming in STAY Mode 1, this option will need to be enabled. When the system has been partitioned, ALL areas will automatically arm in AWAY Mode.

8 *Enable Auto Arming In STAY Mode 1*

If automatic arming in STAY Mode 1 is preferred to automatic arming in the AWAY Mode, this option will need to be enabled. When the system has been partitioned, ALL areas will automatically arm in STAY Mode 1.

LOCATION 668 - Software Version 1.20 Onwards



Option	Description
1	Delay Siren Until Transmission Is Complete
2	Enable Resetting Of Sirens From All Areas - Partitioned Systems
4	Ignore AC Mains Fail - New From Software Version 1.30 Onwards
8	Enable Auto Arming In STAY Mode 1

Table 104: System Options 4 - Software Version 1.20 - 1.40

1 *Delay Siren Until Transmission Is Complete*

If this option has been enabled, the horn speaker, bell, strobe and EDMSAT outputs will not activate until the base station receiver has sent a "Kiss-Off" back to the control panel after the message has been transmitted. If multiple messages are transmitted, the sirens will activate after the last "Kiss-Off" has been sent.

If the transmission back to the base station was unsuccessful and a "Kiss-Off" was not received, the horn speaker, bell, strobe and EDMSAT outputs will activate after the third call attempt.

24 hour alarms are not effected by this option. The sirens will always activate immediately upon a 24 hour alarm.

2 *Enable Resetting Of Sirens From All Areas (Partitioned Systems Only)*

This option is only applicable when the control panel has been partitioned. If this option has been enabled, any valid user code from any area will be able to stop the horn speaker, strobe, bell and EDMSAT outputs from operating. This option does not allow a user code allocated from one area to disarm another area.

4 *Ignore AC Mains Fail - New From Software Version 1.30*

If this option has been enabled, the MAINS indicator will not flash, nor will the codepad beep once every minute when the AC mains has been disconnected from the control panel. "Output Event Type - AC Fail" on page 132 will operate regardless of this option being set.

8 *Enable Auto Arming In STAY Mode 1*

If automatic arming in STAY Mode 1 is preferred to automatic arming in the AWAY Mode, this option will need to be enabled. When the system has been partitioned, ALL areas will automatically arm in STAY Mode 1.

LOCATION 669 - Software Version 1.10 Only

<i>Option</i>	<i>Description</i>
1	Enable Entry Guard Delay In STAY Mode
2	Enable Operation Of Sirens & Strobe In STAY Mode
4	Enable Code Only To Isolate
8	Enable Codepad Extinguish Mode

*Table 105: Consumer Options 1 - Software Version 1.10 Only***1 Enable Entry Guard Delay In STAY Mode**

If this option has been selected, all instant and handover zones will have an entry delay time as programmed in "LOCATION 638 - 639" on page 145 when armed in STAY Mode 1 or STAY Mode 2.

<i>Zone Type</i>	<i>Entry Time When In STAY Mode</i>
Delay-1	Delay-1
Delay-2	Delay-2
Delay-3	Delay-3
Delay-4	Delay-4
24 Hour	Nil
Instant	Entry Guard
Handover	Entry Guard

*Table 106: Entry Guard Delay Timer In STAY Mode***2 Enable Operation Of Sirens & Strobe In STAY Mode**

This option will need to be enabled if audible alarms are required when the system has been armed in STAY Mode 1 or STAY Mode 2.

4 Code Only To Isolate

If this option has been selected, the procedure for isolating zones changes from the method of standard isolating to one that requires the use of a valid user code. Refer to "Isolating Zones" on page 43 for further information.

8 Enable Codepad Extinguish Mode

If this option has been enabled, all indicators on the remote codepads will extinguish if a button is not pressed for 60 seconds. The indicators will illuminate when there is an alarm (except a silent alarm), when a button is pressed on the codepad, when the AC mains fail beeps, or if the entry timer has been activated.

LOCATION 669 - Software Version 1.20 Onwards

2

Option	Description
1	Enable The STAY LED To Display Day Alarm ON/OFF Status
2	Enable Operation Of Sirens & Strobe In STAY Mode
4	Enable AUX LED To Display Telephone Line In Use On Partitioned Codepad
8	Enable Codepad Extinguish Mode

Table 107: Consumer Options 1 - Software Version 1.20 Onwards

1 *Enable STAY LED To Display Day Alarm ON/OFF Status*

If this option has been selected, the STAY indicator will be used to display when day alarm has been enabled. The STAY indicator will blink once every 3 seconds while day alarm is active.

2 *Enable Operation Of Sirens & Strobe In STAY Mode*

This option will need to be enabled if audible alarms are required when the system has been armed in STAY Mode 1 or STAY Mode 2.

4 *Enable AUX LED To Display Telephone Line In Use On Partitioned Codepad*

If this option has been enabled, the AUX indicator on a "CP5 Master Partitioned (CP500P)" codepad will illuminate when the control panel has seized the telephone line to transmit a report. The AUX indicator will extinguish once the telephone line has been released.

Note: If the control panel has been partitioned and zone 16 has been used, the AUX indicator will also be used to indicate when zone 16 has triggered into alarm.

8 *Enable Codepad Extinguish Mode*

If this option has been enabled, all indicators on the remote codepads will extinguish if a button is not pressed for 60 seconds. The indicators will illuminate when there is an alarm (except a silent alarm), when a button is pressed on the codepad, when the AC mains fail beeps, or if the entry timer has been activated.

LOCATION 670

Option	Description
1	Enable "User Code + 0 + AWAY" Function To Arm/Disarm All Areas
2	Enable Single Button Arming In AWAY, STAY Mode 1 and STAY Mode 2
4	Enable Single Button Disarming From STAY Mode 1 and STAY Mode 2
8	Enable Alarm Memory Reset On Disarm

Table 108: Consumer Options 2

1 Enable "User Code + 0 + AWAY" Function To Arm/Disarm All Areas

If this option has been selected, it will allow the user code holder to arm/disarm all areas at the same time without the need to enter the user code at each area codepad. Refer to "Master Code Functions" on page 53 and "User Code Function" on page 63 for more information.

If the user code holder arms all areas at the same time, if in "LOCATION 664" on page 155 has the option "First To Open/Last To Close Reporting" enabled, only a closing report for the last area will be reported.

If the user code holder disarms all areas at the same time, if in "LOCATION 664" on page 155 has the option "First To Open/Last To Close Reporting" enabled, only an opening report for the first area will be reported.

2 Enable Single Button Arming In AWAY Mode, STAY Mode 1 and STAY Mode 2

If this option has been selected, the hold down functions for arming in AWAY Mode, STAY Mode 1 and STAY Mode 2 will be functional. Refer to "Hold Down Functions" on page 64 for more information.

4 Enable Single Button Disarming From STAY Mode 1 and STAY Mode 2

This option will only operate when Option 2 in "LOCATION 670" on page 163 has been enabled. This option will enable hold down functions for disarming from STAY Mode 1 and STAY Mode 2. Refer to "Hold Down Functions" on page 64 for more information.

8 Enable Alarm Memory Reset On Disarm

This option allows the memory of alarm events to be cleared from the remote codepad when the system has been disarmed. If this option has not been enabled, the system will need to be armed and disarmed again to clear alarm memory from the remote codepad.

DTMF Command Module Options**LOCATION 671**

<i>Option</i>	<i>Description</i>
1	Enable Access Into Installer's Programming Mode
2	Enable Access To Installer Code Functions
4	Enable Disarming Of System Via User Codes & Auxiliary Code Operations
8	Enable Access To Master Code Functions

Table 109: DTMF Command Module Options

The DTMF Command Module (CC886) must be fitted to the COMMAND MODULE socket on the *Solution- 16* printed circuit board to enable access to any of these features via a touch tone telephone.

Caution must be exercised when using this feature as there is no visual feedback for confirmation.

Refer to "Operating The Control Panel Using The DTMF Command Module" on page 71 for more information.

1 *Enable Access Into Installer's Programming Mode*

If this option has been selected, access into Installer's Programming Mode will be allowed via any touch tone telephone. Programming of any location except for "LOCATION 900" may now take place.

2 *Enable Access To Installer Code Functions*

If this option has been selected, Installer Code Functions may be performed via any touch tone telephone.

4 *Enable Arming and Disarming Of System Via On/Off Codes and Auxiliary Code Operations*

If this option has been selected, the system can be armed and disarmed via any system user code and the operation and use of auxiliary code operations may be performed via any touch tone telephone.

8 *Enable Access To Master Code Functions*

If this option has been selected, access to Master Code Functions may be performed via any touch tone telephone. Refer to "Master Code Functions" on page 53 for more information.

LOCATION 672 - Software Version 1.10 Only

<i>Option</i>	<i>Description</i>
0	No Expansion Board Fitted
1	Eight Zone Expansion Board
2	Eight Channel Output Board
4	Momentary Keyswitch Input
8	Latching Keyswitch Input

Table 110: Expansion Board Type - Software Version 1.10 Only

This location enables the operation of an optional eight zone expansion board, eight channel output board or keyswitch operated inputs to arm or disarm the system.

The keyswitch operated inputs need to be connected to the JP5 terminals EXP and GND. Every time the system is armed or disarmed via the keyswitch operated input, user code 32 will be transmitted with the Open/Close reports.

Refer to "Figure 17: Connection For Momentary Or Latching Keyswitch" on page 201 for more information on wiring the JP5 pins for keyswitch operation.

Note: Only one option can be selected from the options listed in this location.

0 No Expansion Board Fitted

1 Eight Zone Expansion Board Fitted

If an eight zone expansion board is required to connect the additional zones (9-16), there is a choice of two different zone expansion boards which may be purchased.

The Eight Zone Expansion Board (CC883) can use variable resistor values enabling you to use one EOL resistor value for zones 1-8 and another EOL resistor value for zones 9-16.

The Eight Zone Expansion Board (CC885) can only be used with a fixed 3K3 EOL resistor value. This means that zones 1-8 can have any EOL resistor value from the available options in "LOCATION 339" on page 116 and only 3K3 EOL resistors for zones 9-16.

2 Eight Channel Output Board Fitted

The Eight Channel Output Board (CC884) allows the total number of programmable outputs to total 14. The eight channel output board provides terminals for programmable outputs 7-14.

Note: A plug in Termination Board (CC882) is available for the following keyswitch input options.

4 Momentary Input For Arm and Disarm

A momentary keyswitch may be used to arm and disarm the system in the AWAY Mode via the JP5 pins EXP and GND. If the system has been partitioned, ALL areas will arm and disarm in the AWAY Mode. If Option 8 in "LOCATION 665" on page 156 has been enabled, the horn speaker will give indication beeps when the system has been armed and disarmed. One beep indicates that the system has been disarmed, two beeps will indicate that the system has been armed in AWAY Mode.

8 Latching Input For Arm and Disarm

A toggle or latching keyswitch may be used to arm and disarm the system in the AWAY Mode via the JP5 pins EXP and GND. If the system has been partitioned, ALL areas will arm and disarm in the AWAY Mode. If Option 8 in "LOCATION 665" on page 156 has been enabled, the horn speaker will give indication beeps when the system has been armed and disarmed. One beep indicates that the system has been disarmed, two beeps will indicate that the system has been armed in AWAY Mode.

Expansion Board Type**LOCATION 672 - Software Version 1.20 Onwards**

<i>Option</i>	<i>Description</i>	<i>Option</i>	<i>Description</i>
0	No Expansion Board Fitted	8	Momentary Disarm
1	Eight Zone Expansion Board Fitted	9	Momentary Arm Area 4
2	Eight Channel Output Board Fitted	10	Momentary Disarm Area 4
3	Momentary Input For Arm and Disarm	11	Momentary Arm/Disarm Area 4
4	Latching Input For Arm and Disarm	12	Latching Arm/Disarm Area 4
5	Momentary Arm In AWAY Mode		
6	Momentary Arm In STAY Mode 1		
7	Momentary Arm In STAY Mode 2		

Table 111: Expansion Board Type - Software Version 1.20 Onwards

This location enables the operation of an optional eight zone expansion board, eight channel output board or a number of different options for keyswitch operated inputs to arm or disarm the system.

The keyswitch operated inputs need to be connected to the JP5 terminals EXP and GND. Every time the system is armed or disarmed via the keyswitch operated input, user code 32 will be transmitted with the Open/Close reports.

Refer to "Figure 17: Connection For Momentary Or Latching Keyswitch" on page 201 for more information on wiring the JP5 pins for keyswitch operation.

Note: Only one option can be selected from the options listed in this location.

0 No Expansion Board Fitted

1 Eight Zone Expansion Board Fitted

If an eight zone expansion board is required to connect the additional zones (9-16), there is a choice of two different zone expansion boards which may be purchased.

The Eight Zone Expansion Board (CC883) can use variable resistor values enabling you to use one EOL resistor value for zones 1-8 and another EOL resistor value for zones 9-16.

The Eight Zone Expansion Board (CC885) can only be used with a fixed 3K3 EOL resistor value. This means that zones 1-8 can have any EOL resistor value from the available options in "LOCATION 339" on page 116 and only 3K3 EOL resistors for zones 9-16.

2 Eight Channel Output Board Fitted

The Eight Channel Output Board (CC884) allows the total number of programmable outputs to total 14. The eight channel output board provides terminals for programmable outputs 7-14.

Note: A plug in Termination Board (CC882) is available for the following keyswitch input options.

3 Momentary Input For Arm and Disarm

A momentary keyswitch may be used to arm and disarm the system in the AWAY Mode via the JP5 pins EXP and GND. If the system has been partitioned, ALL areas will arm and disarm in the AWAY Mode. If Option 8 in "LOCATION 665" on page 156 has been enabled, the horn speaker will give indication beeps when the system has been armed and disarmed. One beep indicates that the system has been disarmed, two beeps will indicate that the system has been armed in AWAY Mode.

4 *Latching Input For Arm and Disarm*

A toggle or latching keyswitch may be used to arm and disarm the system in the AWAY Mode via the JP5 pins EXP and GND. If the system has been partitioned, ALL areas will arm and disarm in the AWAY Mode. If Option 8 in "LOCATION 665" on page 156 has been enabled, the horn speaker will give indication beeps when the system has been armed and disarmed. One beep indicates that the system has been disarmed, two beeps will indicate that the system has been armed in AWAY Mode.

5 *Momentary Arm In AWAY Mode*

A momentary keyswitch may be used to arm the system in the AWAY Mode via the JP5 pins EXP and GND. If the system has been partitioned, ALL areas will arm in the AWAY Mode. Horn speaker indication beeps do not function for the option type.

6 *Momentary Arm In STAY Mode 1*

A momentary keyswitch may be used to arm the system in the STAY Mode 1 via the JP5 pins EXP and GND. If the system has been partitioned, this option will not operate. Horn speaker indication beeps do not function for the option type.

7 *Momentary Arm In STAY Mode 2*

A momentary keyswitch may be used to arm the system in the STAY Mode 2 via the JP5 pins EXP and GND. If the system has been partitioned, this option will not operate. Horn speaker indication beeps do not function for the option type.

8 *Momentary Disarm Only*

A momentary keyswitch may be used to disarm the system from AWAY Mode, STAY Mode 1 and STAY Mode 2 via the JP5 pins EXP and GND. If the system has been partitioned, ALL areas will disarm. Horn speaker indication beeps do not function for the option type.

9 *Momentary Arm Area 4*

A momentary keyswitch may be used to arm only Area 4 when the system has been partitioned via the JP5 pins EXP and GND. Horn speaker indication beeps do not function for the option type.

10 *Momentary Disarm Area 4*

A momentary keyswitch may be used to disarm only Area 4 when the system has been partitioned via the JP5 pins EXP and GND. Horn speaker indication beeps do not function for the option type.

11 *Momentary Arm/Disarm Area 4*

A momentary keyswitch may be used to arm and disarm Area 4 via the JP5 pins EXP and GND when the system has been partitioned. If Option 8 in "LOCATION 665" on page 156 has been enabled, the horn speaker will give identification beeps when the system has been armed and disarmed. One beep indicates that Area 4 has been disarmed, two beeps will indicate that Area 4 has been armed in AWAY Mode.

12 *Latching Arm/Disarm Area 4*

A toggle or latching keyswitch may be used to arm and disarm Area 4 via the JP5 pins EXP and GND when the system has been partitioned. If Option 8 in "LOCATION 665" on page 156 has been enabled, the horn speaker will give identification beeps when the system has been armed and disarmed. One beep indicates that Area 4 has been disarmed, two beeps will indicate that Area 4 has been armed in AWAY Mode.

*Telephone Line Fault Options***LOCATION 673**

<i>Option</i>	<i>Description</i>
1	Operate The FAULT Indicator When Telephone Line Fails
2	Sound Speaker, Bell and Strobe When System Is Armed
4	Sound Speaker, Bell and Strobe When System Is Disarmed
8	Reserved

Table 112: Telephone Line Fault Options

The optional Telephone Line Fault Module (CC887) may be connected to the LINE FAULT MODULE socket located towards the top right hand corner of the control panel to monitor the telephone line.

If the telephone line has been cut or disconnected for more than forty seconds, the telephone line fault module will recognise this and the FAULT indicator will illuminate on the codepad. The FAULT indicator will extinguish once the telephone line has been restored for more than forty seconds.

Note: Option 2 and 4 will not operate unless option 1 has been enabled. If option 1 has been enabled and no telephone line fault module has been connected to the control panel, a FAULT indicator will illuminate and "LOCATION 673" will need to be programmed back to the factory default value to clear the fault.

1 *Operate The FAULT Indicator When Telephone Line Fails*

The FAULT indicator will flash and the codepad buzzer will beep once every minute if the Telephone Line Fault Module (CC887) detects that the telephone line has been disconnected. Refer to "Fault Descriptions" on page 45 for further information on telephone line fault.

2 *Sound Speaker, Bell and Strobe When The System Is Armed*

Option 1 in "LOCATION 673" will need to be enabled for this option to operate. If the Telephone Line Fault Module (CC873) detects that the telephone line has been disconnected when the system is armed in AWAY Mode, STAY Mode 1 or STAY Mode 2, the horn speaker, bell, strobe and EDMSAT outputs will operate.

If the control panel has been partitioned, this option will operate when any area has been armed in AWAY Mode or STAY Mode 1.

4 *Sound Speaker, Bell and Strobe When The System Is Disarmed*

Option 1 in "LOCATION 673" will need to be enabled for this option to operate. If the Telephone Line Fault Module (CC887) detects that the telephone line has been disconnected when the system is disarmed, the horn speaker, bell, strobe and EDMSAT outputs will operate.

If the system has been partitioned, this option will operate only when ALL areas have been disarmed.

8 *Reserved*

Note: If ALL three options have been enabled, the horn speaker, bell, strobe and EDMSAT outputs will operate in either armed or disarmed state.

If a serial printer has been connected to output 3, the message "Phone Line Failure" will be reported when the telephone line has been disconnected. Once the telephone line has been restored for more than 40 seconds continuously, the message "Phone Line Restore" will be reported. The printer will log the actual date and time that the report had occurred.

LOCATION 897 - New From Software Version 1.37



Option	Description
1	Enable - Send "Test" Report After Siren Reset
2	Enable Control Panel To Power Up In Disarmed State
4	Enable Internal Crystal To Keep Time (Software Version 1.40)
8	Reserved

1 *Enable - Send "Test" Report After Siren Reset*

Enabling this option will force the control panel to transmit a test report after the siren has reset. This can be used to indicate to the monitoring station that the control panel has not been tampered with during the alarm period.

2 *Enable Control Panel To Power Up In Disarmed State*

If this option has been enabled, the control panel will power up in the disarmed state once the battery and AC mains have been reconnected once the system has been powered down. EDM does not recommend this feature.

4 *Enable Internal Crystal To Keep Time (New - Software Version 1.40 Onwards)*

If this option has been enabled, it will force the control panel not to use the mains frequency as a time base to keep time. The control panel will use the internal crystal (XTAL) to keep track of time. This option is useful in countries that do not have a constant mains frequency.

8 *Reserved*

LOCATION 898 - New From Software Version 1.33 Onwards

3

Option	Description
1	Enable Busy Tone Detection For Domestic Dialling
2	Enable "Kiss-Off" Detection For Domestic Dialling
4	Extend Acknowledge Tone Detection From 30 - 60 Seconds
8	If Battery Fails, Enable Dynamic Battery Test Only On Arming (New - Software Version 1.35)

Table 113: System Options 6

1 *Enable Busy Tone Detection For Domestic Dialling*

This option is valid only when the control panel has been set up for "Domestic Dialling Format". When this option has been enabled, the dialling algorithm will check for a busy tone. This is particularly important in that the control panel will only make 3 valid call attempts. A valid attempt is signified by the absence of a busy tone.

2 *Enable "Kiss-Off" Detection For Domestic Dialling*

This option is valid only when the control panel has been programmed for domestic dialling format. A defaulted control panel will seize the telephone line and commence reporting an alarm condition. During its report, the control panel looks for a tone either from a hand held phone controller, or, if a DTMF Command Module is not fitted, the * button on a touch tone telephone. Once the control panel has received this tone, the control panel terminates the report and hangs up the telephone line, otherwise the control panel will keeps dialling until it reaches its maximum call attempts.

With this option disabled, the control panel will not look for the "Kiss-Off" tone and will therefore keep reporting until the unit is either disarmed, or the maximum call count has been reached.

4 *Extend Acknowledge Tone Detection From 30 - 60 Seconds*

The control panel after dialling the monitoring station will wait approximately 30 seconds for receipt of a valid handshake tone. The handshake tone indicates to the control panel that it has reached the monitoring station and can now transmit it's messages. Enabling this option will extend the wait time from 30 seconds to 1 minute.

8 *If Battery Has Failed, Enable Dynamic Battery Test Only On Arming (New - Software Version 1.35)*

The control panel will execute a "Dynamic Battery Test" every four hours while the AC mains is present. During this battery test, the battery is loaded and its voltage monitored over a 3 second period. If the battery voltage drops below approximately 10.5V, a low battery condition is generated and reported accordingly. The control panel will continue to test the battery even when the battery has failed a previous load test.

Enabling this option will cancel the 4 hourly dynamic battery tests if there is a current low battery condition. The control panel will still however test the battery every time the system has been armed in AWAY Mode, STAY Mode 1 and STAY Mode 2.

LOCATION 899

Option	Carrier Sync Time	Option	Carrier Sync Time
1	100 ms	9	900 ms
2	200 ms	10	1 Second
3	300 ms	11	1.1 Seconds
4	400 ms	12	1.2 Seconds
5	500 ms	13	1.3 Seconds
6	600 ms	14	1.4 Seconds
7	700 ms	15	1.5 Seconds
8	800 ms		

Table 114: Carrier Sync Time

The micro chip that operates the *Solution- 16* control panel simulates a 300 baud modem.

Generally, a telecommunications interface (Phone Line Interface) incorporates a 2 wire to a 4 wire conversion so that the information that you transmit is separate to the information that you receive. However, in the *Solution- 16* control panel, there is no 2 wire to 4 wire conversion. What is transmitted is also received (This is like talking on a phone handset and hearing yourself talk).

When two modems are connected, they exchange tones with each other that allows them to communicate with one another. The sync tone a modem sends to another modem is called a carrier. Generally, to remain in sync, each modem must receive the other modems carrier. If a carrier has been lost, some modems initiate an error correction algorithm.

Because the *Solution- 16* control panel does not have a 2 wire to 4 wire converter, the control panel must stop sending its carrier to the remote modem when it receives data. When it is time to send data again, it reapplies the carrier before sending data. Some modems unfortunately do not synchronise as quickly as other modems. Remember a modem must be synchronised before receiving data. The time it takes a modem to sync varies from modem to modem. Some modems may only want a carrier for 100 ms while others may require a carrier for 900 ms.

“LOCATION 899” specifies in units of 100 ms, how long the *Solution- 16* control panel should apply a carrier before commencing data transmissions.

Partitioning

This Section Includes The Following:

- *Partitioning*
- *Master Partitioned Codepad Indicators*
- *Operating Codepads In Partitioning*
- *Securitel and Partitioning*
- *Programming*
- *Open/Close Reports*
- *Subscriber ID Number*
- *Zone Allocations*
- *User Code Allocations*
- *Setting Up and Programming Codepads For Partitioning*
- *Codepad Connections For Partitioning*

Partitioning

Partitioning allows a single control panel to act as if it were four different control panels. There is a "CP5 Master Partitioned (CP500P)" codepad that has indicators to show the status of all areas individually.

If you wish to allocate each area a separate codepad, the "CP5 Area Addressable (CP500A)" codepad must be used. This will give the user the impression that they are the only operator of the system.

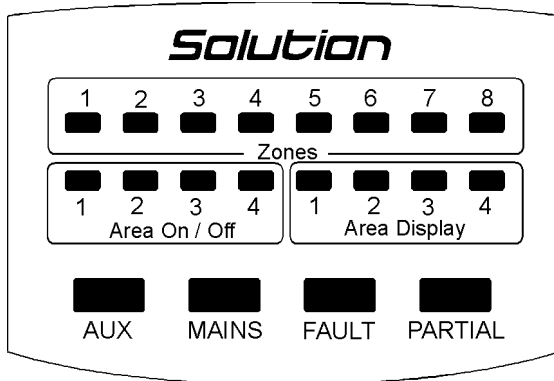


Figure 5: "CP5 Master Partitioned (CP500P)" Codepad

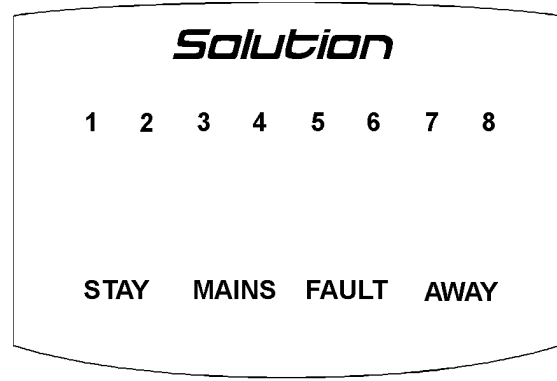


Figure 6: "CP5 Area Addressable (CP500A)" Codepad

If the control panel has been partitioned, you can have a maximum of four areas. Each area can have up to a maximum of 8 zones.

Zones may be shared between areas to act as common zones. Zone 16 cannot be allocated to an area and will be indicated when triggered by the AUX indicator on the "CP5 Master Partitioned (CP500P)" codepad or the FAULT indicator on "CP5 Area Addressable (CP500A)" codepad. It would then be recommended to program Zone 16 to operate as a 24 hour zone and common to all areas.

Master Partitioned Codepad Indicators

The indicators on a "CP5 Master Partitioned (CP500P)" codepad are configured in to four groups. Following is a description of what the indicators show;

1 Zone Indicators

Zone indicators (1-8) display the status of each zone. These zones belong to the area that has the AREA DISPLAY indicator illuminated (ie. If a ZONE indicator is illuminated, that zone is unsealed and if the ZONE indicator is not illuminated, that zone is sealed).

2 Areas On/Off Indicators

The group of four AREA DISPLAY indicators show the status of each area (ie. If an indicator is illuminated, that area is armed and if the indicator is not illuminated, that area is disarmed).

3 Area Display Indicators

A group of four AREA DISPLAY indicators show what area the zones belong to that are currently being displayed.

4 Status Indicators

A group of four indicators show the following:

AUX Indicator

This indicator will display the status of Zone 16 when the control panel has been partitioned. If Option 4 has been enabled in "LOCATION 669" the AUX indicator may be used to display when the control panel is using the telephone line.

MAINS Indicator

This indicator displays the status of the AC mains supply (ie. If the MAINS indicator is illuminated, the AC mains is normal and if the indicator is flashing, the AC mains has been disconnected).

FAULT Indicator

This indicator displays the status of the systems fault register (ie. If the indicator is flashing, the system has detected a fault which has not yet been acknowledged. If the indicator is illuminated, the fault has been acknowledged and if the indicator is not illuminated, the system has no system faults).

PARTIAL Indicator

The partial indicator displays whether an area is armed in STAY Mode 1 or STAY Mode 2. (ie. If the PARTIAL indicator is illuminated, an area is armed in either STAY Mode 1 or STAY Mode 2 and if the PARTIAL indicator is not illuminated, no areas are armed in STAY Mode 1 or STAY Mode 2).

Whilst isolating zones, the PARTIAL indicator flashes to indicate that you are in the isolate mode.

This PARTIAL indicator will flash in conjunction with the AUX indicator to indicate successful entry into any programming mode. For example, this will occur when entering the Installer's Programming Mode.

Operating Codepads In Partitioning

Operating From A "CP5 Area Addressable (CP500A)" Codepad

If you have a partitioned system with "CP5 Area Addressable (CP500A)" codepads installed, the operating procedure is exactly the same as described throughout this manual. Refer to "Hold Down Functions" on page 64 to determine which area a particular codepad belongs.

Operating From A "CP5 Master Partitioned (CP500P)" Codepad

If you have a partitioned system with a "CP5 Master Partitioned (CP500P)" codepad installed, the operating procedure is the same as described throughout this manual with one exception. All operations are relative to the area whose AREA DISPLAY indicator is illuminated at the time.

Example

If the AREA DISPLAY indicator number 2 is illuminated, all operations performed will only effect Area 2. To perform any operations in another area, you will have to move the AREA DISPLAY indicator to the desired area.

To Move From One Area To The Next

1. Press the **AWAY** button.
The area display indicator will move to the next area.
2. Press the **AWAY** button again.
The area display indicator will move to the next area.

Securitel and Partitioning

The EDMSTU was not designed to send individual Open/Close reports for each area via the Securitel Network. It will however send first to open and last to close reports if Option 2 in "LOCATION 664" has been enabled. Refer to "Table 31: Securitel Reporting Messages" on page 81 for the list of reports that can be transmitted via the Securitel Network.

Questions To Be Considered When Partitioning

When programming a *Solution- 16* control panel for partitioning there are a few steps that need to be considered.

1. How many areas do you need ?
2. What zones will be common to what areas ?
3. Does each area need to send individual open and close reports ? or
4. Will first to open and last to close reports be sufficient ?
5. Is your base station running Sims 1 or Sims 2 software ?
6. If the base station is running Sims 1 software and you want to send individual open and close reports for each area, you will need to allocate a separate Subscriber ID Number for each area. Sims 2 software will accept multiple open and close reports on the same Subscriber ID Number ?
7. Does each area need its own different entry delay time ?
8. Does each area need its own individual codepad ?
9. Does each area need its own individual siren and strobe ?
10. What areas are each user allowed access to ?

Open/Close Reports

The following options are related to Open/Close reports. You can select one, two or all three options to suit your application.

Dialler Options 2

LOCATION 664



Option	Description
1	Send Open/Close Reports Only If A Previous Alarm Has Occurred
2	Enable First To Open/Last To Close Reporting When Partitioned
4	Send Open/Close Reports When Armed In STAY Mode 1 & 2
8	Enable Answering Machine Bypass Only When System Is Armed (New - Software Version 1.31 Onwards)

Table 115: Dialler Options 2

1 Send Open/Close Report Only If A Previous Alarm Has Occurred

This option requires Open/Close Reports in "LOCATION 504 - 505" programmed on page 124 for it to be effective.

An open report will be transmitted to the base station receiver when the system has been disarmed after an alarm has occurred. When the system has been armed, a closing report will be transmitted. This feature can also be used in conjunction with the Patrolman Code. Refer to "Patrolman Code" on page 103 for more information.

If the system has been partitioned, an Open/Close report will only be transmitted on the area that the alarm had occurred.

Note: If the system has been disarmed when an alarm has occurred, only a closing report will be transmitted when the system has been armed.

2 Enable First To Open, Last To Close Reporting When Partitioned

This option needs to be enabled if only one Open/Close report is required when the system has been partitioned. Rather than having individual Open/Close reports for each area, a closing report will be transmitted only when ALL areas have been armed and an opening report will be transmitted as soon as one area has been disarmed.

The reports will be transmitted on the Subscriber ID Number allocated to that particular area. Subscriber ID Numbers and Open/Close reports must be programmed for all areas.

4 Send Open/Close Reports When In STAY Mode 1 and STAY Mode 2

If open and close reports are required when the system is armed in STAY Mode 1 or STAY Mode 2, this option will need to be enabled.

8 Enable Answering Machine Bypass Only When System Is Armed (New - Software Version 1.31 Onwards)

This option needs to be enabled if the answering machine bypass feature is required to operate only when the system has been armed. When the system has been disarmed, the control panel will not answer any incoming calls. This option is beneficial in high telephone traffic installations where the control panel could answer an incoming call.

*Open/Close Codes For Area 1***LOCATION 504-505****89**

<i>Location</i>	<i>Description</i>
504	Opening Report Code For Area 1
505	Closing Report Code For Area 1

*Table 116: Area 1 Open/Close Report Locations**Open/Close Codes For Area 2***LOCATION 674 - 675****00**

<i>Location</i>	<i>Description</i>
674	Opening Report Code For Area 2
675	Closing Report Code For Area 2

*Table 117: Area 2 Open/Close Report Locations**Open/Close Codes For Area 3***LOCATION 676 - 677****00**

<i>Location</i>	<i>Description</i>
676	Opening Report Code For Area 3
677	Closing Report Code For Area 3

*Table 118: Area 3 Open/Close Report Locations**Open/Close Codes For Area 4***LOCATION 678 - 679****00**

<i>Location</i>	<i>Description</i>
678	Opening Report Code For Area 4
679	Closing Report Code For Area 4

Table 119: Area 4 Open/Close Report Locations

Subscriber ID Number For Area 1**LOCATION 052 - 055****0000**

<i>Location</i>	<i>Description</i>
52	Area 1 Subscriber ID Number (Thousands Digit)
53	Area 1 Subscriber ID Number (Hundreds Digit)
54	Area 1 Subscriber ID Number (Tens Digit)
55	Area 1 Subscriber ID Number (Units Digit)

*Table 120: Area 1 Subscriber ID Number Locations***Subscriber ID Number For Area 2****LOCATION 680 - 683****0000**

<i>Location</i>	<i>Description</i>
680	Area 2 Subscriber ID Number (Thousands Digit)
681	Area 2 Subscriber ID Number (Hundreds Digit)
682	Area 2 Subscriber ID Number (Tens Digit)
683	Area 2 Subscriber ID Number (Units Digit)

*Table 121: Area 2 Subscriber ID Number Locations***Subscriber ID Number For Area 3****LOCATION 684 - 687****0000**

<i>Location</i>	<i>Description</i>
684	Area 3 Subscriber ID Number (Thousands Digit)
685	Area 3 Subscriber ID Number (Hundreds Digit)
686	Area 3 Subscriber ID Number (Tens Digit)
687	Area 3 Subscriber ID Number (Units Digit)

*Table 122: Area 3 Subscriber ID Number Locations***Subscriber ID Number For Area 4****LOCATION 688 - 691****0000**

<i>Location</i>	<i>Description</i>
688	Area 4 Subscriber ID Number (Thousands Digit)
689	Area 4 Subscriber ID Number (Hundreds Digit)
690	Area 4 Subscriber ID Number (Tens Digit)
691	Area 4 Subscriber ID Number (Units Digit)

Table 123: Area 4 Subscriber ID Number Locations

Zone Allocations

Each area can have up to eight zones allocated to it. The eight locations for each area represent ZONE indicators one to eight on the remote codepad. Any of the zone inputs (1-15) can be mapped to any area to appear as any zone on the remote codepad (ie. Any zone from 1-15 can be common to as many areas as required).

Common zones report to the base station receiver on group zero. Zones that are specific to one area will report on the corresponding group number.

Zone 16 is common to all areas and cannot be mapped to an individual area. It is ideally suited as a 24 hour burglary or fire zone. If zone 16 has been programmed as an instant zone, it will become active as soon as any area has been armed. When zone 16 has triggered, the AUX indicator on a "CP5 Master Partitioned (CP500P)" codepad will illuminate, or if an "CP5 Area Addressable (CP500A)" codepad has been used, zone 16 will be indicated by the FAULT indicator.

Zone Allocations For Area 1

LOCATION 692 - 699

OOOOOOOO

<i>Location</i>	<i>Description</i>
692	Area 1 - Zone 1 Indicator
693	Area 1 - Zone 2 Indicator
694	Area 1 - Zone 3 Indicator
695	Area 1 - Zone 4 Indicator
696	Area 1 - Zone 5 Indicator
697	Area 1 - Zone 6 Indicator
698	Area 1 - Zone 7 Indicator
699	Area 1 - Zone 8 Indicator

Table 124: Area 1 Zone Allocations

Zone Allocations For Area 2

LOCATION 700 - 707

OOOOOOOO

<i>Location</i>	<i>Description</i>
700	Area 2 - Zone 1 Indicator
701	Area 2 - Zone 2 Indicator
702	Area 2 - Zone 3 Indicator
703	Area 2 - Zone 4 Indicator
704	Area 2 - Zone 5 Indicator
705	Area 2 - Zone 6 Indicator
706	Area 2 - Zone 7 Indicator
707	Area 2 - Zone 8 Indicator

Table 125: Area 2 Zone Allocations

Zone Allocations For Area 3

LOCATION 708 - 715

00000000

Location	Description
708	Area 3 - Zone 1 Indicator
709	Area 3 - Zone 2 Indicator
710	Area 3 - Zone 3 Indicator
711	Area 3 - Zone 4 Indicator
712	Area 3 - Zone 5 Indicator
713	Area 3 - Zone 6 Indicator
714	Area 3 - Zone 7 Indicator
715	Area 3 - Zone 8 Indicator

Table 126: Area 3 Zone Allocations

Zone Allocations For Area 4

LOCATION 716 - 723


00000000

Location	Description
716	Area 4 - Zone 1 Indicator
717	Area 4 - Zone 2 Indicator
718	Area 4 - Zone 3 Indicator
719	Area 4 - Zone 4 Indicator
720	Area 4 - Zone 5 Indicator
721	Area 4 - Zone 6 Indicator
722	Area 4 - Zone 7 Indicator
723	Area 4 - Zone 8 Indicator

Table 127: Area 4 Zone Allocations

Note: Any zone that is common to more than one area will report to the base station receiver on group zero.

Example

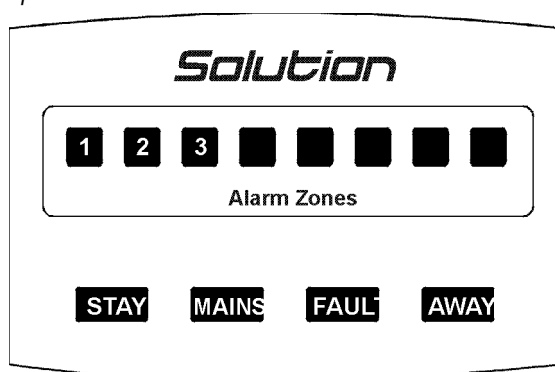

Area 1 Zone Allocations

LOCATION 692 - 699

78900000

Figure 7: "CP5 Area Addressable (CP500A)" Codepad

In this example, zones 7, 8 and 9 have been mapped to Area 1 to appear as zones 1, 2 and 3.

Programming the same zone number into more than one area indicates that the zone will operate as a common zone.

For example, if zone 2 is allocated to Area 1 and Area 3, zone 2 will then become a common zone to both Areas 1 and Area 3. Zone 2 will not trigger unless both Area 1 and Area 3 have been armed. Any number of zones can be mapped to any combination of the four areas to act as common zones.

User Code Allocations

"LOCATIONS 724 - 755" are provided for assigning each user code to an area or multiple area when the control panel has been partitioned. A number between 1-15 is required to be entered into each of these locations to assign each user code holder to the areas they require to operate. Multiple user codes can be allocated to the same areas.

Select the required areas that the user code holder is to operate and then add the option values together from "Table 128: User Code Allocations" below (eg. If the user code is allocated to operate all four areas, program a 15 (ie. $1 + 2 + 4 + 8 = 15$) into the required location relevant to their user code allocation. If the user code is allocated only to Area 1 and Area 3 (ie. $1 + 4 = 5$), program their user code allocation as 5).

Option	Allocated Areas
1	Area 1
2	Area 2
4	Area 3
8	Area 4

Table 128: User Code Allocations

Location 724 User Code 1	Location 725 User Code 2	Location 726 User Code 3	Location 727 User Code 4
0	0	0	0
Location 728 User Code 5	Location 729 User Code 6	Location 730 User Code 7	Location 731 User Code 8
0	0	0	0
Location 732 User Code 9	Location 733 User Code 10	Location 734 User Code 11	Location 735 User Code 12
0	0	0	0
Location 736 User Code 13	Location 737 User Code 14	Location 738 User Code 15	Location 739 User Code 16
0	0	0	0
Location 740 User Code 17	Location 741 User Code 18	Location 742 User Code 19	Location 743 User Code 20
0	0	0	0
Location 744 User Code 21	Location 745 User Code 22	Location 746 User Code 23	Location 747 User Code 24
0	0	0	0
Location 748 User Code 25	Location 748 User Code 26	Location 750 User Code 27	Location 751 User Code 28
0	0	0	0
Location 752 User Code 29	Location 753 User Code 30	Location 754 User Code 31	Location 755 User Code 32
0	0	0	0

Refer to "User Codes" on page 102 for further programming information of the actual codes.

Setting Up and Programming Codepads For Partitioning

To connect area addressable codepads to a system that has been partitioned, a few steps will need to be taken for the codepads to operate correctly.

Setting Up The Master Partitioned Codepad As The Main Codepad

If you are using the “CP5 Master Partitioned (CP500P)” codepad as the main codepad of the partitioned system, you will need to connect the codepad to the main codepad terminals (GND, +12V, CLK and DATA).

Setting Up An Area 1 Codepad As The Main Codepad

If you are not using a “CP5 Master Partitioned (CP500P)” codepad as the main codepad of the partitioned system, you will need to connect the Area 1 codepad to the main codepad terminals (GND, +12V, CLK and DATA). In addition to setting up the Area 1 codepad, you will need to set the DIP switch 1 on the back of the codepad into the ON position and enable Option 1 in “LOCATION 667” on page 158.

Setting Up An Area 1 Codepad

If you wish to have a separate area codepad only for Area 1 when using the “CP5 Master Partitioned (CP500P)” codepad as the main codepad, you will need to connect the Area 1 codepad to the main codepad terminals (GND, +12V & CLK) with the DATA terminal to be connected to one of the programmable outputs programmed as “6,0 - Area 1 Codepad Data”. DIP switch 1 on the back of the Area 1 codepad will need to be in the on position.

Setting Up An Area 2 Codepad

If you wish to have a separate area codepad only for Area 2 when using the “CP5 Master Partitioned (CP500P)” codepad as the main codepad, you will need to connect the Area 2 codepad to the main codepad terminals (GND, +12V & CLK) with the DATA terminal to be connected to one of the programmable outputs programmed as “6,1 - Area 2 Codepad Data”. DIP switch 2 on the back of the Area 2 codepad will need to be in the on position.

Setting Up An Area 3 Codepad

If you wish to have a separate area codepad only for Area 3 when using the “CP5 Master Partitioned (CP500P)” codepad as the main codepad, you will need to connect the Area 3 codepad to the main codepad terminals (GND, +12V & CLK) with the DATA terminal to be connected to one of the programmable outputs programmed as “6,2 - Area 3 Codepad Data”. DIP switch 1 and 2 on the back of the Area 3 codepad will need to be in the on position.

Setting Up An Area 4 Codepad

If you wish to have a separate area codepad only for Area 4 when using the “CP5 Master Partitioned (CP500P)” codepad as the main codepad, you will need to connect the Area 4 codepad to the main codepad terminals (GND, +12V & CLK) with the DATA terminal to be connected to one of the programmable outputs programmed as “6,3 - Area 4 Codepad Data”. DIP switch 3 on the back of the Area 4 codepad will need to be in the on position.

Codepad Connections For Partitioning

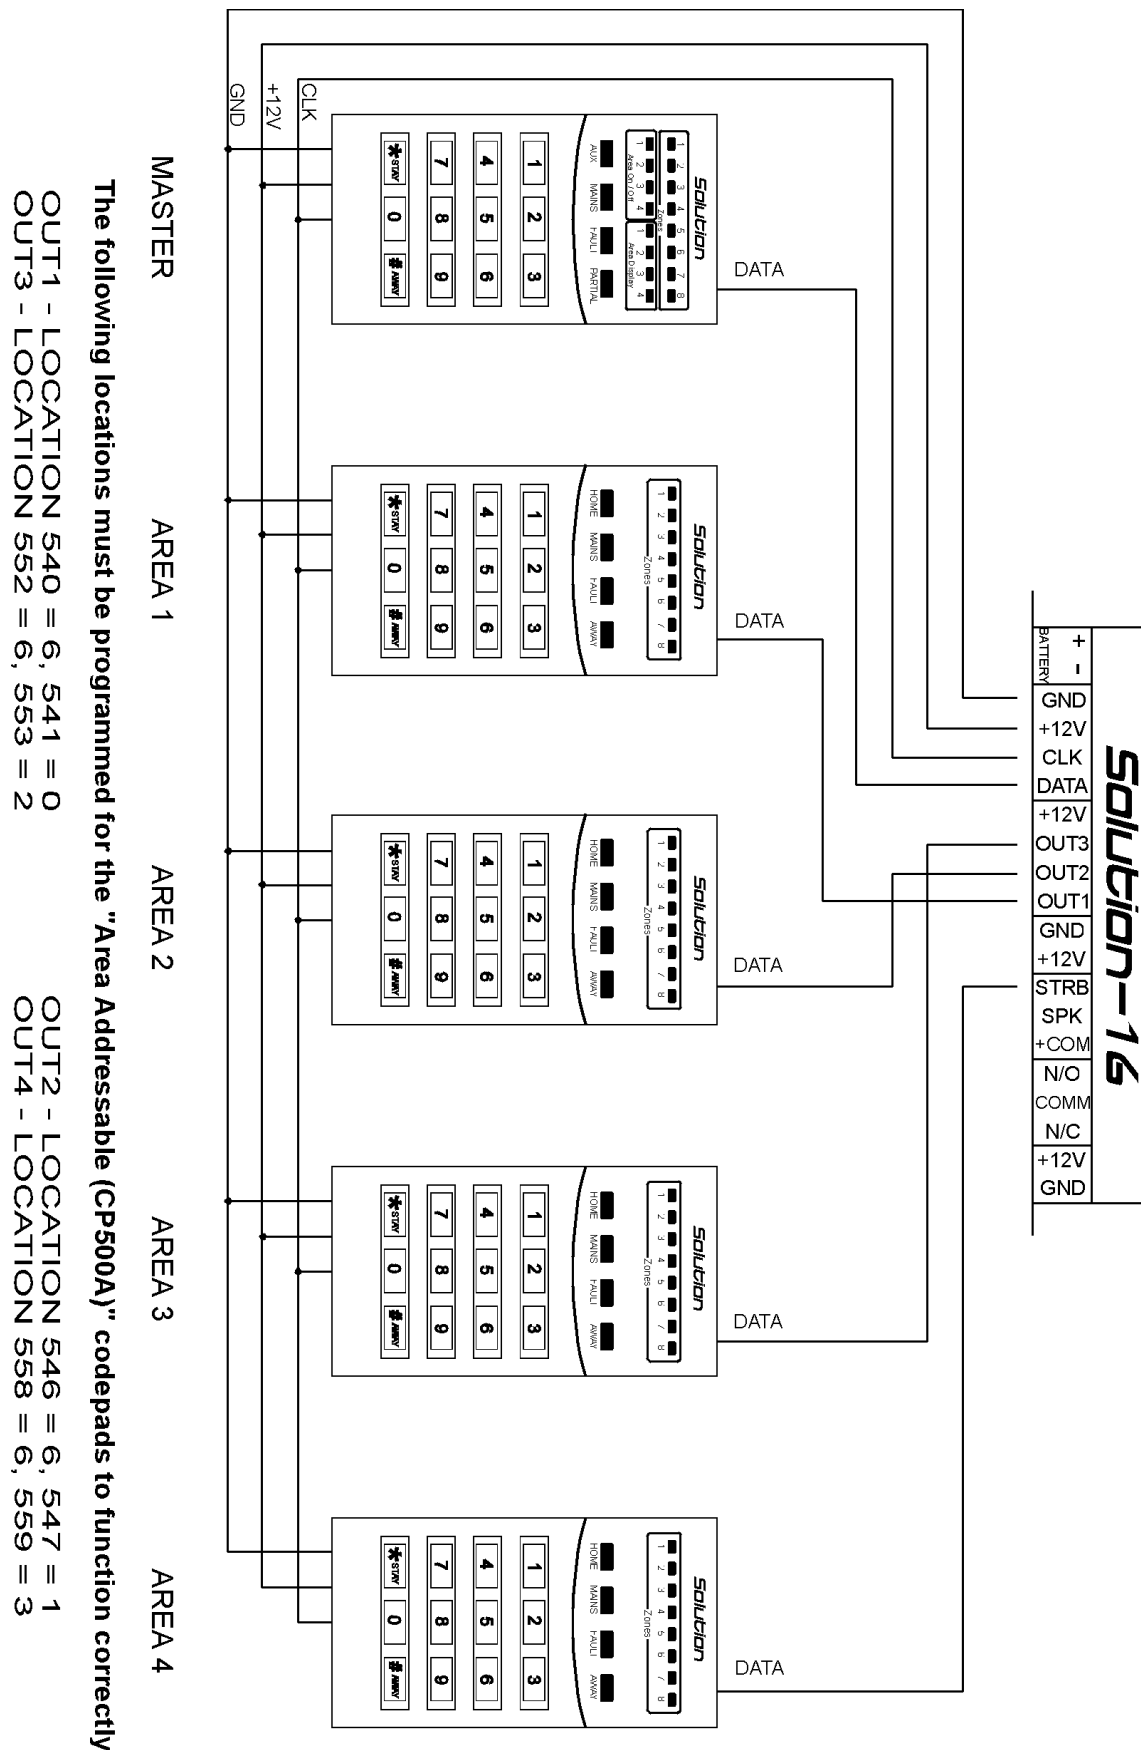


Figure 8: Connections For "CP5 Master Partitioned (CP500P)" Codepad and "CP5 Area Addressable (CP500A)" Codepads

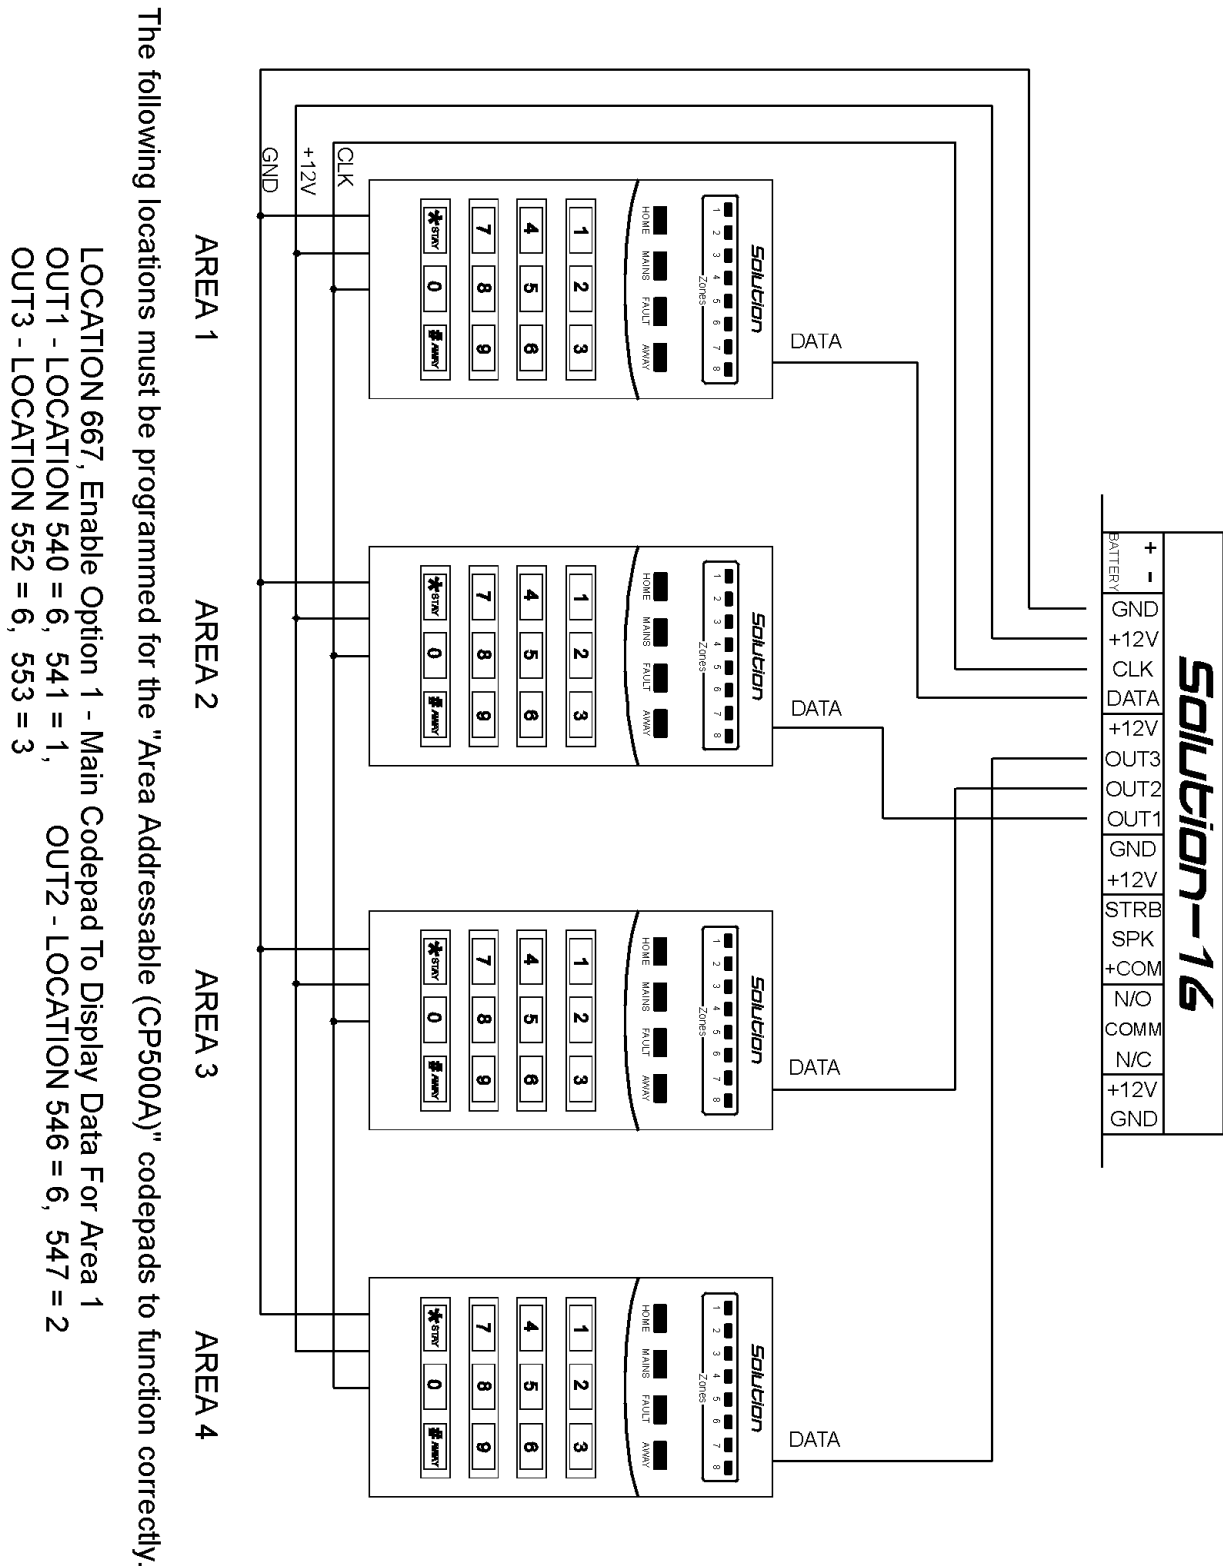


Figure 9: Connections For "CP5 Area Addressable (CP500A)" Codepads

Optional Equipment

Optional Equipment

EDM manufactures numerous accessories that can be used in conjunction with the *Solution- 16* control panel. These optional pieces of equipment will enhance certain features thus making the system extremely flexible.

EDMSAT - Satellite Siren (SS914)

The EDMSAT Satellite Siren is a totally self contained unit incorporating a high powered siren and a weatherproof strobe. A 1.2 AH sealed lead acid battery needs to be fitted. The EDMSAT requires only two wires for operation on which the charging of the battery and triggering of the siren and strobe are carried out. This is done by pulse code modulating (PCM) the charging voltage. Any attempt to tamper with the wiring or to substitute an alternative power source across the wiring will disrupt the data transmission and the EDMSAT will activate immediately. When the EDMSAT carries out a battery test, the unit will sound for two seconds if the battery test fails.

EDMSTU - Securitel Interface (CS800)

This EDMSTU (Securitel Interface) has been designed to operate in conjunction with the *Solution- 16* control panel using a serial connection. This means that all alarm information can be transmitted from the control panel to the EDMSTU using only 3 wires.

The EDMSTU provides full serial reporting of alarms, opening and closing reports, isolations and user ID information. Line integrity is also monitored by the monitoring control room.

Hand Held Programmer (CC814)

The hand held programmer is used to program the locations in the *Solution- 16* control panel. The unit displays the actual location number and the data value currently programmed. It comes complete with a one metre connecting cable and a socket for an external programming key.

Programming Key (CC891)

The programming key is a unique device that will store all programming information programmed in your control panel once copied to the programming key. The programming key can hold all your common configuration data such as monitoring station telephone numbers and zone reporting channels etc.

Modem Module (CC811)

This modem module is required when the control panel is to report to a PET Alpha Pocket Pager Protocol using the CCITT frequency.

Connection

Ensure that all power is disconnected from the *Solution- 16* control panel. Locate the AUXILIARY MODULE socket on the printed circuit board and connect the modem module ensuring that the orientation of the triangular markings on the printed circuit board correspond to those on the modem module.

Modem Module (CC811B)

This modem module is required when the control panel is to report to a PET Alpha Pocket Pager Protocol using the BELL frequency.

Connection

Ensure that all power is disconnected from the *Solution- 16* control panel. Locate the AUXILIARY MODULE socket on the printed circuit board and connect the modem module ensuring that the orientation of the triangular markings on the printed circuit board correspond to those on the modem module.

Voice Module (CC888)

The voice module has been designed so that a clear concise voice message can be transmitted by the control panel to the domestic phone numbers of your choice when an alarm condition occurs. This allows the person receiving the call to easily understand that the control panel at your home or office has been activated and that action is required.

This voice message is pre-recorded by the installer and can be changed as many times as necessary. The message can be any length between 1-16 seconds.

Refer to "Synthesised Voice Reporting" on page 84 for more information

Telephone Line Fault Module (CC887)

This module is used to monitor the existence of the telephone line connected to the control panel. There are a number of options for the different type of indications available when a line fault has been detected. Refer to "LOCATION 673" on page 168 for the different options available.

DTMF Command Module (CC886)

This module is required to be connected to the control panel if any remote programming or operating commands are required to be carried out from a touch tone telephone. Refer to "LOCATION 671" on page 164 for more information on the available options that may be enabled. Refer to "Operating The Control Panel Using The DTMF Command Module" on page 71 for more information on operational procedures.

Dialler Amplifier Lead (CC807)

This lead is required when using a telephone amplifier for listening to the data transmissions between the control panel and the base station receiver. The standard inductive pick-up that is supplied with the amplifier is not compatible with the *Solution* range of control panels. This lead plugs into the amplifier unit and onto the AUXILIARY MODULE socket on the *Solution- 16* control panel.

Alarm Link Software (CC816)

This software package is designed to be used for programming the *Solution- 16* control panel by either the direct link or remote connect methods. All options and features can be accessed via this software as well as maintaining history and service reports. Refer to "LOCATION 663" on page 154 for enabling this feature.

Direct Link Cable (CC808)

The *Solution- 16* control panel has the ability to be programmed using the Alarm Link software without the need of a remote telephone line connection. Using the direct link method, one end of this cable plugs directly onto the AUXILIARY MODULE socket of the *Solution- 16* control panel with the other end going to a serial communications port of an IBM or compatible computer. The control panel can be programmed in the same way as one would if a telephone line was used.

Eight Channel Output Board (CC884)

The eight channel output board is used to increase the available programmable outputs that can be operated from the control panel. An additional eight outputs can be monitored using this expansion board. Refer to Option 2 in "LOCATION 672" on page 165 to enable the eight channel output board. Refer to "Figure 16: Eight Channel Open Collector Output Board (CC884) " on page 200 for connection information.

Eight Zone Expansion Board 3K3 EOL (CC885)

This eight zone expansion board provides terminations for zones 9-16 when the configuration of split EOL resistors is not suitable. 3K3 EOL resistors must be used with this board. Refer to "LOCATION 672" on page 165 to enable this zone expansion board.

Eight Zone Expansion Board Variable EOL (CC883)

This eight zone expansion board provides terminations for zones 9-16 when the configuration of split EOL resistors is not suitable. This board is supplied with different value EOL hybrids for the available resistors that may be used. There is no longer a need to replace the EOL resistor when replacing an existing control panel with a *Solution- 16*. Refer to "LOCATION 672" on page 165 to enable this zone expansion board.

Termination Block For JP5 Pins (CC882)

This termination block provides two terminals when using the JP5 pins EXP and GND for keyswitch operation for arming and disarming the system. Refer to Options 3-12 in "LOCATION 672" on page 165 for more information.

CP5 Eight Zone Codepad (CP508)

This codepad is designed to operate with the *Solution* range of control panels. It provides indications for up to 8 zones. This codepad cannot be used with any system that has been partitioned.

CP5 Sixteen Zone Codepad (CP516)

This codepad is designed to operate with the *Solution* range of control panels. It provides indications for up to 16 zones. This codepad cannot be used with any system that has been partitioned.

CP5 Area Addressable Codepad (CP500A)

This codepad is designed to operate with the *Solution* range of control panels. It provides indications for up to 8 zones. This codepad is designed to be used in any system that has been partitioned. These codepads have dip switches on the printed circuit board to indicate which area in partitioning that the codepad belongs to. Refer to "Codepad Connections For Partitioning" on page 184 for further information on how to connect these codepads.

CP5 Master Partitioned Codepad (CP500P)

This codepad is designed to operate with the *Solution* range of control panels. It provides indications for up to 8 zones. This codepad is designed to be used in any system when the system has been partitioned. These codepads allow the user to toggle from one area to another without the need to go to each area codepad. Refer to "Codepad Connections For Partitioning" on page 184 for further information on how to connect these codepads.

Night Arm Station (CP105)

The night arm station incorporates a panic button and is designed to allow system operation from a bedroom or sitting room to arm and disarm the system in STAY Mode 1.

Phone Controller (CC911)

The phone controller operates at a frequency of 1400 Hz and allows the user to remotely arm the system in AWAY Mode via the telephone. This phone controller can also be used to acknowledge a phone call from the control panel when the system is set up for domestic dialling.

Hand Held Dialler Tester (DD901)

The hand held dialler tester simulates a base station for testing of the control panel's dialling functions. It communicates in most formats.

Telephone Line Fault Monitor (CC659)

The telephone line fault monitor allows the control panel to switch from line A to line B once line A has been cut or disconnected. This telephone line fault monitor powers itself from the phone line and is ideal for switching to a cellular dialler.

Cellular Dialler (CD900)

The cellular dialler when connected to the control panel will transmit alarm information via the cellular phone network to the base station receiver when a land telephone line is not present or has been tampered with.

PS100 Power Supply Module (PS100)

The PS100 Power Supply Module has been designed for applications requiring 13.8 volts DC at currents of up to 1 Amp and must be used in conjunction with the TF008 - 18 volt AC plug pack.

The unit comes complete with our standard, fully short circuit proof, power out and battery charging terminals as well as a DC LED indicator and AC mains fail output. For situations requiring an uninterrupted power source, a rechargeable sealed lead-acid battery can be fitted. In the event of a mains failure, the power supply will switch to battery power without interrupting the load being supplied.

TF008 Plug Pack (TF008)

The TF008 plug packs have been designed to be used with the EDM control panels and the PS100 Power Supply Module. The plug pack includes built in thermal fuses which under overload or fault conditions will blow and eliminate any possible fire threat due to excessive heat build up inside the casing.

The TF008 plug pack incorporates a three wire flying lead which enables a mains earth connection to be made between the equipment and the plug pack. This connection may be required for lightning protection on equipment which is connected to phone lines or for safety reasons such as earthing of metal enclosures.

Solution Codepad Mimic Board (CC820)

The Solution Codepad Mimic Board (CC820) has been designed to allow you to have a separate output indicator for each indicator found on the remote codepad. This will be useful to remotely display system status information.

Solution Relay Output Interface (CC892)

The Solution Relay Output Interface (CC892) has been designed to allow up to an additional 8 relay outputs to be connected to a Solution control panel. This will be useful to remotely display system status information.

The 3 way DIP switch on the board is used to select the data which is to be displayed on the relays. Multiple interfaces may be connected in parallel for different data displays.

2 Wire Smoke Detector Interface (FA101)

The 2 Wire Smoke Detector Interface (FA101) has been designed to allow high quality 2 wire, 24 volt DC smoke detectors to be easily connected to the Solution range of control panels. The interface provides the 24 volts required to power the smoke detector and also provides a relay output which is used to trigger the control panel. Multiple detectors may be connected to the same interface.

Radio Key/Keyswitch Interface (CC813)

This interface was designed to allow simple interfacing of a momentary keyswitch or radio equipment for remote control operations to operate the control panel.

If the R/K terminal is used, a number of momentary keyswitches may be connected in parallel for multiple arm/disarm locations. The ON and OFF terminals can be used to directly interface to any access control system.

For non partitioned control panels, the HOME Mode terminal will force the system to arm and disarm in STAY Mode 1.

There is also a PANIC terminal which allows the customer to issue a panic alarm from a remote keyswitch or hand held radio transmitter.


This is handy if you require your system to be radio controlled and you would like to give your customer total control via a hand held radio remote.

Indication beeps can be provided via the horn speakers when arming and disarming using this interface board. Refer to Option 8 in "LOCATION 665" on page 156 for more information. As you can see the radio key/keyswitch interface allows you the flexibility to perform quite a number of functions cheaply and easily.

<i>No Of Beeps</i>	<i>System Status</i>
1	System Disarmed
2	System Armed In AWAY Mode
3	System Armed In STAY Mode 1


Table 129: Horn Speaker Beeps

Radio: On - Off - Home - Panic

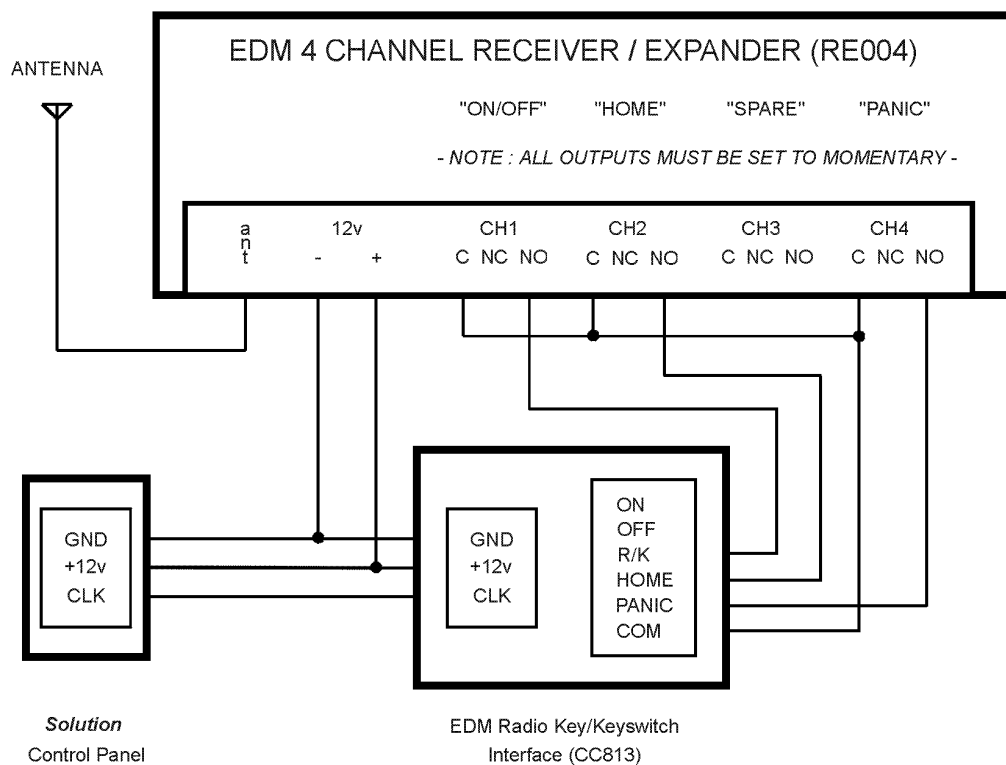

NOTE:
R/K BEEPS MUST BE ENABLED (IF REQUIRED)
LOCATION 665 MUST CONTAIN = 8


Keyswitch: On / Off

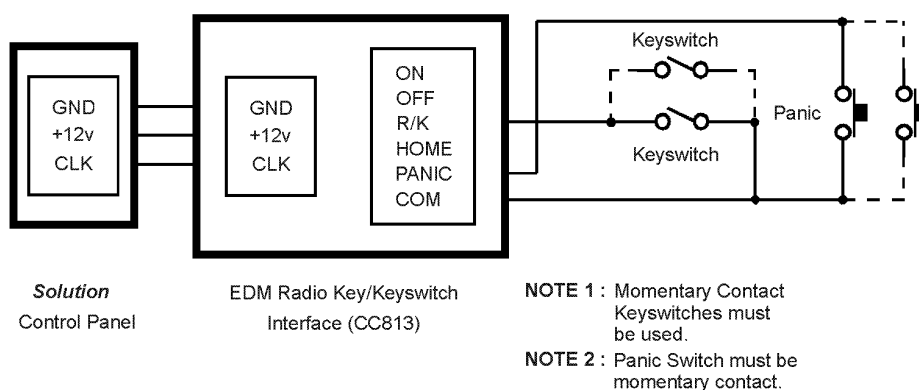

NOTE:
ENABLE KEYSWITCH INTERFACE MODULE
LOCATION 666 MUST CONTAIN = 1


Figure 10: Radio Key/Keyswitch Interface (CC813) Connection Diagram

Keyswitch: On / Off - Panic

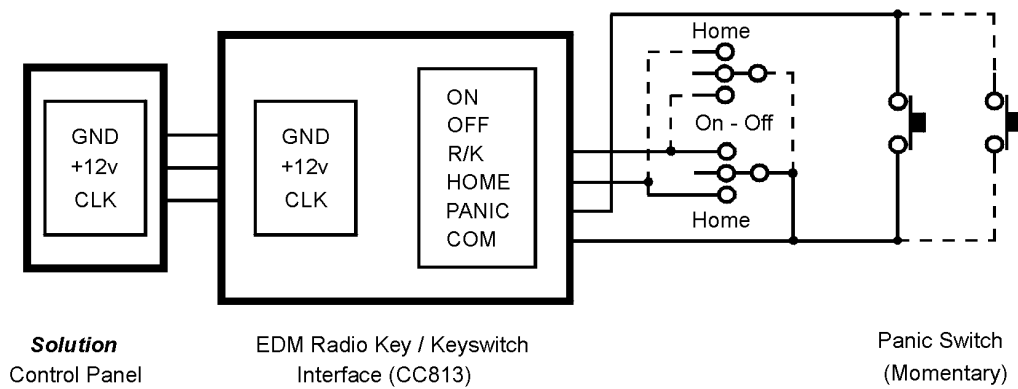

NOTE:
ON / OFF - HOME SWITCHES
MUST BE MOMENTARY

Access Control: On / Off

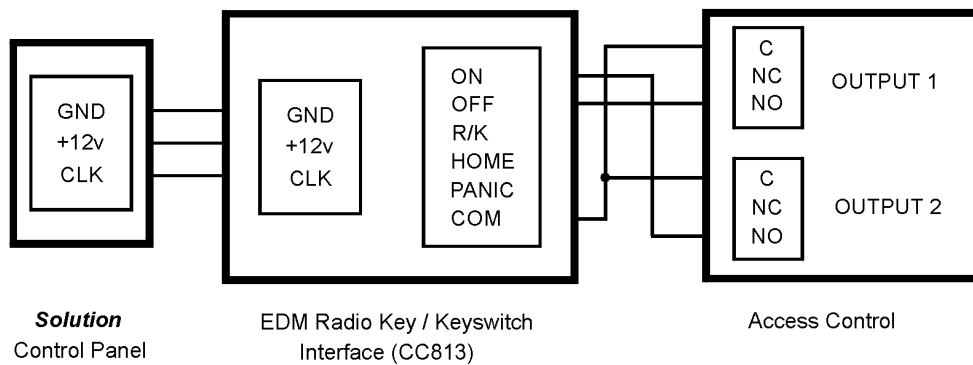

Radio Key: On / Off

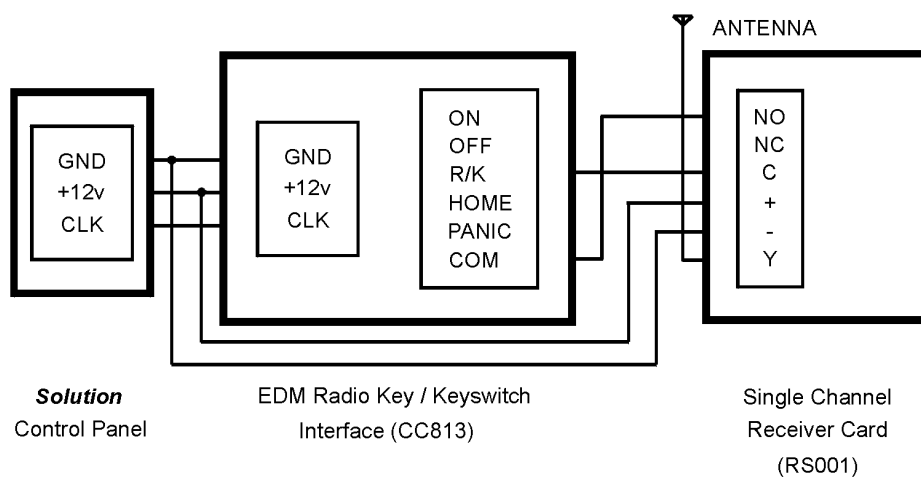


Figure 11: Radio Key/Keyswitch Interface (CC813) Connection Diagram

Terminal Definitions and Descriptions

This Section Includes The Following:

- *Terminal Definitions and Descriptions*
- *Solution-16 Wiring Diagram*
- *Eight Zone Expansion Board (CC885)*
- *Eight Zone Expansion Board (CC883)*
- *Connections Of Split EOL Resistors For 16 Zone Operation*
- *Eight Channel Open Collector Output Board (CC884)*
- *Connection For Momentary Or Latching Keyswitch*
- *Connections For 25 Pin Logging Printer*
- *Connections For 9 Pin Logging Printer*
- *Solution-16 Component Overlay*
- *Telecom Connection Diagrams*

Terminal Definitions and Descriptions

Terminal	Definition
EARTH	This terminal should be connected to the green wire on the TF008 Plug Pack which is internally connected to the mains earth. Extensive lightning protection has been built into the control panel and this terminal will have to be connected correctly if you are to take the best advantage of the protection provided.
18V AC	These two terminals are plug on type, and are the termination point for the TF008 Plug Pack. The voltage of the plug pack being used must be 18 - 22 volts AC and rated at 1.3 Amps minimum for correct operation.
+BATTERY -BATTERY	<p>The + BATTERY connects to the red positive terminal of the battery and the - BATTERY connects to the black negative terminal of the battery. The battery should be a 12 volt sealed lead acid rechargeable type with a capacity of between 1.2 AH - 6.5 AH. The battery is protected by a 3 Amp fuse.</p> <p>The charging globe which is situated above the 3 Amp fuse will always be illuminated until the battery is 100% charged. Because the battery is pulse charged it is not possible to read 13.8 volts from the battery leads. A nominal measurement of 5.6 volts will be evident on a digital meter when the battery has been disconnected.</p>
GND +12V CLK DATA	<p>This group of terminals are the connection points for your system codepads. All system codepads should connect in a parallel configuration back to these terminals. The only factor restricting the number of codepads that can be connected is the available power and its distribution. Each codepad has a maximum power requirement of 60 mA with all indicators illuminated, therefore this should be taken into consideration when calculating your available continuous power. The total continuous external load on the system should not exceed 1 Amp maximum.</p> <p>Note: If the system has been partitioned, the connection of codepads will be different. Refer to "Codepad Connections For Partitioning" on page 184 or "Setting Up and Programming Codepads For Partitioning" on page 183 for more information.</p>
+12V OUT3 OUT2 OUT1	<p>This group of terminals are the output interface terminals. They can be configured to any combination of the functions available via the system programming options. They can be used for a variety of functions with incredible flexibility. All outputs have a common terminal which is positive 12 volts and each output is capable of sinking a maximum of 1 Amp.</p> <p>The outputs are protected by EDM's unique Integrated Protection System, [IPS]. This makes them extremely tolerant to abuse or incorrect wiring. It should be noted that each output is open collector and will not source any current but can sink a maximum of 400 mA per output.</p>
GND +12V	These two terminals are provided to power detectors and other equipment. They are fuse protected by the 1 amp fuse.
STRB SPK +COM	<p>This group of terminals is protected by EDM's solid state IPS system, giving them incredible tolerance against short circuits.</p> <p>The STRB terminal (Output 4) is fully programmable as with outputs 1,2 and 3. This output is factory set as the strobe output and is the connection point for the negative side of a strobe light. The positive side of the strobe is connected to the +COM terminal. This output is normally open circuit going low and is capable of sinking 400 mA.</p> <p>The SPK terminal is the reflex horn speaker output with the common terminal being +COM. There are fifteen different sounds available for the horn speaker. Refer to "Siren Sound Rate" on page 149 for more information. A maximum of two 8 ohm horn speakers may be connected in parallel.</p>

<i>Terminal</i>	<i>Definition</i>
N/O COMM N/C	<p>These relay contacts are fully programmable as with Outputs 1, 2 and 3. They are factory defaulted as an alarm output (Sirens Running - Event Type 1,15).</p> <p>The N/O contact is the connection point for the positive side of a DC siren such as a piezo screamer. The negative side of the DC siren needs to be connected to the GND terminal. A link (JP7) is provided on the PCB for connecting the COM terminal to either GND or 12V. This link should be connected to +12V as shown in "Figure 12: Solution-16 Wiring Diagram" on page 198. The relay is rated at 1 Amp/30 VDC.</p>
+12V GND	These two terminals are provided to power detectors and other equipment. They are fuse protected by the 1 amp fuse.
+12V Z1 Z2 Z3 Z4	These terminals are zones one to four and their common terminal is +12V. All normally closed contacts are to be connected in series with the EOL resistor, where all normally open contacts are to be connected in parallel with the EOL resistor. The function of the zones and their response times are programmable via the system programming options.
+12V GND	These two terminals are provided to power detectors and other equipment. They are fuse protected by the 1 amp fuse.
Z5 Z6 Z7 Z8 +12V	These terminals are zones five to eight and their common terminal is +12V. All normally closed contacts are to be connected in series with the EOL resistor, where all normally open contacts are to be connected in parallel with the EOL resistor. The function of the zones and their response times are programmable via the system programming options.
+12V GND	These two terminals are provided to power detectors and other equipment. They are fuse protected by the 1 amp fuse.

Solution-16 Wiring Diagram

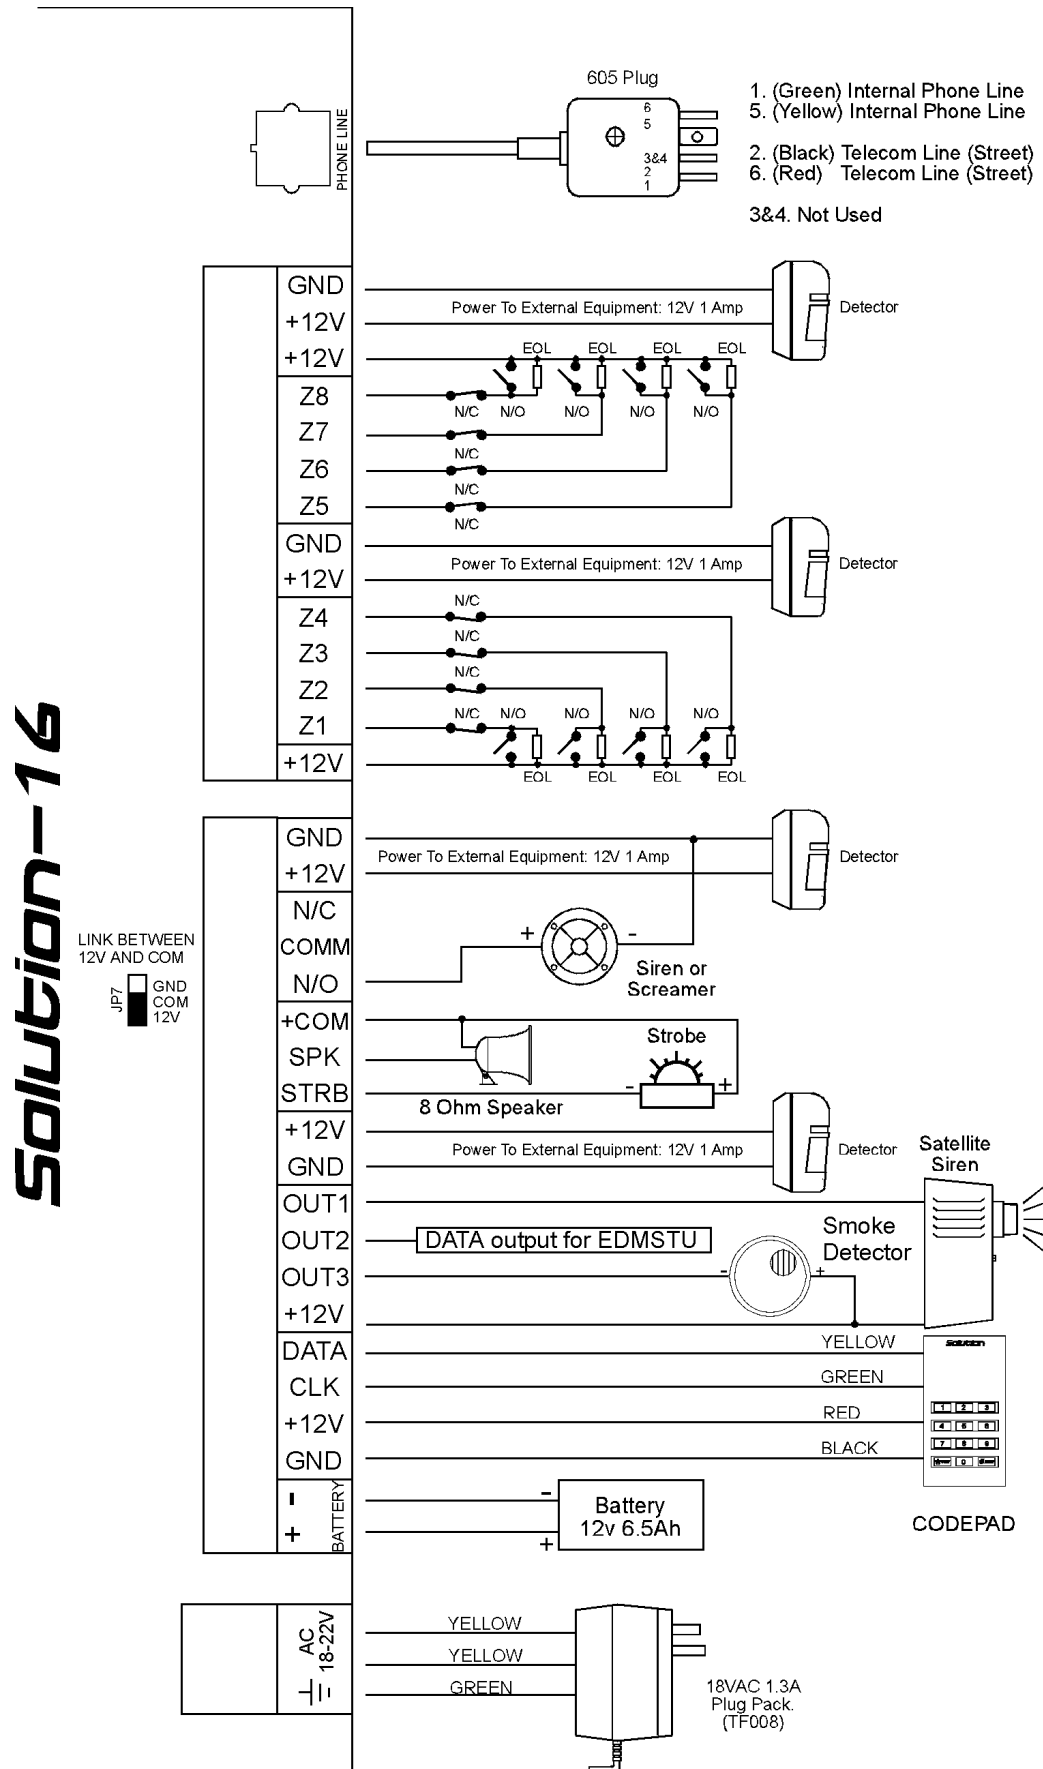


Figure 12: Solution-16 Wiring Diagram

Eight Zone Expansion Board (CC885) - Fixed 3K3 EOL Resistors

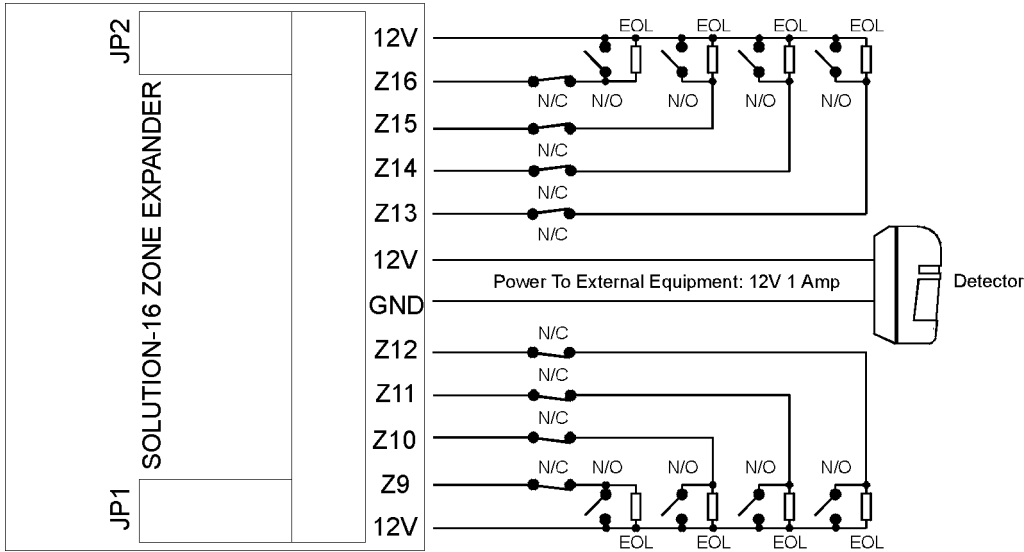


Figure 13: Eight Zone Expansion Board (CC885) - Fixed 3K3 Ohm EOL Resistor

Eight Zone Expansion Board (CC883) - Variable EOL Resistors

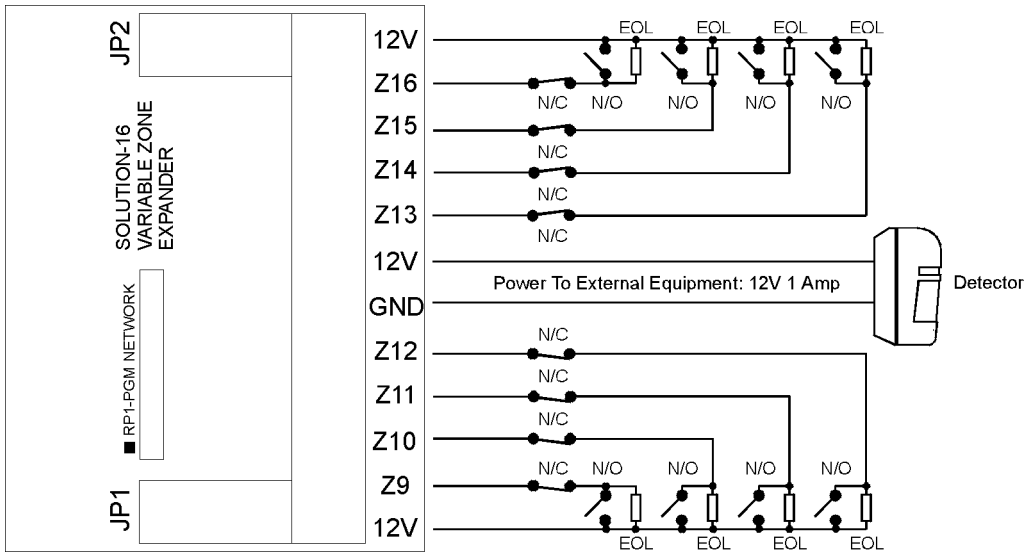


Figure 14: Eight Zone Expansion Board (CC883) - Variable EOL Resistor

Connections Of Split EOL Resistors For 16 Zone Operation

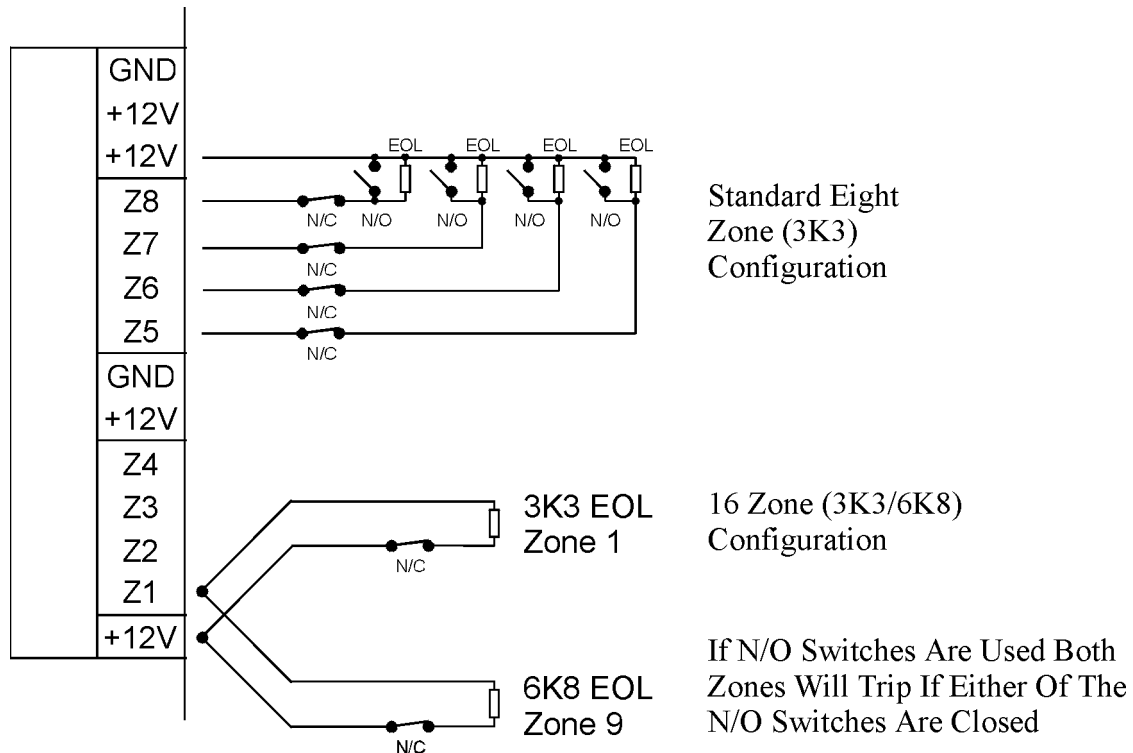


Figure 15: Connections Of Split EOL Resistors For 16 Zone Operation

Eight Channel Open Collector Output Board (CC884)

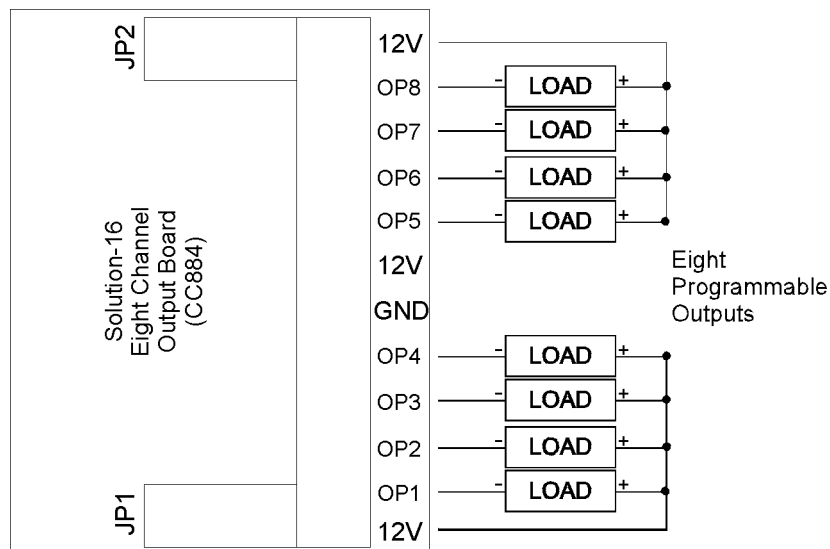


Figure 16: Eight Channel Open Collector Output Board (CC884)

Maximum current is 400 mA per Output

Connection For Momentary Or Latching Keyswitch


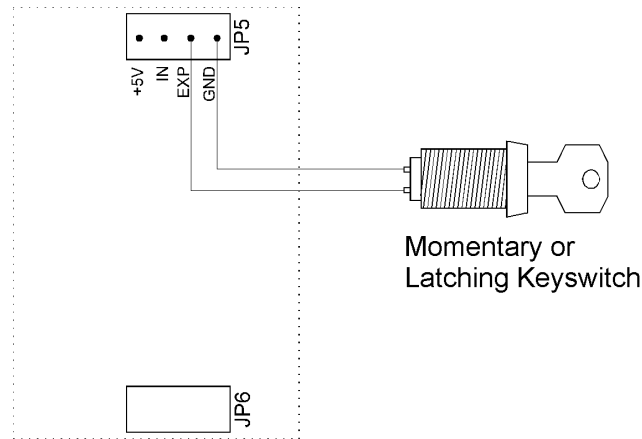


Figure 17: Connection For Momentary Or Latching Keyswitch


Connections For 25 Pin Logging Printer

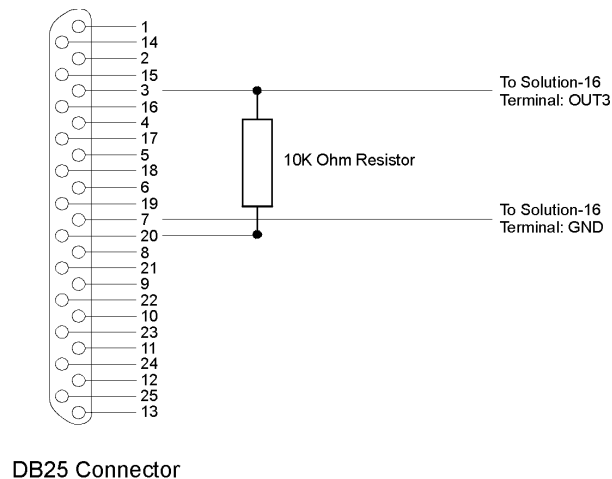

DB25 Connector

Figure 18: Connections For 25 Pin Serial Logging Printer

Connections For 9 Pin Logging Printer

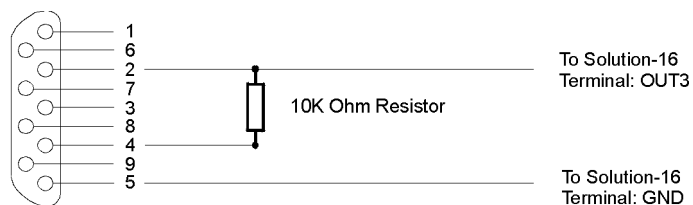

DB9 Connector

Figure 19: Connections For 9 Pin Serial Logging Printer

Solution-16 Component Overlay


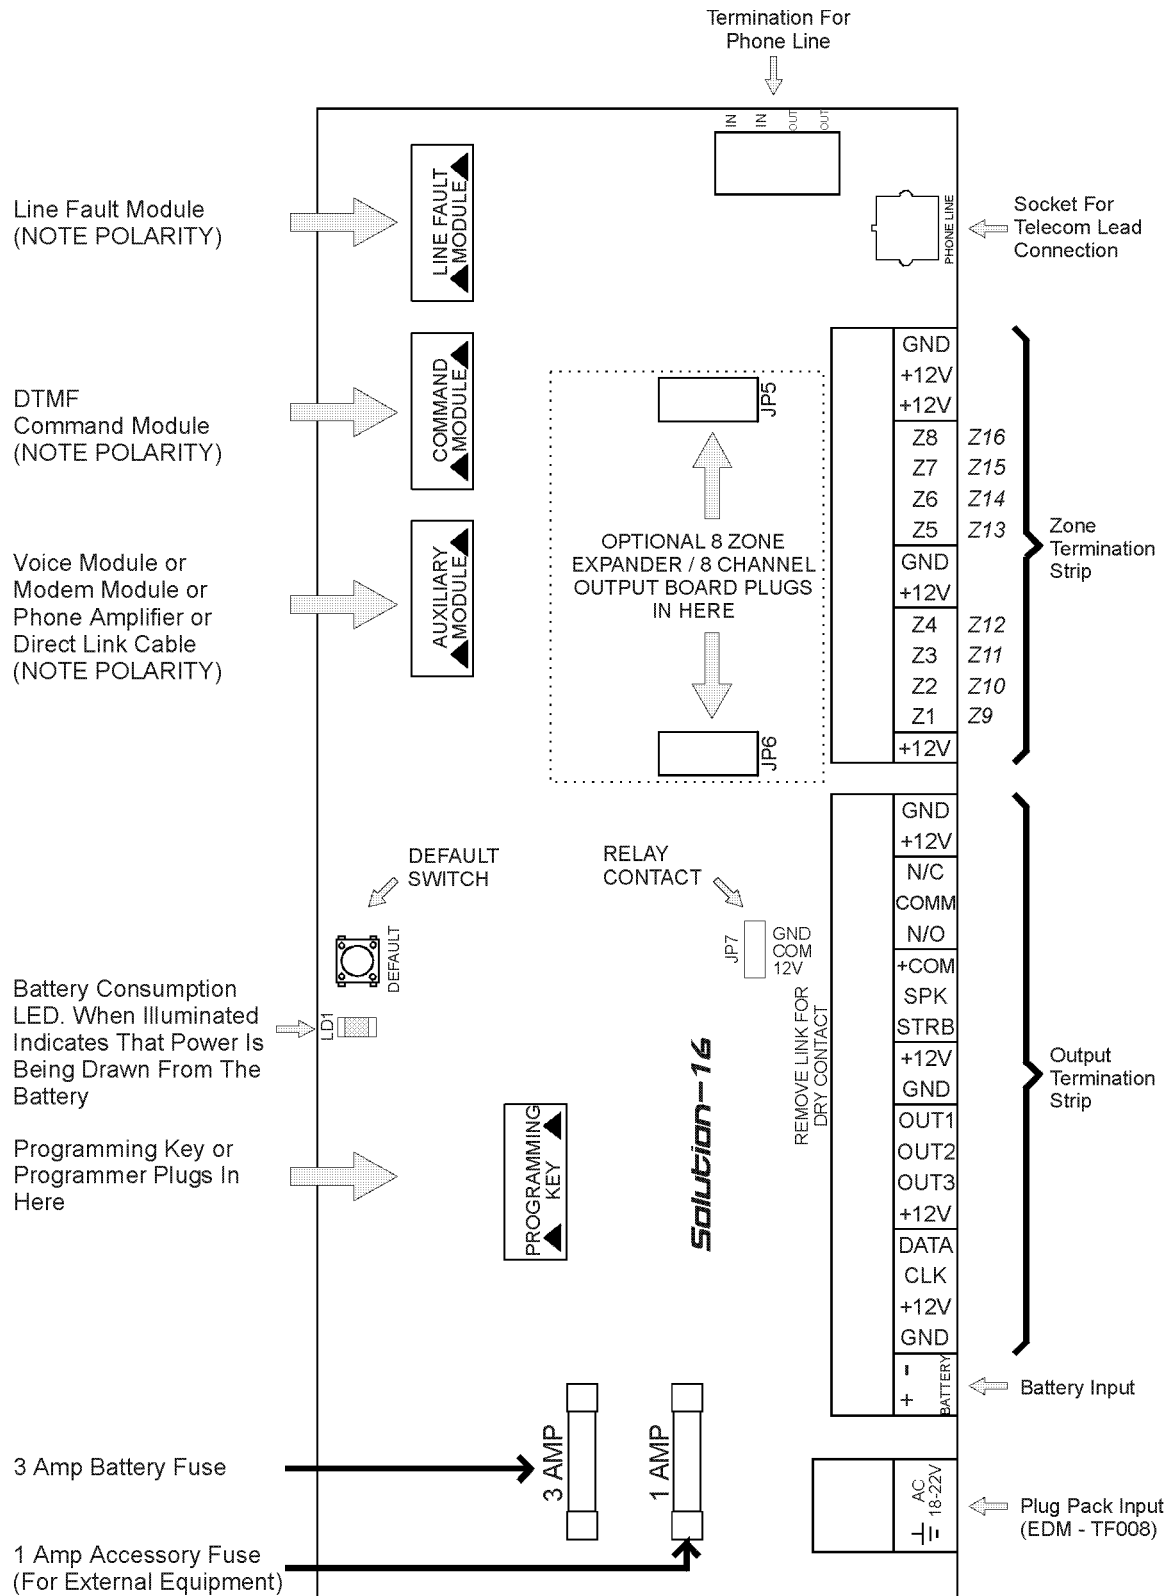



Figure 20: Solution-16 Component Layout

Telecom Connection Diagrams

TELECOM CONNECTION DIAGRAM FOR AUSTRALIA

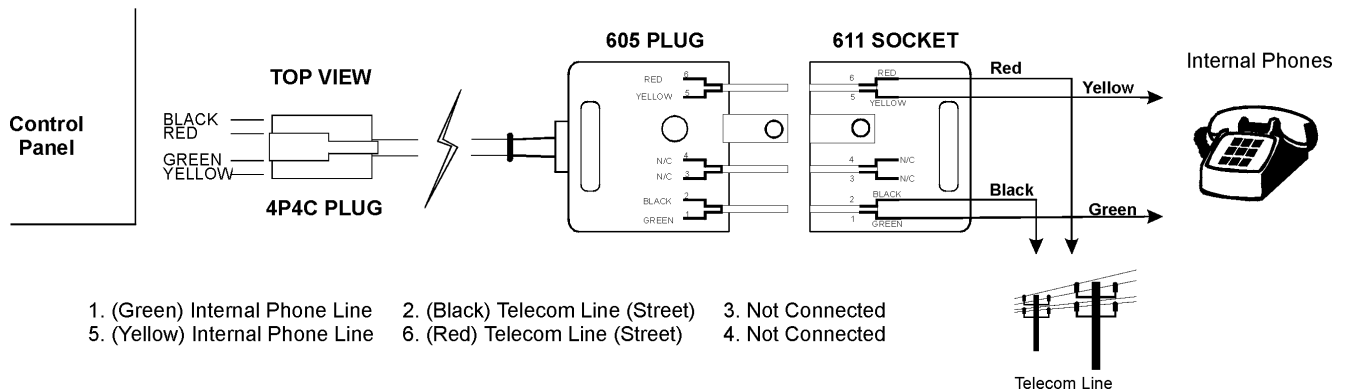

TELECOM CONNECTION DIAGRAM FOR NEW ZEALAND

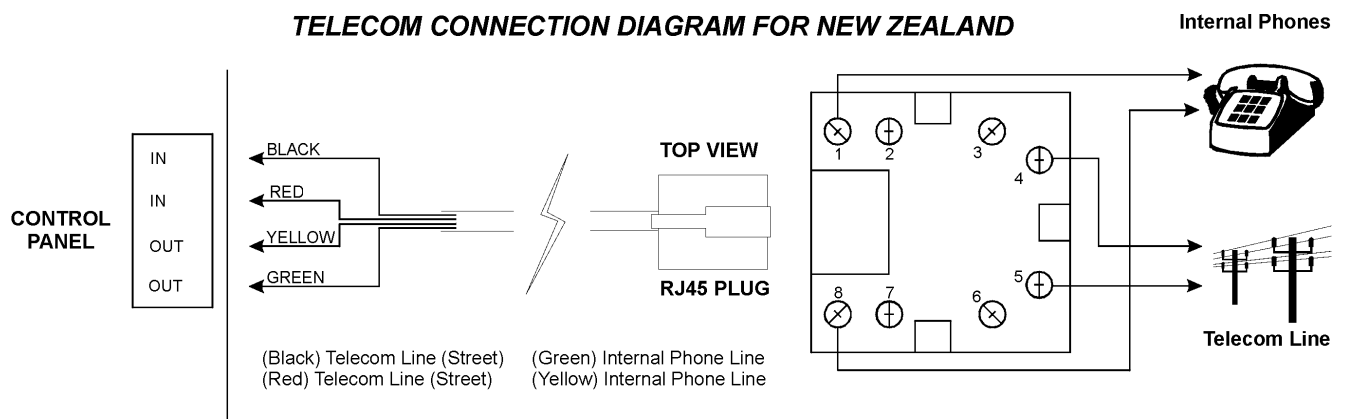

TELECOM CONNECTION DIAGRAM FOR CHINA

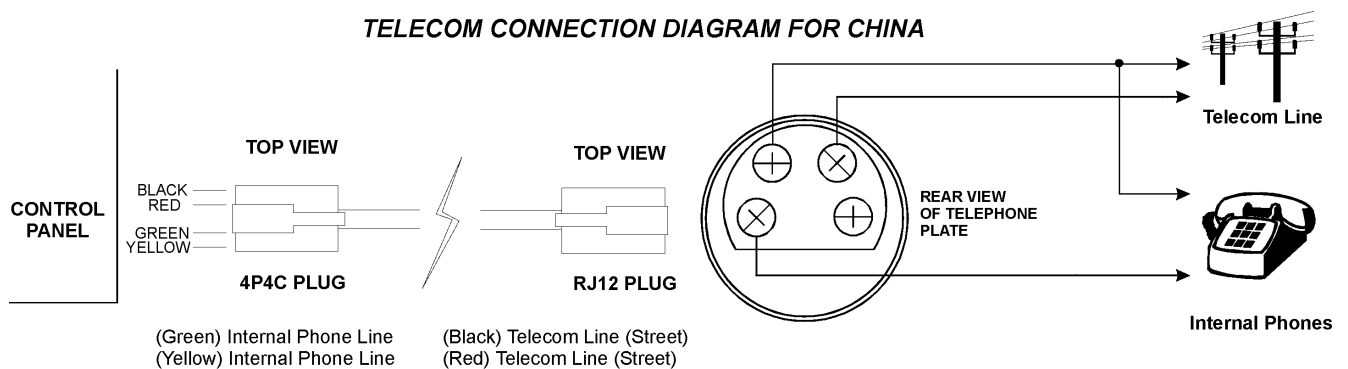


Figure 21: Telecom Connection Diagrams For Solution-16

Appendices

This Section Includes The Following:

- *Telephone Anti-Jamming*
- *Test Reports Only When Armed*

Appendix A

Telephone Anti-Jamming

There are many companies today importing American designed products which claim to have Anti-Jamming and believe it or not, they push this feature as if it were a major break through in control panel technology. Well this in fact is not the case at all as most control panels have some sort of Anti-Jamming feature. We can go as far back as the early 1980's where even the 678 diallers incorporated a form of Anti-Jamming as a standard programmable option.

The important thing to note is that as most American designed products are primarily aimed at their local market and telephone networks, when they are imported to Australia their anti-jamming function does not perform as it should.

To clear up just what anti-jamming is and how it works needs some understanding of Telephone Networks. In America either of the two parties (ie. the one who initiated the call or the one receiving the call) can clear the line by placing the hand piece back on the hook. If you pick up the hand piece again, dial tone will be received and you will be able to make a new call immediately. This is not so here in Australia.

In Australia, only the calling party can immediately terminate the call. If you receive a call from someone and hang up on them, picking the hand piece back up again to make a new call only reconnects you to the original caller. It will not be possible to make another call until the original caller hangs up or you hang up phone for ninety seconds or longer. So you see Australia is very different and needs a special form of anti-jamming to suit our telephone network.

There are control panels on the market that after making a few call attempts which fail simply hang up and wait for ninety seconds or so, in an attempt to clear the jamming incoming call. This may work in some instances where the caller is not a genuine burglar and is not deliberately trying to jam the control panel. With this simple method of hanging up for ninety seconds we have not only delayed the alarm signal for this time but also the time taken for the original failed call attempts which could easily total 4 minutes. This is bad enough in its own right but even more disturbing is the fact that the initial failed call attempts allow for the establishment of an audio connection between the would be burglar and the control panel. Anyone with a little knowledge of alarm systems will be able to actually trick the dialler into thinking it is talking to a base station thus actually clearing the alarm signal. Pretty frightening when you thought the control panel you were using and recommending to your customers is supposed to have anti-jamming.

At Electronics Design and Manufacturing Pty Limited we take anti-jamming very seriously and have in fact devoted a great deal of time and money researching this problem. Our engineers have come up with the best possible anti-jamming procedure known and patented accordingly {Patent Number 571994}.

Our procedure is very simple and effective because we never answer the burglars phone call and the Telecom Network will automatically clear an unanswered call in approximately ninety seconds. This time will be even shorter if the call is originated through the Mobile-Net Network where it will most likely be in the case of a true burglary.

Once the control panel detects that the phone line has stopped ringing it immediately loops the line and makes its call therefore transmitting its alarm message successfully. The line is also automatically disconnected from the telephones within the protected premises immediately on an alarm condition by the control panel to further confuse the burglar and eliminate the possibility of the burglar answering the call. As you can see, our method of anti-jamming will in the worst possible case delay the alarm signal by ninety seconds but even more importantly will never allow for an audio connection between the burglar and the control panel.

All dialling products produced by Electronics Design and Manufacturing Pty Limited have incorporated this true anti-jamming feature as standard since 1985 and we do not consider it as an option but a must in any professional security system.

True anti-jamming can only be found in products produced by Electronics Design and Manufacturing Pty Limited and any other manufacturer can only offer second best due to our patent on this very unique and effective procedure.

Appendix B

Test Reports Only When Armed

The *Solution-16* control panel allows for test reports to be transmitted to the base station receiver to verify that the dialler functional. So what you might say, as most alarm diallers allow you to do this.

The one problem with this is that installations which report opening and closing reports will generally also transmit a test report each day. This call is unnecessary, as a successful opening and closing report means that the dialler is functioning correctly.

The *Solution-16* control panel allows you to save time and money by providing test reports only while the system is in the armed state.

Program "LOCATION 506 - 513" on page 125 with Option 1 (Send test reports only if the system is armed), and then set the test report time to be in the middle of the day. During Monday to Friday when the premises are generally open and the system disarmed a test report will not be transmitted. However, on the weekend, the premises will be closed and the system armed, so a test report will be transmitted at the programmed time thus verifying the operation of the dialler.

At first glance this may not seem to be a big deal but lets do a few sums and you will see just where savings can be made.

Let us assume that the customer wants, needs or has test reports programmed for once a day as well as opening and closing reports. This means that at least three phone calls will be made each week day and one call on Saturday and one call on Sunday.

By using the *Solution-16* control panel you will be able to eliminate five calls per week. This means that over one week you will save your customer \$1.20 and over one year you will save them \$62.40.

Not a bad saving, and remember these figures are for local calls only.

Turning the table slightly, a control room with lets say 1000 customers sending the above mentioned reports, can expect to receive some 884,000 phone calls (\$212,160 assuming local calls) just for reporting opening, closing and test reports over a 12 month period.

If you use the *Solution-16* control panel, you can effectively cut the calls to 624,000 per year (at a value of \$149,760 assuming local calls), a saving of \$62,400. If we now assume that for each call one line is printed on the logging printer, and that one page is filled per 60 calls. You will be able to save 4333 sheets of paper per year and at approximately \$45 per box this becomes a considerable saving.

As you can see using the *Solution-16* control panel will save you money, your customer money and will help conserve our natural resources, in fact, the only people who don't like this feature is Telecom.

Specifications

This Section Includes The Following:

- *Warranty Statement*
- *Specifications*
- *Software Version Number*

Warranty Statement

Electronics Design and Manufacturing Pty Limited warrants this product to be free from defects in material and workmanship for a period of three years from the date of manufacture as indicated by the date stamp and /or the serial number on the product.

Defective units returned by the purchaser at their own expense during this period will be repaired or replaced at the option of the manufacturer. The repair or replacement will be free of charge provided that the defects were not incurred during shipping or handling, or the damage was not due to causes beyond the control of Electronics Design and Manufacturing Pty Limited, such as lightning, excessive voltage, mechanical shock or damage arising out of abuse, alteration or improper application of the equipment.

Specifications

<i>Temperature Range:</i>	0 - 45 Degrees Celsius
<i>Humidity:</i>	10% - 95%
<i>Power Source:</i>	TF008 Plug Pack - 240 Volt/18 Volt AC @ 1.3 Amp
<i>Stand-By Current:</i>	65 mA
<i>Current Draw In Alarm Condition:</i>	115 mA
<i>Current Draw With No Alarm and Codepad Fitted:</i>	105 mA
<i>Back-Up Battery:</i>	6.5 Ah / 12 Volt DC Rechargeable Sealed Lead Acid Battery
<i>Dimensions:</i>	306 mm x 262 mm x 84 mm (Packed In Carton)
<i>Weight:</i>	2.5 Kg
<i>Austel Approval Number:</i>	A94/02B/0476 (Only With TF008 Plug Pack)
<i>New Zealand Telepermit:</i>	PTC 211/95/246

Software Version Number

LOCATION 999

1. 40

When using the Hand Held Programmer (CC814), you have the ability to display the software version number of the control panel. Refer to "Command 999 - Display Software Version Number" on page 30 for more information.

Programming Sheets

Location 000 - 015

Page 96

Primary Telephone Number

0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Location 016 - 031

Page 97

Secondary Telephone Number

0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Location 032 - 047

Page 97

Callback Telephone Number

0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Location 048

Page 97

Dialling Format

1 = Australian DTMF

2 = Australian Decadic

3 = Alternate DTMF & Decadic (AUST)

4 = International DTMF

5 = Reversed Decadic

6 = Alternate DTMF & Reversed Decadic

1

Location 049

Page 98

Handshake Tone

1 = HI-LO Handshake (Contact ID)

2 = 1400 Hz (Ademco TX @ 1900 Hz)

3 = 2300 Hz (Sescoa TX @ 1800 Hz)

4 = No Handshake Required

5 = Pager

1

Location 050

Page 98

Transmission Format

1 = Contact ID

2 = 4 + 2 Expressed

3 = 4 + 2 Pulsed

4 = 4 + 2 Pulsed + Checksum

5 = 4 + 1 Pulsed + Universal

6 = 4 + 1 Pulsed Expanded

7 = 3 + 1 Pulsed Universal

8 = 3 + 1 Pulsed Expanded

9 = Reserved

10 = Reserved

11 = Domestic

12 = Basic Pager

13 = Reserved

14 = PET Alpha Pager

15 = Synthesised Voice

1

Location 051

Page 99

Transmission Speed

1 = 1 Pulse / Second

2 = 10 Pulses / Second

3 = 15 Pulses / Second

4 = 20 Pulses / Second

5 = 20 Pulses / Second FDL

6 = 40 Pulses / Second

1

Location 052 - 055

Page 100

Subscriber ID Number

0	0	0	0
---	---	---	---

Location 056 - 062

Page 102

Installer Code

1	2	3	4	15	15	15
---	---	---	---	----	----	----

Location 063

Page 100

Ring Count

15 = Answering Machine Bypass 1

14 = Answering Machine Bypass 2 (New - Software Version 1.37 Onwards)

8

Location 064 - 319

Page 102

User Codes

User Code 1 Location 064 - 071

2	5	8	0	15	15	15	8
---	---	---	---	----	----	----	---

User Code 2 Location 072 - 079

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 3 Location 080 - 087

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 4 Location 088 - 095

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 5 Location 096 - 103

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 6 Location 104 - 111

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 7 Location 112 - 119

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 8 Location 120 - 127

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 9 Location 128 - 135

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 10 Location 136 - 143

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 11 Location 144 - 151

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 12 Location 152 - 159

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 13 Location 160 - 167

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 14 Location 168 - 175

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 15 Location 176 - 183

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 16 Location 184 - 191

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 17 Location 192 - 199

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 18 Location 200 - 207

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 19 Location 208 - 215

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 20 Location 216 - 223

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 21 Location 224 - 231

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 22 Location 232 - 239

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 23 Location 240 - 247

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 24 Location 248 - 255

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 27 Location 272 - 279

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 30 Location 296 - 303

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 25 Location 256 - 263

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 28 Location 280 - 287

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 31 Location 304 - 311

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 26 Location 264 - 271

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 29 Location 288 - 295

15	15	15	15	15	15	15	0
----	----	----	----	----	----	----	---

User Code 32 Location 312 - 319

0	15	15	15	15	15	15	1
---	----	----	----	----	----	----	---

Location 320 - 327

Auxiliary Code 1

Page 105

15	15	15	15	15	15	15	2
----	----	----	----	----	----	----	---

Location 328 - 335

Auxiliary Code 2

Page 105

15	15	15	15	15	15	15	2
----	----	----	----	----	----	----	---

Location 336 - 337

Day Alarm Mask

Page 114

Location 336	1 = Zone 1 2 = Zone 2 4 = Zone 3 8 = Zone 4	Location 337	1 = Zone 5 2 = Zone 6 4 = Zone 7 8 = Zone 8
---------------------	--	---------------------	--

1	0
---	---

Location 338

Code Retries

Page 105

6

Location 339

EOL Resistor Value

Page 116

1 = 1K 2 = 1K5 3 = 2K2 4 = 3K3	5 = 3K9 6 = 4K7 7 = 5K6 8 = 6K8	9 = 10K 10 = 12K 11 = 22K 12 = Reserved	13 = Reserved 14 = Reserved 15 = Split EOL (3K3/6K8) For 16 Zone Operation
---	--	--	---

4

Location 340 - 467

Zones

Page 108

Zone 1 Location 340 - 347

2	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 2 Location 348 - 355

1	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 3 Location 356 - 363

1	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 4 Location 364 - 371

1	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 5 Location 372 - 379

1	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 6 Location 380 - 387

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 7 Location 388 - 395

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 8 Location 396 - 403

12	0	0	0	1	3	3	1
----	---	---	---	---	---	---	---

Zone 9 Location 404 - 411

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 10 Location 412 - 419

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 11 Location 420 - 427

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 12 Location 428 - 435

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 13 Location 436 - 443

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 14 Location 444 - 451

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 15 Location 452 - 459

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---

Zone 16 Location 460 - 467

0	0	0	0	1	3	0	1
---	---	---	---	---	---	---	---



Zone
Type



Zone
Option



Zone Pulse
Count



Zone Pulse
Count Time



Event Code
Hundreds Digit



Event Code
Tens Digit



Event Code
Units Digit



Dialler
Channel

Each zone contains eight locations which are divided into two groups of four. The first four locations determine how the zone operates, while the second four locations contain the dialler reporting information.

Zone Types

There are fifteen different zone types to choose from. Each zone can be programmed as any one of the zone types listed in the table below.

Zone Type	Description	Zone Type	Description
0	Instant	8	Delay-1 + Isolated In STAY Mode 1
1	Handover	9	Delay-2 + Isolated In STAY Mode 1
2	Delay-1	10	Delay-3 + Isolated In STAY Mode 1
3	Delay-2	11	Delay 4 + Isolated In STAY Mode 1
4	Delay-3	12	24 Hour Burglary
5	Delay-4	13	24 Hour Fire
6	Instant + Isolated In STAY Mode 1	14	Chime Only
7	Handover + Isolated In STAY Mode 1	15	Zone Not Used

Zone Options

Zone Option	Description
1	Lockout Siren
2	Lockout Dialler
4	Silent Alarm
8	Sensor Watch

Zone Pulse Count Settings

The pulse count settings for each zone can be programmed between 0 - 15.

Zone Pulse Count Time

Zone pulse count time is the time frame or period over which the number of pulses must register.

20 ms Loop Response Time Zone Pulse Count Time		150 ms Loop Response Time Zone Pulse Count Time	
0	0.5 Second	8	20 Seconds
1	1 Second	9	30 Seconds
2	2 Seconds	10	40 Seconds
3	3 Seconds	11	50 Seconds
4	4 Seconds	12	60 Seconds
5	5 Seconds	13	90 Seconds
6	10 Seconds	14	120 Seconds
7	15 Seconds	15	200 Seconds

Zone Descriptions

Use this table as a reference to indicate what each zone is connected to.

Zone	Description	Zone	Description
1		9	
2		10	
3		11	
4		12	
5		13	
6		14	
7		15	
8		16	

Location 468 - 469

Page 118

Bypass Codes (Zones 1 To 8)

9	9
---	---

Location 470 - 471

Page 118

Bypass Codes (Zones 9 To 16)

9	9
---	---

Location 472 - 473

Page 119

Trouble Codes (Zones 1 To 8)

9	9
---	---

Location 474 - 475

Page 119

Trouble Codes (Zones 9 - 16)

9	9
---	---

Location 476 - 479

Page 120

Codepad Duress

1	2	1	1
---	---	---	---

Location 480 - 483

Page 121

Codepad Panic

1	2	0	1
---	---	---	---

Location 484 - 487

Page 122

Access Denied (Code Retries)

4	2	1	1
---	---	---	---

Location 488 - 491

Page 122

AC Fail

3	0	1	1
---	---	---	---

Location 492 - 495

Page 123

Low Battery

3	0	9	1
---	---	---	---

Location 496 - 499

Page 123

Program Altered Code

3	0	6	0
---	---	---	---

Location 500 - 503 (**Software Version 1.10 - 1.31 Only**)

Page 124

Sensor Trouble (Sensor Watch)

3	8	3	1
---	---	---	---

Location 500 - 503 (**New - Software Version 1.32 Onwards**)

Page 124

Sensor Trouble (Sensor Watch)

3	0	7	1
---	---	---	---

Location 504 - 505

Page 124

Open/Close

8	9
---	---

Location 506 - 513

Page 125

Test Reporting Time

0	0	0	0	0	0	0	9	0
---	---	---	---	---	---	---	---	---

Location 514 - 529

Page 91

Pager Network Password

7	0	6	1	7	3	7	3	7	7	6	4	0	0	0	0
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Location 530 - 539

Page 92

Pager ID Number

0	0	0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---	---	---

Location 540 - 623

Page 129

Output Configurations

		Location 540 - 545	Output 1	<table><tr><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr></table>	0	0	0	0	0	0	Output 2	<table><tr><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr></table>	0	0	0	0	0	0						
0	0	0	0	0	0																			
0	0	0	0	0	0																			
		Location 546 - 551																						
Output 3	<table><tr><td>0</td><td>1</td><td>10</td><td>2</td><td>0</td><td>3</td></tr></table>	0	1	10	2	0	3	Location 552 - 557	Strobe	<table><tr><td>2</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td></tr></table>	2	0	1	0	0	0	Relay	<table><tr><td>1</td><td>15</td><td>1</td><td>0</td><td>0</td><td>0</td></tr></table>	1	15	1	0	0	0
0	1	10	2	0	3																			
2	0	1	0	0	0																			
1	15	1	0	0	0																			
		Location 558 - 563																						
Codepad	<table><tr><td>0</td><td>12</td><td>2</td><td>1</td><td>0</td><td>1</td></tr></table>	0	12	2	1	0	1	Location 570 - 575	Output 7	<table><tr><td>5</td><td>2</td><td>6</td><td>3</td><td>1</td><td>0</td></tr></table>	5	2	6	3	1	0	Output 8	<table><tr><td>5</td><td>2</td><td>6</td><td>3</td><td>6</td><td>0</td></tr></table>	5	2	6	3	6	0
0	12	2	1	0	1																			
5	2	6	3	1	0																			
5	2	6	3	6	0																			
		Location 576 - 581																						
Output 9	<table><tr><td>5</td><td>3</td><td>6</td><td>3</td><td>1</td><td>0</td></tr></table>	5	3	6	3	1	0	Location 588 - 593	Output 10	<table><tr><td>5</td><td>3</td><td>6</td><td>3</td><td>6</td><td>0</td></tr></table>	5	3	6	3	6	0	Output 11	<table><tr><td>5</td><td>4</td><td>6</td><td>3</td><td>1</td><td>0</td></tr></table>	5	4	6	3	1	0
5	3	6	3	1	0																			
5	3	6	3	6	0																			
5	4	6	3	1	0																			
		Location 594 - 599																						
Output 12	<table><tr><td>5</td><td>4</td><td>6</td><td>3</td><td>6</td><td>0</td></tr></table>	5	4	6	3	6	0	Location 606 - 611	Output 13	<table><tr><td>5</td><td>5</td><td>6</td><td>3</td><td>1</td><td>0</td></tr></table>	5	5	6	3	1	0	Output 14	<table><tr><td>5</td><td>5</td><td>6</td><td>3</td><td>6</td><td>0</td></tr></table>	5	5	6	3	6	0
5	4	6	3	6	0																			
5	5	6	3	1	0																			
5	5	6	3	6	0																			
		Location 612 - 617																						
		Location 618 - 623																						

Location 624 - 625

Page 144

Entry Timer 1

Location 624 Increments Of 1 Second (0 - 15 Sec's)
 Location 625 Increments Of 16 Seconds (0 - 240 Sec's)

10	0
----	---

Location 626 - 627

Page 144

Entry Timer 2

Location 626 Increments Of 1 Second (0 - 15 Sec's)
 Location 627 Increments Of 16 Seconds (0 - 240 Sec's)

4	1
---	---

Location 628 - 629

Page 144

Entry Timer 3

Location 628 Increments Of 1 Second (0 - 15 Sec's)
 Location 629 Increments Of 16 Seconds (0 - 240 Sec's)

14	1
----	---

Location 630 - 631

Page 144

Entry Timer 4

Location 630 Increments Of 1 Second (0 - 15 Sec's)
 Location 631 Increments Of 16 Seconds (0 - 240 Sec's)

8	2
---	---

Location 632 - 633

Page 145

Exit Time For AWAY Mode

Location 632 Increments Of 1 Second (0 - 15 Sec's)
 Location 633 Increments Of 16 Seconds (0 - 240 Sec's)

12	3
----	---

Location 634 - 635

Page 145

Exit Time For STAY Mode 1

Location 634 Increments Of 1 Second (0 - 15 Sec's)
 Location 635 Increments Of 16 Seconds (0 - 240 Sec's)

12	3
----	---

Location 636 - 637

Page 145

Exit Time For STAY Mode 2

Location 636 Increments Of 1 Second (0 - 15 Sec's)
 Location 637 Increments Of 16 Seconds (0 - 240 Sec's)

12	3
----	---

Location 638 - 639

Page 145

Entry Guard Time For STAY Mode

Location 638 Increments Of 1 Second (0 - 15 Sec's)
 Location 639 Increments Of 16 Seconds (0 - 240 Sec's)

12	3
----	---

Location 640 - 641

Page 146

Codepad Lockout Time

Location 640 Increments Of 1 Second (0 - 15 Sec's)
 Location 641 Increments Of 16 Seconds (0 - 240 Sec's)

0	0
---	---

Location 642 - 643

Page 146

Sensor Watch Time

Location 642 Increments Of Days (Tens Digit)
 Location 643 Increments Of Days (Units Digit)

0	0
---	---

Location 644 - 649 (Software Version 1.10 Only)

Page 147

System Date

Location 644 Day Of The Week (Sun = 1 Sat = 7)
 Location 645 Month Of The Year (Jan = 1 Dec = 12)
 Location 646 Day Of The Month (Tens Digit)
 Location 647 Day Of The Month (Units Digit)
 Location 648 Current Year (Tens Digit)
 Location 649 Current Year (Units Digit)

1	1	0	1	9	5
---	---	---	---	---	---

Location 644 - 649 (New - Software Version 1.20 Onwards)

Page 147

System Date

Location 644 Day Of The Month (Tens Digit)
 Location 645 Day Of The Month (Units Digit)
 Location 646 Month Of The Year (Tens Digit)
 Location 647 Month Of The Year (Units Digit)
 Location 648 Current Year (Tens Digit)
 Location 649 Current Year (Units Digit)

0	1	0	1	9	5
---	---	---	---	---	---

Location 650 - 653

Page 148

Auto Arming Time

Location 650 Hour Of The Day (Tens Digit)
 Location 651 Hour Of The Day (Units Digit)
 Location 652 Minute Of The Day (Tens Digit)
 Location 653 Minute Of The Day (Units Digit)

0	0	0	0
---	---	---	---

Location 654

Page 148

Pre Arming Alert Time

Location 654 Increments Of Minutes (0-15)

5

Location 655

Page 149

Pre Alert Time For Timed Output

Location 655 Increments Of Minutes (0-15)

5

Location 656 - 659

Page 149

Auto Operation Of Timed Output

Location 656 Hour Of The Day (Tens Digit)
 Location 657 Hour Of The Day (Units Digit)
 Location 658 Minute Of The Day (Tens Digit)
 Location 659 Minute Of The Day (Units Digit)

0	0	0	0
---	---	---	---

Location 660

Page 149

Siren Run Time

Location 660 Increments Of Minutes (0-15)

10

Location 661

Siren Sound Rate (Slow < -Sound- > Fast)

7

Location 662 - **Software Version 1.10 - 1.37 Only**

Page 150

Swinger Shutdown Count For Siren and Dialler

0

Location 662 (**New - Software Version 1.40 Onwards**)

Page 151

Swinger Shutdown Count For Siren

0

Location 663

Page 154

Dialler Options 1

1 = Enable Dialler Reporting Functions
 2 = Enable Remote Arming Via The Telephone
 4 = Enable Upload/Download Via Alarm Link
 8 = Terminate "Alarm Link" Session On Alarm

5

Location 664

Page 155

Dialler Options 2

1 = Send Open/Close Reports Only If A Previous Alarm Has Occurred
 2 = Enable First To Open/Last To Close Reporting (Partitioned Systems Only)
 4 = Send Open/Close Reports When In STAY Mode
 8 = Enable Answering Machine Bypass Only When System Is Armed
(New - Software Version 1.31 Onwards)

0

Location 665

Page 156

System Options 1

1 = Enable Forced Arming
 2 = Enable EDM Smart Lockout
 4 = Enable Monitoring Of Horn Speaker
 8 = Enable Horn Speaker Beeps For Remote Control Operation

1

Location 666

Page 157

System Options 2

1 = Enable Radio Key/Keyswitch Interface Or Night Arm Station
 2 = Enable Handover Delay To Be Sequential
 4 = Enable Codepad Panic To Be Silent
 8 = Enable Codepad Tamper To Be Silent

2

Location 667

Page 158

System Options 3

1 = Enable The Main Codepad To Display Data For Area #1
 2 = Enable External Modem Module For Alarm Link Operation
 4 = Enabled = AC Fail In One Hour, Disabled = AC Fail In Two Minutes
 8 = Enable Pulse Count Handover

0

Location 668 (**Software Version 1.10 Only**)

Page 159

System Options 4

1 = Delay Siren Until Transmission Is Complete
 2 = Enable Resetting Of Sirens From All Areas (Partitioned Systems Only)
 4 = Enable Auto Arming In AWAY Mode
 8 = Enable Auto Arming In STAY Mode

0

Location 668 (**New - Software Version 1.20 Onwards**)

Page 160

System Options 4

1 = Delay Siren Until Transmission Is Complete
 2 = Enable Resetting Of Sirens From All Areas (Partitioned Systems Only)
 4 = Ignore AC Mains Fail (**New - Software Version 1.30 Onwards**)
 8 = Enable Auto Arming In STAY Mode

0

Location 669 (Software Version 1.10 Only)

Page 161

Consumer Options 1

- 1 = Enable Entry Guard Delay In STAY Mode
- 2 = Enable Operation Of Sirens & Strobe In STAY Mode
- 4 = Code Only To Isolate
- 8 = Enable Codepad Extinguish Mode

2

Location 669 (New - Software Version 1.20 Onwards)

Page 162

Consumer Options 1

- 1 = Enable The STAY LED To Display Day Alarm ON/OFF State
- 2 = Enable Operation Of Sirens & Strobe In STAY Mode
- 4 = Partitioned Codepad - AUX LED To Display Telephone Line In Use
- 8 = Enable Codepad Extinguish Mode

2

Location 670

Page 163

Consumer Options 2

- 1 = Enable "User Code + 0 + AWAY" Function To Arm/Disarm All Areas
- 2 = Enable Single Button Arming In AWAY, STAY Mode 1 and STAY Mode 2
- 4 = Enable Single Button Disarming From STAY Mode 1 and STAY Mode 2
- 8 = Enable Alarm Memory Reset On Disarm

2

Location 671

Page 164

DTMF Command Module Options

- 1 = Enable Access Into Installer's Programming Mode
- 2 = Enable Access To Installer Code Functions
- 4 = Enable Disarming Of System Via User Codes and Auxiliary Code Operations
- 8 = Enable Access To Master Code Functions

0

Location 672 (Software Version 1.10 Only)

Page 165

Expansion Board Type

- 1 = Eight Zone Expansion Board
- 2 = Eight Channel Output Board
- 4 = Momentary Keyswitch Input
- 8 = Latching Keyswitch Input

0

Location 672 (New - Software Version 1.20 Onwards)

Page 166

Expansion Board Type

- | | |
|--------------------------------|----------------------------------|
| 1 = Eight Zone Expansion Board | 7 = Momentary Arm In STAY Mode 2 |
| 2 = Eight Channel Output Board | 8 = Momentary Disarm |
| 3 = Momentary Keyswitch Input | 9 = Momentary Arm Area 4 |
| 4 = Latching Keyswitch Input | 10 = Momentary Disarm Area 4 |
| 5 = Momentary Arm In AWAY Mode | 11 = Momentary Arm/Disarm Area 4 |
| 6 = Momentary Arm n STAY Mode | 12 = Latching Arm/Disarm Area 4 |

0

Location 673

Page 168

Telephone Line Fault Options

- 1 = Operate The FAULT Indicator When Telephone Line Fails
- 2 = Sound Speaker, Bell & Strobe When System Is Armed
- 4 = Sound Speaker, Bell & Strobe When System Is Disarmed
- Note: Options 2 and 4 Must Be Used In Conjunction With Option 1 (EG: Program a 1, 3 or 5)

0

Location 674 - 675

Page 178

Open/Close Code For Area 2

0 0

Location 676 - 677

Page 178

Open/Close Code For Area 3

0 0

Location 678 - 679

Page 178

Open/Close Code For Area 4

0 0

Location 680 - 683

Page 179

Subscriber ID Number For Area 2

0 0 0 0

Location 684 - 687

Page 179

Subscriber ID Number For Area 3

0 0 0 0

Location 688 - 691

Page 179

Subscriber ID Number For Area 4

0 0 0 0

Location 692 - 699

Zone Allocations For Area 1

Page 180

0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---

Location 700 - 707

Zone Allocations For Area 2

Page 180

0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---

Location 708 - 715

Zone Allocations For Area 3

Page 181

0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---

Location 715 - 723

Zone Allocations For Area 4

Page 181

0	0	0	0	0	0	0	0	0
---	---	---	---	---	---	---	---	---

Location 724 - 755

User Code Allocations

Page 182

Location 724
Areas For User #1

Location 725
Areas For User #2

Location 726
Areas For User #3

Location 727
Areas For User #4

Location 728
Areas For User #5

Location 729
Areas For User #6

Location 730
Areas For User #7

Location 731
Areas For User #8

Location 732
Areas For User #9

Location 733
Areas For User #10

Location 734
Areas For User #11

Location 735
Areas For User #12

Location 736
Areas For User #13

Location 737
Areas For User #14

Location 738
Areas For User #15

Location 739
Areas For User #16

Location 740
Areas For User #17

Location 741
Areas For User #18

Location 742
Areas For User #19

Location 743
Areas For User #20

Location 744
Areas For User #21

Location 745
Areas For User #22

Location 746
Areas For User #23

Location 747
Areas For User #24

Location 748
Areas For User #25

Location 749
Areas For User #26

Location 750
Areas For User #27

Location 751
Areas For User #28

Location 752
Areas For User #29

Location 753
Areas For User #30

Location 754
Areas For User #31

Location 755
Areas For User #32

Location 756

Page 93

Printer Output Baud Rate

- 1 = 300 Baud
- 2 = 600 Baud
- 4 = 1200 Baud
- 8 = 2400 Baud

2

Location 757 (New - Software Version 1.40)

Page 151

Swinger Shutdown Count For Dialler

0

Location 897 (New - Software Version 1.37 Onwards)

Page 169

System Options 5

- 1 = Enable - Send "Test" Report After Siren Reset
- 2 = Enable Control Panel To Power Up In Disarmed State
- 4 = Enable Internal Crystal To Keep Time (New - Software Version 1.40)
- 8 = Reserved

0

Location 898 (New - Software Version 1.33 Onwards)

Page 170

System Options 6

- 1 = Enable Busy Tone Detection For Domestic Dialling
- 2 = Enable "Kiss-Off" Detection For Domestic Dialling
- 4 = Extend Acknowledge Tone Detection From 30 - 60 Seconds
- 8 = If Battery Has Failed, Enable Dynamic Battery Test Only On Arming (New - Software Version 1.35 Onwards)

3

Location 899

Page 171

Carrier Sync Options

- | | |
|------------|------------------|
| 1 = 100 ms | 9 = 900 ms |
| 2 = 200 ms | 10 = 1 Second |
| 3 = 300 ms | 11 = 1.1 Seconds |
| 4 = 400 ms | 12 = 1.2 Seconds |
| 5 = 500 ms | 13 = 1.3 Seconds |
| 6 = 600 ms | 14 = 1.4 Seconds |
| 7 = 700 ms | 15 = 1.5 Seconds |
| 8 = 800 ms | |

9

Location 900

Page 31

Disable Factory Default

- 0 = Defaulting Enabled
- 15 = Defaulting Disabled

0

Location 901 - 904

Page 152

System Time

- | | |
|--------------|---------------------------------|
| Location 901 | Hour Of The Day (Tens Digit) |
| Location 902 | Hour Of The Day (Units Digit) |
| Location 903 | Minute Of The Day (Tens Digit) |
| Location 904 | Minute Of The Day (Units Digit) |

0 0 0 0

Index

2

2 Wire Smoke Detector Interface	191
24 Hour Fire Zone	110
24 Hour Zone	110

A

AC Fail	122
AC Fail In 1 Hour	158
AC Fail In 2 Minutes	158
AC Mains	45
Access Codes	102
Access Denied	122
Acknowledge Domestic Dialling	83
Acknowledge Synthesised Voice Dialling	85
Add A User Code	54
Alarm Link - Direct Connect	73
Alarm Link - Remote Connect	74
Alarm Link Software	73, 189
Alarm Memory Reset On Disarm	163
Allow Horn Speaker Beeps For Radio Remote Control Operation	156
Answering Machine Bypass	100
Answering Machine Bypass Only When Armed	155, 177
Appendices	205
Area Display Indicators	174
Areas On/Off Indicators	174
Arm In AWAY Mode	64
Arm In STAY Mode 1	64
Arm In STAY Mode 2	64
Arm/Disarm All Areas	53, 63
Arm/Disarm All Areas At Same Time	163
Armed In AWAY Mode	36
Armed In STAY Mode	36
Arming and Disarming All Areas At The Same Time	53, 63
Arming In AWAY Mode	37
Arming In STAY Mode 1	38
Arming In STAY Mode 2	40
ASCII Characters	91
Audible Indicators	35
Auto Arming	148
Auto Arming In AWAY Mode	159
Auto Arming In STAY Mode 1	159, 160
Auto Arming Pre-Alert Timer	148
Auto Operation Of The Timed Output	149
Auto Operation Pre-Alert Timer	149
AUX Indicator	175
AUX LED Display Telephone Line In Use	162
Auxiliary Code 1	105
Auxiliary Code 2	105
Auxiliary Codes	55, 105
AWAY Indicator	34
AWAY Mode	64

B

Base Station Information	96
Basic Pager Format Reporting	88
Battery Has Failed, Enable Dynamic Battery Test Only On Arming	170
Bell Test	65
Busy Tone Detection For Domestic Dialling	170
Bypass Codes For Zones 1-8	118
Bypass Codes For Zones 9-16	118

C

Carrier Sync Options	171
----------------------------	-----

Cellular Dialler (CD900)	190
Change A User Code	54
Changing and Deleting User Codes	54
Changing Domestic Phone Numbers	57
Chime Zone	110
Code Only To Isolate	161
Code Retries	105
Code To Isolate	43
Codepad Connections For Partitioning	184
Codepad Duress	120
Codepad Duress Alarm	42
Codepad Extinguish Mode	161, 162
Codepad Fire	121
Codepad Fire Alarm	42
Codepad Fire Alarm - Software Version 1.37 Onwards	42
Codepad ID and Beeper Tone Change	67
Codepad Lockout Time	146
Codepad Medical	121
Codepad Medical Alarm	42
Codepad Medical Alarm - Software Version 1.37	42
Codepad Panic	121
Codepad Panic Alarm	42
Codepad Panic Alarm - Software Version 1.10 - 1.36	42
Codepad Panic Alarm - Software Version 1.37 Onwards	42
Codepad Panic To Be Silent	157
Codepad Tamper To Be Silent	157
Command 958 - Enable/Disable Zone Status Mode	25
Command 959 - Test Programming Key	26
Command 960 - Exit Installer's Programming Mode	26
Command 961 - Reset Control Panel Back To Factory Default Settings	26
Command 962 - Copy Control Panel Memory To Programming Key	27
Command 963 - Copy From Programming Key To Control Panel	27
Command 964 - Erase Programming Key	28
Command 965 - Set Up Domestic Dialling Format	29
Command 966 - Enable/Disable Automatic Stepping Of Locations	30
Command 999 - Display Software Version Number	30
Communications Failure	45
Component Overlay	202
Connection For Momentary Or Latching Keyswitch	201
Connection Of The Voice Module	87
Connections For 25 Pin Logging Printer	201
Connections For 9 Pin Logging Printer	201
Connections Of Split EOL Resistors For 16 Zone Operation	200
Consumer Options 1	161, 162
Consumer Options 2	163
Contact ID Format	76
Converting ASCII Characters To Hexadecimal	92
Copy Panel Memory To Programming Key	27
Copy Programming Key To Control Panel	27
CP5 Area Addressable Codepad	190
CP5 Eight Zone Codepad	189
CP5 Master Partitioned Codepad	190
CP5 Sixteen Zone Codepad	190

D

Data Output To Display Data For Area 1	158
Date and Time	45
Day Alarm	65, 114
Day Alarm In Partitioning	115
Day Alarm Latching	114
Day Alarm Operation	115
Day Alarm Resetting	114

Index	223
Default Control Panel	26
Defaulting The Control Panel	31
Delay Siren Until Transmission Is Complete.....	159, 160
Delay-1 Zone.....	109
Delay-1 Zone + Isolate In STAY 1	109
Delay-2 Zone.....	109
Delay-2 Zone + Isolate In STAY 1	110
Delay-3 Zone.....	109
Delay-3 Zone + Isolate In STAY 1	110
Delay-4 Zone.....	109
Delay-4 Zone + Isolate In STAY 1	110
Deleting User Codes.....	55
Dialler Amplifier Lead	189
Dialler Channel.....	108
Dialler Options 1.....	154
Dialler Options 2.....	155, 177
Dialler Reporting Functions.....	154
Dialling Format.....	97
Direct Connect	73
Direct Link Cable.....	189
Disable Dialler Reporting Functions	154
Disable Domestic Dialling.....	82
Disable Domestic Dialling Using The Master Code	82
Disable Domestic Phone Numbers	57
Disable Factory Default	31
Disable Synthesised Voice Dialling	85
Disable Synthesised Voice Via Master Code.....	85
Disable Zone Status Mode.....	25
Disarming From AWAY Mode	37
Disarming The System From STAY Mode 1	39
Disarming The System From STAY Mode 2	41
Domestic Dialling Function	83
Domestic Dialling Setup.....	82
Domestic Reporting	82
DTMF Command Module.....	71, 189
DTMF Command Module Options.....	164
DTMF Module - Access Installer Code Functions	164
DTMF Module - Access Into Installer's Prog Mode	164
DTMF Module - Allow Arm/Disarm + Auxiliary Code Operations.....	164
DTMF Module - Allow Master Code Functions	164
E	
E2 Fault	45
EDM Smart Lockout.....	156
EDMSAT - Satellite Siren	188
EDMSTU - Securitel Interface.....	188
Eight Channel Output Board.....	165, 166, 189, 200
Eight Zone Expansion Board	165, 166
Eight Zone Expansion Board (CC883)	199
Eight Zone Expansion Board (CC885).....	199
Eight Zone Expansion Board 3K3 EOL.....	189
Eight Zone Expansion Board Variable EOL.....	189
Enable - Send "Test" Report After Siren Reset.....	169
Enable "Kiss-Off" Detection For Domestic Dialling	170
Enable "User Code + 0 + AWAY" Function To Arm/Disarm All Areas.....	163
Enable AC Fail In 1 Hour	158
Enable AC Fail In 2 Minutes	158
Enable Alarm Memory Reset On Disarm	163
Enable Answering Machine Bypass Only When Armed.....	155, 177
Enable Auto Arming In AWAY Mode.....	159
Enable Auto Arming In STAY Mode 1	159, 160
Enable AUX LED To Display Telephone Line In Use On Partitioned Codepad	162
Enable Busy Tone Detection For Domestic Dialling.....	170
Enable Codepad Extinguish Mode	161, 162
Enable Codepad Panic To Be Silent.....	157
Enable Codepad Tamper To Be Silent	157
Enable Control Panel To Power Up In Disarmed State	169
Enable Data Output To Display Data For Area 1.....	158
Enable Dialler Reporting Functions	154
Enable EDM Smart Lockout	156
Enable Entry Guard Delay In STAY Mode.....	161
Enable External Modem Module For Alarm Link.....	158
Enable First To Open, Last To Close Reporting When Partitioned.....	155, 177
Enable Forced Arming	156
Enable Handover Delay To Be Sequential.....	157
Enable Internal Crystal To Keep Time	169
Enable Monitoring Of Horn Speaker.....	156
Enable Night Arm Station.....	157
Enable Operation Of Sirens & Strobe In STAY Mode	161, 162
Enable Panel To Power Up In Disarmed State.....	169
Enable Radio Key/Keyswitch Interface	157
Enable Remote Arming Via The Telephone	154
Enable Resetting Of Sirens From All Areas	159, 160
Enable Single Button Arm In AWAY Mode, STAY Mode 1 & 2	163
Enable Single Button Disarm From STAY Mode 1 & 2	163
Enable STAY LED To Display Day Alarm ON/OFF Status.....	162
Enable Upload/Download Via Alarm Link Software	154
Enable Zone Pulse Count Handover.....	158
Enable Zone Status Mode	25
Enable/Disable Automatic Stepping Of Locations	30
Entry Guard Delay In STAY Mode	161
Entry Guard Timer For STAY Mode.....	145
Entry Time	144
Entry Timer 1	144
Entry Timer 2	144
Entry Timer 3	144
Entry Timer 4	144
EOL Resistor Value.....	116
Erase Programming Key	28
Event Code - Hundreds Digit	108
Event Code - Tens Digit	108
Event Code - Units Digit.....	108
Event Codes	77
Event Memory Recall Mode	50, 58
Exit Installer's Programming Mode	26
Exit Time	145
Exit Timer For AWAY Mode	145
Exit Timer For STAY Mode 1	145
Exit Timer For STAY Mode 2	145
Expansion Board Type.....	165, 166
Extend Acknowledge Tone Detection From 30 - 60 Seconds	170
External Modem Module For Alarm Link	158
F	
FAULT - AC Mains Failure.....	45
FAULT - Communications Failure.....	45
FAULT - Date and Time.....	45
FAULT - E2 Fault	45
FAULT - Horn Speaker	45
FAULT - Low Battery.....	45
FAULT - Sensor Watch	45
FAULT - Telephone Line Fault.....	45
FAULT - Zone 16 (Partitioned).....	45
Fault Analysis Mode.....	44, 66
Fault Descriptions	45
FAULT Indicator	35, 36, 175
First To Open, Last To Close Reporting When Partitioned.....	155, 177
Forced Arming.....	37, 38, 40, 156

G

General Reporting Formats.....	79
--------------------------------	----

H

Hand Held Dialler Tester	190
Hand Held Programmer	188
Handover Delay To Be Sequential	157
Handover Zone.....	109
Handover Zone + Isolate In STAY 1	109
Handshake Tone.....	98
Hold Down Function - Strobe Test.....	65
Hold Down Function - Arm In AWAY Mode	64
Hold Down Function - Arm In STAY Mode 1	64
Hold Down Function - Arm In STAY Mode 2	64
Hold Down Function - Bell Test	65
Hold Down Function - Codepad ID and Beeper Tone	67
Hold Down Function - Fault Analysis Mode	66
Hold Down Function - Horn Speaker Test.....	64
Hold Down Function - Initiate A Test Report.....	67
Hold Down Function - Initiate Modem Call	66
Hold Down Function - Reset Latching Outputs	66
Hold Down Function - Turn Day Alarm On/Off	65
Hold Down Functions.....	64
Horn Speaker	45
Horn Speaker Beeps	156
Horn Speaker Test.....	64
How To Acknowledge Synthesised Voice Dialling.....	85
How To Establish A Communication Link With The Control Panel.....	24
How To Program A Phone Number.....	96
How To Program Entry/Exit Timers.....	144

I

Ignore AC Mains Fail	160
Initiate A Modem Call	66
Initiate A Test Report	67
Installer Code	102
Installer Code Function - Event Memory Recall	50
Installer Code Function - Satellite Siren Service Mode	51
Installer Code Function - Set First Test Report	49
Installer Code Function - Telephone Monitor Mode	52
Installer Code Function - Walk Test Mode.....	51
Installer Code Functions	48
Installers Programming Commands.....	25
Instant Zone	109
Instant Zone + Isolate In STAY 1.....	109
Internal Crystal To Keep Time.....	169
Introduction.....	15
Isolating Zones	43

K

Kiss-Off Detection For Domestic Dialling	170
--	-----

L

Latching Arm/Disarm Area 4.....	167
Latching Input For Arm/Disarm.....	165, 167
LCD Codepad Indicators.....	36
Lockout Dialler	111
Lockout Siren	111
Logging System Events Via Serial Printer.....	93
Low Battery.....	45, 117, 123

M

MAINS Indicator	35, 36, 175
Master Code.....	103
Master Code Function - Arm/Disarm All Areas	53
Master Code Function - Changing and Deleting Codes.....	54

Master Code Function - Changing Domestic Phone Numbers	57
Master Code Function - Event Memory Recall	58
Master Code Function - Set STAY Mode 2 Zones.....	62
Master Code Function - Setting Date and Time.....	61
Master Code Function - Turn Day Alarm On/Off	61
Master Code Function - Turning Outputs On/Off	60
Master Code Function - Walk Test Mode.....	59
Master Code Functions	53
Master Partitioned Codepad Indicators.....	174
Modem Call	66
Modem Module	188
Momentary Arm Area 4.....	167
Momentary Arm In AWAY Mode.....	167
Momentary Arm In STAY 1.....	167
Momentary Arm In STAY 2.....	167
Momentary Arm/Disarm Area 4.....	167
Momentary Disarm.....	167
Momentary Disarm Area 4.....	167
Momentary Input For Arm/Disarm.....	165, 166
Momentary Or Latching Keyswitch.....	201
Monitoring Of Horn Speaker	156

N

Night Arm Station	190
-------------------------	-----

O

Off Indicator / Zone Sealed.....	36
On Indicator / Zone In Alarm	36
One Shot Polarities.....	141
Open/Close Codes	124
Open/Close Codes - Area 1.....	178
Open/Close Codes - Area 2.....	178
Open/Close Codes - Area 3.....	178
Open/Close Codes - Area 4.....	178
Open/Close Reports In STAY Mode 1 & STAY Mode 2155, 177	177
Operate FAULT Indicator If Telephone Line Fails	168
Operating Codepads In Partitioning	175
Operating DTMF Command Module	71
Operating From A "CP5 Master Partitioned (CP500P)" Codepad	175
Operating From An "CP5 Area Addressable (CP500A)" Codepad	175
Operation Of Sirens & Strobe In STAY Mode	161, 162
Operation Of The Voice Module.....	86
Option Bits.....	154
Optional Equipment	188
Output 1	129
Output 10	129
Output 11	129
Output 12	129
Output 13	129
Output 14	129
Output 2	129
Output 3	129
Output 4	129
Output 5	129
Output 6	129
Output 7	129
Output 8	129
Output 9	129
Output Configurations	129
Output Event Type - AC Fail	132
Output Event Type - AC Mains 60 Hz/50Hz	136
Output Event Type - Alarm In AWAY Mode	134
Output Event Type - Alarm In STAY Mode	134
Output Event Type - Any Areas Armed.....	137

Output Event Type - Any Areas Disarmed	137
Output Event Type - Area 1 Codepad Data	137
Output Event Type - Area 1 Has Zone Unsealed	136
Output Event Type - Area 1 In Alarm	136
Output Event Type - Area 1 Is Armed	137
Output Event Type - Area 1 Is Disarmed.....	137
Output Event Type - Area 2 Codepad Data	137
Output Event Type - Area 2 In Alarm	136
Output Event Type - Area 2 Is Armed.....	137
Output Event Type - Area 2 Is Disarmed.....	137
Output Event Type - Area 3 Codepad Data	137
Output Event Type - Area 3 Has Zone Unsealed	136
Output Event Type - Area 3 In Alarm	136
Output Event Type - Area 3 Is Armed	137
Output Event Type - Area 3 Is Disarmed.....	137
Output Event Type - Area 4 Codepad Data	137
Output Event Type - Area 4 Has Zone Unsealed	136
Output Event Type - Area 4 In Alarm	136
Output Event Type - Area 4 Is Armed	137
Output Event Type - Area 4 Is Disarmed.....	137
Output Event Type - Armed In AWAY Mode.....	131
Output Event Type - Auxiliary Code 1	135
Output Event Type - Auxiliary Code 2	135
Output Event Type - Codepad Duress Alarm.....	133
Output Event Type - Codepad Fire Alarm	133
Output Event Type - Codepad Medical Alarm.....	133
Output Event Type - Codepad Panic Alarm.....	133
Output Event Type - Codepad Tamper	133
Output Event Type - Comms Fail After 3 Calls.....	135
Output Event Type - Comms Failure.....	135
Output Event Type - Day Alarm Enabled	132
Output Event Type - Day Alarm Latching	132
Output Event Type - Day Alarm Resetting	132
Output Event Type - Dialler Active.....	135
Output Event Type - Dialler Disabled	135
Output Event Type - EDMSAT	131
Output Event Type - EDMSTU	131
Output Event Type - Entry Warning.....	132
Output Event Type - Entry Warning + Day Alarm Reset	132
Output Event Type - Exit Warning.....	131
Output Event Type - Exit Warning Finished	132
Output Event Type - Exit Warning With Zones Sealed + Entry Warning	131
Output Event Type - Fire Alarm Latching	134
Output Event Type - Fire Alarm Resetting	134
Output Event Type - Fire Alarm Verification	134
Output Event Type - Global Chime.....	136
Output Event Type - Horn Speaker Monitor Fail.....	133
Output Event Type - Kiss-Off After Exit Time.....	132
Output Event Type - Low Battery	133
Output Event Type - Mimic Zone 1.....	136
Output Event Type - Mimic Zone 10.....	136
Output Event Type - Mimic Zone 11.....	136
Output Event Type - Mimic Zone 12.....	136
Output Event Type - Mimic Zone 13.....	136
Output Event Type - Mimic Zone 14.....	136
Output Event Type - Mimic Zone 15.....	136
Output Event Type - Mimic Zone 16.....	136
Output Event Type - Mimic Zone 2.....	136
Output Event Type - Mimic Zone 3.....	136
Output Event Type - Mimic Zone 4.....	136
Output Event Type - Mimic Zone 5.....	136
Output Event Type - Mimic Zone 6.....	136
Output Event Type - Mimic Zone 7.....	136
Output Event Type - Mimic Zone 8.....	136
Output Event Type - Mimic Zone 9.....	136
Output Event Type - Pre-Alert For Timed Output	132
Output Event Type - Pre-Arm Alert Time	131

Output Event Type - Printer.....	131
Output Event Type - Remote Control 1	135
Output Event Type - Remote Control 2	135
Output Event Type - Remote Control 3	135
Output Event Type - Remote Control 4	135
Output Event Type - Ring Detect	135
Output Event Type - Sensor Watch Alarm.....	133
Output Event Type - Silent Alarm.....	134
Output Event Type - Sirens Running.....	134
Output Event Type - Speaker Beeps.....	133
Output Event Type - Strobe Operating	134
Output Event Type - System Armed.....	131
Output Event Type - System Disarmed.....	131
Output Event Type - Telephone Line Fault.....	135
Output Event Type - Timed Output.....	132
Output Event Type - Zone Not Sealed.....	136
Output Event Type - Zone Not Sealed After Exit Time.....	136
Output Event Types.....	131
Output Polarity	138, 139
Output Timing.....	140
Outputs - Redirect To Codepad.....	130

P

Panel To Power Up In Disarmed State	169
PARTIAL Indicator.....	175
Partitioning.....	174
Partitioning - Setting Up & Programming Codepads.....	183
Patrolman Code	103
PET Alpha Pager ID Number.....	92
PET Alpha Pager Messages	90
PET Alpha Pager Password.....	91
PET Alpha Pager Reporting	89
Phone Controller.....	190
Phone Number Programming	96
Point ID Codes	78
Prevent Manual Defaulting Of The Control Panel	31
Primary Telephone Number	96
Printer Output Baud Rate	93
Program Altered Code	123
Program and Setup Securitel	81
Programmable Outputs	128
Programming	20
Programming A Four Second Pause In Phone Number.....	96
Programming Domestic Reporting	82
Programming End Of A Phone Number.....	96
Programming Key.....	188
Programming Mode	36
Programming Option Bits	24
Programming Sheets.....	211
Programming The Control Panel Once A Communication Link Has Been Established.....	24
Programming Using The Programming Key	23
Programming Via The DTMF Command Module.....	24
Programming With The Hand Held Programmer	22
Programming With The Remote Codepad	21
PS100 Power Supply Module.....	190
Pulsing Polarities.....	140

Q

Quick Start	17
-------------------	----

R

Radio Key/Keyswitch Interface.....	191
Receivers and Their Formats	99
Recording The Voice Message.....	86
Remote Arming Via The Telephone.....	70, 154
Remote Connect	74
Remote Connect With Callback Verification.....	74

Remote Connect With Customer Control	74
Remote Connect Without Callback Verification	74
Remote Operations	70
Replay The Voice Message	86
Reporting Format - Basic Pager	88
Reporting Format - Contact ID Format	76
Reporting Format - Domestic Reporting	82
Reporting Format - PET Alpha Pager	89
Reporting Format - Securitel	81
Reporting Format - Synthesised Voice	84
Reporting Formats	76
Reset Latching Outputs	66
Resetting Of Sirens From All Areas	159, 160
Resistor Value	116
Ring Count	100

S

Satellite Siren Service Mode	51
Secondary Telephone Number	97
Securitel	81
Securitel and Partitioning	81, 175
Send "Test" Report After Siren Reset	169
Send Open/Close Report Only If Previous Alarm Has Occurred	155, 177
Send Open/Close Reports In STAY Mode 1 & STAY Mode 2	155, 177
Sensor Watch	45, 112, 117, 124
Sensor Watch Time	146
Set The Number Of Days Until The First Test Report	49
Set Up Domestic Dialling	29
Set Up Synthesised Voice	84
Setting STAY Mode 2 Zones	62
Setting The Date and Time	61
Setting Up & Programming Codepads For Partitioning	183
Setting Up Area 1 Codepad	183
Setting Up Area 2 Codepad	183
Setting Up Area 3 Codepad	183
Setting Up Area 4 Codepad	183
Setting Up Master Partitioned Codepad	183
Silent Alarm	111
Single Button Arm In AWAY Mode, STAY Mode 1 & 2	163
Single Button Disarm From STAY Mode 1 & 2	163
Siren Run Time	149
Siren Sound Rate	149
Software Version Number	30, 210
Solution Codepad Mimic Board	191
Solution Relay Output Interface	191
Solution-16 Component Overlay	202
Solution-16 Wiring Diagram	198
Specifications	209, 210
Split EOL Resistors For 16 Zone Operation	200
Standard Isolating	43
Status Indicators	174
STAY Indicator	34
STAY LED Display Day Alarm ON/OFF Status	162
STAY Mode 1	64
STAY Mode 2	64
Strobe Test	65
Subscriber ID Number	100
Subscriber ID Number - Area 1	179
Subscriber ID Number - Area 2	179
Subscriber ID Number - Area 3	179
Subscriber ID Number - Area 4	179
Swinger Shutdown Count	150
Swinger Shutdown Count For Dialler	151
Swinger Shutdown Count For Siren	151
Synthesised Voice	84
Synthesised Voice Dialling Function	85

Synthesised Voice Reporting	84
System Date	147
System Disarmed	36
System Event Timers	144
System Functions	48
System Indicators and Operations	34
System Operations	37
System Options 1	156
System Options 2	157
System Options 3	158
System Options 4	159, 160
System Options 5	169
System Options 6	170
System Status Information	118
System Time	152

T

Telecom Access Telephone Numbers	89
Telecom Connection Diagrams	203
Telepermit Note	18
Telephone Anti-Jamming	206
Telephone Line Fault	45
Telephone Line Fault Module	189
Telephone Line Fault Monitor	190
Telephone Line Fault Options	168
Telephone Monitor Mode On/Off	52
Terminal Definitions and Descriptions	196
Terminate Alarm Link Session On Alarm	154
Termination Block For JP5 Pins (CC882)	189
Test Programming Key	26
Test Report	67
Test Reports	125
Test Reports On All Active Diallers	125
Test Reports Only When Armed	125, 207
TF008 Plug Pack	190
The Codepad	34
Timing Of Outputs	140
Transmission Format	98
Transmission Speed	99
Trouble Codes For Zones 1-8	119
Trouble Codes For Zones 9-16	119
Turn Day Alarm On/Off	65
Turning Day Alarm On and Off	61
Turning Outputs On/Off	60

U

Upload/Download Via Alarm Link Software	73, 154
User Code Allocations	182
User Code Function - Arm/Disarm All Areas	63
User Code Functions	63
User Code Priority	103
User Codes	102

V

Voice Message	86
Voice Message Replay	86
Voice Module	188
Voice Module Connection	87

W

Walk Test Mode	51, 59
Warranty Statement	210
Wiring Diagram	198

Z

Zone 16 (Partitioned Systems)	45
Zone Allocations	180

Zone Allocations - Area 1	180	Zone Reporting Information - Dialler Channel	108
Zone Allocations - Area 2	180	Zone Type	108
Zone Allocations - Area 3	181	Zone Type - 24 Hour	110
Zone Allocations - Area 4	181	Zone Type - 24 Hour Fire	110
Zone Defaults	108	Zone Type - Chime	110
Zone Indicators	34, 36, 174	Zone Type - Delay-1	109
Zone Isolating Mode	36	Zone Type - Delay-1 + Isolate In STAY 1	109
Zone Not Used	110	Zone Type - Delay-2	109
Zone Operating Information	108	Zone Type - Delay-2 + Isolate In STAY 1	110
Zone Option	108	Zone Type - Delay-3	109
Zone Option - Lockout Dialler	111	Zone Type - Delay-3 + Isolate In STAY 1	110
Zone Option - Lockout Siren	111	Zone Type - Delay-4	109
Zone Option - Sensor Watch	112	Zone Type - Delay-4 + Isolate In STAY 1	110
Zone Option - Silent Alarm	111	Zone Type - Handover	109
Zone Options	111	Zone Type - Handover + Isolate In STAY 1	109
Zone Programming	108	Zone Type - Instant	109
Zone Pulse Count	108, 112	Zone Type - Instant + Isolate In STAY 1	109
Zone Pulse Count Handover	113, 158	Zone Type - Not Used	110
Zone Pulse Count Time	108, 113	Zone Types	109
Zone Reporting Information	108		



Electronics Design & Manufacturing Pty Limited

25 Huntingwood Drive
Huntingwood NSW 2148
Australia

A.C.N. 002 907 271

Phone: +612 9672 1777
Facsimile: +612 9672 1717
email: edm@edm.com.au
