CONTROLPLEX 1 O O

User's Manual The Silent Watchman Controlplex provides monitoring of alarms, trouble conditions and personnel access control. A microprocessor-based system, it provides significant programming capability and user flexibility. An audit feature is provided by the hard copy printer.

This abbreviated operator's manual provides basic information for system operation and operator use. More


detailed information on system use and detailed operating data is provided in the expanded guide.

To perform a specific function, take steps specified under the Action Column. The display will appear as indicated under the Display Column.

INTRODUCTION

TABLE OF CONTENTS

I.	System Features Display-Keyboard-Special Function Keys	Pag 3
	Passcodes	8
II.	SYSTEM OPERATION	
	Night Mode (system arming)	4
	Day Mode (system disarming)	4
	Acknowledging an Alarm	
	Zones-Day Access/Clearing Zones/ Clearing All Day Access Zones	5
	Zone Out (disable/clearing disabled zone)	
	Help	
	Maintenance Mode	
	Setting User ID Codes	
	Setting Date and Time	8
	Reviewing Activity Log	9
	Changing Printer Paper	e Expanded Manual

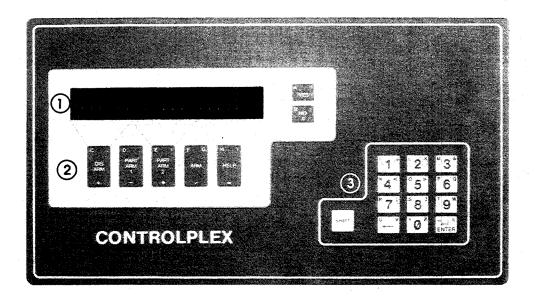

① Display ② Special Function Keys ③ Keypad

CONTROLPLEX 100

NIGHT MODE (SYSTEM ARMING)

ACTION

- 1. Enter Access Code
- 2. Enter Arm

Exit building through proper exit door before delay expires. **Note:** Sonalert will be sounding during delay period.

DISPLAY

Enter Code * * * * * *
Night Mode

DAY MODE (SYSTEM DISARMING)

Enter building through proper entry door, proceed directly to keypad.

Note: Sonalert will be sounding during delay period.

- 1. Enter Access Code
- 2. Enter Disarm

Enter Code * * * * * *
DayMode—Date/Time

ACKNOWLEDGING AN ALARM

- 1. Enter Access Code followed by O
- 2. Press Yes

Note: It may be necessary to press Yes Key several times before Finished appears.

Alarm Message? Finished

ACTION

1. Enter Access Code followed by No

- 1. Press Part Arm 2
- 2. Enter First Zone to be Day Accessed-followed by Enter
- 3. Enter Last Zone to be Day Accessed-followed by Enter
- 4. Press Yes

TO CLEAR ZONES PREVIOUSLY DAY ACCESSED:

- 1. Press Help
- 2. Enter First Zone you Wish to Clear Followed by Enter
- 3. Enter Last Zone you Wish to Clear Followed by Enter
- 4. Press Yes

TO CLEAR ALL DAY ACCESS ZONES:

- 1. Press Help
- 2. Enter Number 1-Followed by Enter
- 3. Enter Number 99 Followed by Enter
- 4. Press Yes

TO EXIT FROM *MEMORY, INHIBIT, CLEAR* MENU:

- 1. Press No
- 2. Press Yes

DISPLAY

Memory-Inhibit-Clear

Inhibit From 1 Inhibit To # 1 Inhibits Quit?

Memory-Inhibit-Clear

Clear From 1 Clear To # Inhibits Quit?

Memory-Inhibit-Clear

Clear From 1 Clear To Quit?

Memory-Inhibit-Clear
Quit?

Day Access— Zones

Day Access

CLEARING

ZONE OUT,	Action	DISPLAY
DISABLING A ZONE	DISABLING AND CLEARING DISABLED ZONES:	
	 Enter Access Code Followed by Shift No Enter First Zone to be Disabled-Followed by Enter Enter Last Zone to be Disabled-Followed by Enter 	Disable From 1 Disable To # 1 Disables
	CLEARING DISABLED ZONES:	
	 Enter Access Code Followed by-Shift No Press Yes Press No 	Clear Disables? Disable From 1 0 Disables
Heb	Shows Options One at a Time	
	Enter Access Code Followed by Help if You Wish to Select Shown Option Press Yes	First Option?
Maintenance	3. If You Do Not Wish to Select Option Press No— Repeat Steps 2–3	Option?
Mode		
FROM DAY MODE	1. Enter Access Code Followed by Part Arm 2	Maintenance Mode
5	Exit building through proper exit door before delay expires. Note: Sonalert will be sounding during delay period.	

ACTION

DISPLAY

Enter building through the proper entry door, proceed directly to keyboard. **Note:** Sonalert will be sounding as a reminder to disarm panel.

1. Enter Access Code Followed by Part Arm 2

Maintenance Mode

1. Enter Access Code Followed by Shift Disarm

ID's-Options-Names

- 1. Press Dis-Arm
- 2. Enter User Number 1-16, 18-Followed by Enter
- 3. Enter New Access Code Followed by Enter:

*If additional numbers are to be changed, repeat steps 2-3

- 1. Press Part Arm 2
- 2. Enter User Number 1-16, 18-Followed by Enter
- 3. Press Yes or No

Note: Repeat Step 3 for All Options

*If Additional Numbers are to be Changed, Repeat Steps 2-3

Enter User No. 1 Enter Code 0 Enter User No. #

ID's-Options-Names

Enter User No. 1 First Option Yes or No Next Option Yes or No Enter User No. #

Maintenance Mode

FROM NIGHT MODE

SETTING USER ID
CODES

SETTING ID's

SETTING OPTIONS

SETTING NAMES

To Exit Main MENU

SETTING DATE AND TIME

ACTION

- 1. Press Help
- 2. Enter User Number You Want to Name 3. Enter Name of User Followed by Enter
- 4. Press No
- 5. Yes

ID'S, OPTIONS, NAMES

- 1. Press No.
- 2. Press Yes
- 1. Enter Access Code Followed by 7
- 2. Position Cursor to Digit to be Changed Use Yes Key to Move Right Use Backspace Key to Move Left
- 3. Enter Current Number-Repeat as Necessary
- 4. Press Enter When all Corrections Are Made
- 5. Enter Current Day Number Followed by Enter Sun.=1 through Sat.=7

DISPLAY

ID's-Options-Names Enter User No. 1 Flashing Cursor Enter User No. #

Quit?

ID's-Options-Names

Quit?

Current Date & Time

Enter Day No. #

REVIEWING ACTIVITY LOG

ACTION

DISPLAY

1. Enter Access Code Followed by Yes

Print Log?

TO REVIEW ONLY

2. Press No

Log will Scroll-300 Events

To PRINT LOG:

3. Press Yes

IF YOU DO NOT WISH TO PRINT OR VIEW THE WHOLE LOG

4. Press No

IF YOU WISH TO FAST FORWARD THE LOG:

5. Press Dis-Arm

Notes



10

