

ESPRIT 747

PROGRAMMING REFERENCE




SOFTWARE VERSION **1.3** **IMPORTANT** See last page for changes from VERSION 1.2


To enter programming, press [ENTER] + installer code

(Installer default code **747474**)

ADDRESSES: addresses "000" to "255" (key [10] = 0)

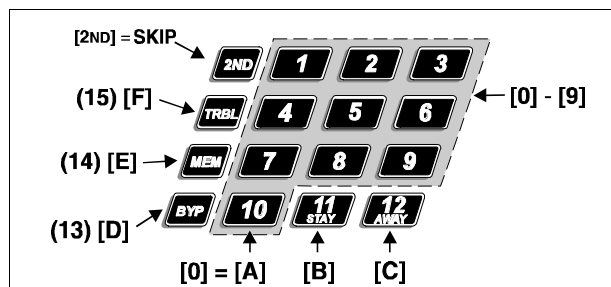

HEXA VALUE DISPLAY

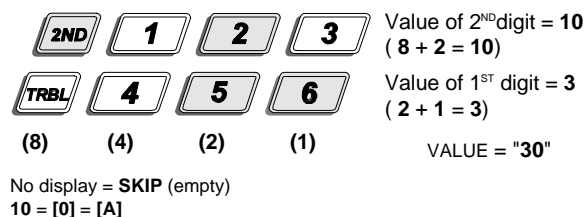

INSTALLER CODE LOCK ([2ND][2ND] = Installer code locked, [1][1] - [F][F] = Installer code unlocked)

(default code **[F][F]**)

000: __/__/__

PANEL IDENTIFIER FOR UPLOAD/DOWNLOAD 00 - [F][F] ([10] = 0)

(default code (empty) - "SKIP")

001: __/__/__ 002: __/__/__

PC UPLOAD/DOWNLOAD PASSWORD 00 - [F][F] ([10] = 0)

(default code (empty) - "SKIP")

003: __/__/__ 004: __/__/__

ACCESS CODES:

INSTALLER'S CODE: Full access to programming, (all addresses except 008-070).

(default / reset code **747474**)

No access to arming/disarming and access code programming (can be used to modify installer code)

005: __/__/__ 006: __/__/__ 007: __/__/__

PROGRAMMING MASTER AND USER CODES:

[ENTER] + master code + code number (2 digit) + new code (4 or 6 digit) + [ENTER]

MASTER CODE = 00 ([10][10])

(default / reset code **474747**)

USER CODES 01-06 = Bypass, Away, Stay, Arm, Disarm

USER CODES 07-19 = Arm, Disarm

USER CODES 20 = Arm ONLY

REPORTING CODE: (all digits from [1]-[F] are valid / [2ND] = SKIP = code is not reported)

(default code "SKIP, SKIP" [2ND][2ND])

If a condition should not be reported, enter [2ND][2ND] after the required address.

"TROUBLE REPORT" CODES:

071: __/__/__ No AC

072: __/__/__ Battery disconnected/low voltage

073: __/__/__ Maximum auxiliary current

074: __/__/__ Bell disconnect/max. bell current

075: __/__/__ Tamper / wiring

076: __/__/__ Timer loss

"RESTORATION" CODES:

077: __/__/__ No AC

078: __/__/__ Battery disconnect/low voltage

079: __/__/__ Maximum auxiliary current

080: __/__/__ Bell disconnect/max. bell current

081: __/__/__ Tamper / wiring

082: __/__/__ Timer loss

180: __/__/__ Telephone line

"SPECIAL REPORT" CODES:

083: __/__/__ Disarm after alarm

084: __/__/__ Panic 1

085: __/__/__ Panic 2

086: __/__/__ Fire Panic

087: __/__/__ Partial arming

088: __/__/__ Test report

SYSTEM "A" (ZONES 1-12) (default code "SKIP, SKIP" [2ND][2ND])**ALARM REPORT CODES: ZONE RESTORATION CODES:**

| | |
|---|---|
| 089: <input type="checkbox"/> <input type="checkbox"/> Zone 1A | 101: <input type="checkbox"/> <input type="checkbox"/> Zone 1A |
| 090: <input type="checkbox"/> <input type="checkbox"/> Zone 2A | 102: <input type="checkbox"/> <input type="checkbox"/> Zone 2A |
| 091: <input type="checkbox"/> <input type="checkbox"/> Zone 3A | 103: <input type="checkbox"/> <input type="checkbox"/> Zone 3A |
| 092: <input type="checkbox"/> <input type="checkbox"/> Zone 4A | 104: <input type="checkbox"/> <input type="checkbox"/> Zone 4A |
| 093: <input type="checkbox"/> <input type="checkbox"/> Zone 5A | 105: <input type="checkbox"/> <input type="checkbox"/> Zone 5A |
| 094: <input type="checkbox"/> <input type="checkbox"/> Zone 6A | 106: <input type="checkbox"/> <input type="checkbox"/> Zone 6A |
| 095: <input type="checkbox"/> <input type="checkbox"/> Zone 7A | 107: <input type="checkbox"/> <input type="checkbox"/> Zone 7A |
| 096: <input type="checkbox"/> <input type="checkbox"/> Zone 8A | 108: <input type="checkbox"/> <input type="checkbox"/> Zone 8A |
| 097: <input type="checkbox"/> <input type="checkbox"/> Zone 9A | 109: <input type="checkbox"/> <input type="checkbox"/> Zone 9A |
| 098: <input type="checkbox"/> <input type="checkbox"/> Zone 10A | 110: <input type="checkbox"/> <input type="checkbox"/> Zone 10A |
| 099: <input type="checkbox"/> <input type="checkbox"/> Zone 11A | 111: <input type="checkbox"/> <input type="checkbox"/> Zone 11A |
| 100: <input type="checkbox"/> <input type="checkbox"/> Zone 12A | 112: <input type="checkbox"/> <input type="checkbox"/> Zone 12A |

ARMING REPORT CODES: DISARMING REPORT CODES:

| | |
|---|---|
| 113: <input type="checkbox"/> <input type="checkbox"/> Espload | 125: <input type="checkbox"/> <input type="checkbox"/> Espload |
| 114: <input type="checkbox"/> <input type="checkbox"/> Master code | 126: <input type="checkbox"/> <input type="checkbox"/> Master code |
| 115: <input type="checkbox"/> <input type="checkbox"/> User code 1 | 127: <input type="checkbox"/> <input type="checkbox"/> User code 1 |
| 116: <input type="checkbox"/> <input type="checkbox"/> User code 2 | 128: <input type="checkbox"/> <input type="checkbox"/> User code 2 |
| 117: <input type="checkbox"/> <input type="checkbox"/> User code 3 | 129: <input type="checkbox"/> <input type="checkbox"/> User code 3 |
| 118: <input type="checkbox"/> <input type="checkbox"/> User code 4 | 130: <input type="checkbox"/> <input type="checkbox"/> User code 4 |
| 119: <input type="checkbox"/> <input type="checkbox"/> User code 5 | 131: <input type="checkbox"/> <input type="checkbox"/> User code 5 |
| 120: <input type="checkbox"/> <input type="checkbox"/> User code 6 | 132: <input type="checkbox"/> <input type="checkbox"/> User code 6 |
| 121: <input type="checkbox"/> <input type="checkbox"/> User code 7 | 133: <input type="checkbox"/> <input type="checkbox"/> User code 7 |
| 122: <input type="checkbox"/> <input type="checkbox"/> User code 8 | 134: <input type="checkbox"/> <input type="checkbox"/> User code 8 |
| 123: <input type="checkbox"/> <input type="checkbox"/> User code 9 | 135: <input type="checkbox"/> <input type="checkbox"/> User code 9 |
| 124: <input type="checkbox"/> <input type="checkbox"/> User code 10 | 136: <input type="checkbox"/> <input type="checkbox"/> User code 10 |

Enter [2ND][2ND] if no report code is required.

SYSTEM "B" (EXTENSION 1-12) (default code "SKIP, SKIP" [2ND][2ND])**ALARM REPORT CODES: ZONE RESTORATION CODES:**

| | |
|---|---|
| 137: <input type="checkbox"/> <input type="checkbox"/> Zone 1B | 149: <input type="checkbox"/> <input type="checkbox"/> Zone 1B |
| 138: <input type="checkbox"/> <input type="checkbox"/> Zone 2B | 150: <input type="checkbox"/> <input type="checkbox"/> Zone 2B |
| 139: <input type="checkbox"/> <input type="checkbox"/> Zone 3B | 151: <input type="checkbox"/> <input type="checkbox"/> Zone 3B |
| 140: <input type="checkbox"/> <input type="checkbox"/> Zone 4B | 152: <input type="checkbox"/> <input type="checkbox"/> Zone 4B |
| 141: <input type="checkbox"/> <input type="checkbox"/> Zone 5B | 153: <input type="checkbox"/> <input type="checkbox"/> Zone 5B |
| 142: <input type="checkbox"/> <input type="checkbox"/> Zone 6B | 154: <input type="checkbox"/> <input type="checkbox"/> Zone 6B |
| 143: <input type="checkbox"/> <input type="checkbox"/> Zone 7B | 155: <input type="checkbox"/> <input type="checkbox"/> Zone 7B |
| 144: <input type="checkbox"/> <input type="checkbox"/> Zone 8B | 156: <input type="checkbox"/> <input type="checkbox"/> Zone 8B |
| 145: <input type="checkbox"/> <input type="checkbox"/> Zone 9B | 157: <input type="checkbox"/> <input type="checkbox"/> Zone 9B |
| 146: <input type="checkbox"/> <input type="checkbox"/> Zone 10B | 158: <input type="checkbox"/> <input type="checkbox"/> Zone 10B |
| 147: <input type="checkbox"/> <input type="checkbox"/> Zone 11B | 159: <input type="checkbox"/> <input type="checkbox"/> Zone 11B |
| 148: <input type="checkbox"/> <input type="checkbox"/> Zone 12B | 160: <input type="checkbox"/> <input type="checkbox"/> Zone 12B |

ARMING REPORT CODES: DISARMING REPORT CODES:

| | |
|---|---|
| 161: <input type="checkbox"/> <input type="checkbox"/> User code 11 | 171: <input type="checkbox"/> <input type="checkbox"/> User code 11 |
| 162: <input type="checkbox"/> <input type="checkbox"/> User code 12 | 172: <input type="checkbox"/> <input type="checkbox"/> User code 12 |
| 163: <input type="checkbox"/> <input type="checkbox"/> User code 13 | 173: <input type="checkbox"/> <input type="checkbox"/> User code 13 |
| 164: <input type="checkbox"/> <input type="checkbox"/> User code 14 | 174: <input type="checkbox"/> <input type="checkbox"/> User code 14 |
| 165: <input type="checkbox"/> <input type="checkbox"/> User code 15 | 175: <input type="checkbox"/> <input type="checkbox"/> User code 15 |
| 166: <input type="checkbox"/> <input type="checkbox"/> User code 16 | 176: <input type="checkbox"/> <input type="checkbox"/> User code 16 |
| 167: <input type="checkbox"/> <input type="checkbox"/> User code 17 | 177: <input type="checkbox"/> <input type="checkbox"/> User code 17 |
| 168: <input type="checkbox"/> <input type="checkbox"/> User code 18 | 178: <input type="checkbox"/> <input type="checkbox"/> User code 18 |
| 169: <input type="checkbox"/> <input type="checkbox"/> User code 19 | 179: <input type="checkbox"/> <input type="checkbox"/> User code 19 |
| 170: <input type="checkbox"/> <input type="checkbox"/> User code 20 | |

ACCOUNT NUMBERS:[ENTER] + Installer code + [9] + 8 digit of the two system account numbers + [ENTER] / / / / / / / **A / B**OR **SYSTEM "A" ACCOUNT NUMBER:**205: ☐ ☐ 206: ☐ ☐**SYSTEM "B" ACCOUNT NUMBER:**207: ☐ ☐ 208: ☐ ☐

(valid digits are [1]-[F] / [2ND] = SKIP) (default code [2ND][2ND][2ND][2ND]) If only one account number is required, the same code should be entered for both System A and System B.

PROGRAMMABLE OUTPUT 1:**PROGRAMMABLE OUTPUT 2:**210: ☐ ☐ 212: ☐ ☐ 211: ☐ ☐ 213: ☐ ☐**TELEPHONE NUMBER PROGRAMMING:**

(default = [2ND][2ND])

If only one central station phone number is available, the same telephone number should be programmed for telephone number 1 and 2.

PC DOWNLOAD TELEPHONE NUMBER:

[ENTER] + Installer code + [3] + up to first 8 digits (including last digit "end of number" [TRBL]) + [ENTER], for the next 8 digits same but enter [4] instead of [3].

OR

181: ☐ ☐ 182: ☐ ☐ 183: ☐ ☐ 184: ☐ ☐ 185: ☐ ☐ 186: ☐ ☐ 187: ☐ ☐ 188: ☐ ☐**CENTRAL STATION TELEPHONE NUMBER 1:**


[ENTER] + Installer code + [5] + up to first 8 digits (including last digit "end of number" [TRBL]) + [ENTER], for the next 8 digits same but enter [6] instead of [5].

OR

189: ☐ ☐ 190: ☐ ☐ 191: ☐ ☐ 192: ☐ ☐ 193: ☐ ☐ 194: ☐ ☐ 195: ☐ ☐ 196: ☐ ☐**CENTRAL STATION TELEPHONE NUMBER 2:**

[ENTER] + Installer code + [7] + up to first 8 digits (including last digit "end of number" [TRBL]) + [ENTER], for the next 8 digits same but enter [8] instead of [7].

OR

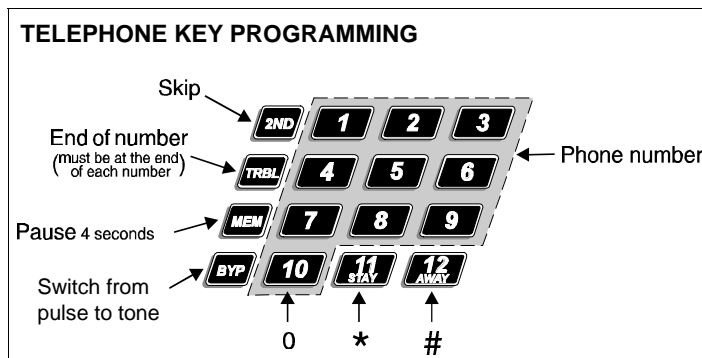197: ☐ ☐ 198: ☐ ☐ 199: ☐ ☐ 200: ☐ ☐ 201: ☐ ☐ 202: ☐ ☐ 203: ☐ ☐ 204: ☐ ☐

AUTO REPORTING TIME: (create test report code at address 088). To reset real time clock, press **[ENTER]** + Master or Installer code + **[MEM]**

209: __/__/__

| ADDRESS 209: 1 ST DIGIT PROGRAMMING | | |
|--|---|---------------|
| Numbers of days between reports | If difference between current time and desired reporting time | |
| | LESS THAN 12H | MORE THAN 12H |
| 1 | [2] | [9] |
| 2 | [3] | [10] |
| 3 | [4] | [11] |
| 4 | [5] | [12] |
| 5 | [6] | [BYP] |
| 6 | [7] | [MEM] |
| 7 | | [TRBL] |
| 8 | | |

To disable auto reporting, enter "FF" ([TRBL][TRBL])

| ADDRESS 209: 2 ND DIGIT PROGRAMMING | |
|--|-----------------------|
| If difference in hours between current time and desired reporting time | 2 ND digit |
| 1 or 13 | [1] |
| 2 or 14 | [2] |
| 3 or 15 | [3] |
| 4 or 16 | [4] |
| 5 or 17 | [5] |
| 6 or 18 | [6] |
| 7 or 19 | [7] |
| 8 or 20 | [8] |
| 9 or 21 | [9] |
| 10 or 22 | [10] |
| 11 or 23 | [11] |
| 12 or 24 | [12] |

PANEL OPTIONS: (default = "OFF")

214:

| | | KEY | OFF / ON | |
|-------------------------------------|------------------------------|---------|--------------------------|-----------------------------|
| Telephone line monitor disabled | <input type="checkbox"/> | 1 | <input type="checkbox"/> | enabled |
| TLM trouble only | <input type="checkbox"/> | 2 | <input type="checkbox"/> | TLM trouble activates alarm |
| Auto zone shut down disabled | <input type="checkbox"/> | 3 | <input type="checkbox"/> | enabled |
| Call back disabled | <input type="checkbox"/> | 4 | <input type="checkbox"/> | enabled |
| Reporting disabled | <input type="checkbox"/> | 5 | <input type="checkbox"/> | enabled |
| PS1/Key switch disabled | <input type="checkbox"/> | 6 | <input type="checkbox"/> | enabled |
| Pulse dialing | <input type="checkbox"/> | 7 | <input type="checkbox"/> | Tone dialing (DTMF) |
| (handshake) | } "REPORTING FORMAT OPTIONS" | 1400 Hz | <input type="checkbox"/> | 8 |
| (BPS) | | 2300 Hz | <input type="checkbox"/> | 9 |
| (Data) | | 20 bps | <input type="checkbox"/> | 10 |
| | | 1800 Hz | <input type="checkbox"/> | 10 |
| | | 1900 Hz | <input type="checkbox"/> | 11 |
| Answering machine override disabled | <input type="checkbox"/> | 11 | <input type="checkbox"/> | enabled |
| Auto reporting (days X 1) | <input type="checkbox"/> | 12 | <input type="checkbox"/> | (days X 4) |

See "Table 1" page 4

216:

| | | KEY | OFF / ON | |
|---------------------------------|--------------------------|-----|--------------------------|----------------------------------|
| Panic 1 disabled | <input type="checkbox"/> | 1 | <input type="checkbox"/> | enabled (Keys [1] & [3]) |
| Panic 2 disabled | <input type="checkbox"/> | 2 | <input type="checkbox"/> | enabled (Keys [4] & [6]) |
| Fire panic 3 disabled | <input type="checkbox"/> | 3 | <input type="checkbox"/> | enabled (Keys [7] & [9]) |
| Panic 1 silent | <input type="checkbox"/> | 4 | <input type="checkbox"/> | audible |
| Panic 2 silent | <input type="checkbox"/> | 5 | <input type="checkbox"/> | audible |
| Panic 3 silent | <input type="checkbox"/> | 6 | <input type="checkbox"/> | fire |
| 6 digit access codes | <input type="checkbox"/> | 7 | <input type="checkbox"/> | 4 digit |
| Key [10] fast arm disabled | <input type="checkbox"/> | 8 | <input type="checkbox"/> | enabled |
| Fast arm = regular arm | <input type="checkbox"/> | 9 | <input type="checkbox"/> | = stay arm (Key [10], keyswitch) |
| "TAMPER / ZONE WIRE DEFINITION" | <input type="checkbox"/> | 10 | <input type="checkbox"/> | See "Table 2" page 4 |
| | <input type="checkbox"/> | 11 | <input type="checkbox"/> | |
| 12 zone system | <input type="checkbox"/> | 12 | <input type="checkbox"/> | 24 zone |

ZONE DEFINITION: (default = "OFF")

| | |
|---|---|
| <p>218</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>Slow = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Fast = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>220</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |
| <p>222</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>Silent = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Audible = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>224</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |
| <p>226</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>Fire = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Burglary = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>228</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |
| <p>230</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>24 Hr. = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Regular = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>232</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |
| <p>234</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>Instant = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Delay = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>236</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |
| <p>238</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>Follow = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Delay = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>240</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |
| <p>242</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>Stay = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Regular = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>244</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |
| <p>246</p> <p>1A 2A 3A 4A 5A 6A 7A 8A 9A 10A 11A 12A</p> <p>Bypass enabled = ON <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p>Bypass disabled = OFF <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> | <p>248</p> <p>1B 2B 3B 4B 5B 6B 7B 8B 9B 10B 11B 12B</p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> <p><input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p> |

3 DIGIT DECIMAL PROGRAMMING (values entered at addresses [250] - [255] contain 3 digits between "000" and "255") ([10]/[2ND] = 0)

250: __/__/__ (seconds) Exit delay (default **60 seconds**)

251: __/__/__ (seconds) Entry delay 1 (default **45 seconds**)

252: __/__/__ (seconds) Entry delay 2* (default **45 seconds**)

253: __/__/__ (minutes) Bell cut-off time (default **5 minutes**)

254: __/__/__ (x 3 mSec.) Slow zone speed (default **500 mSec.**)

255: __/__/__ Number of rings before answer (default **8 rings**, enter "000" panel will not answer)
(Unless answering machine override is disabled, the panel will answer for answering machine dialing procedure)

*Entry delay 2 is programmable at zones 3A, 9A, 3B and 9B.

DECIMAL VALUE DISPLAY

| | | | | |
|-------------|----------|----------|----------|-------------------------|
| (8) | (4) | (2) | (1) | |
| 2ND | 1 | 2 | 3 | Total value (57) |
| | | | | (8 + 1 + 32 + 16 = 57) |
| TRBL | 4 | 5 | 6 | |
| (128) | (64) | (32) | (16) | No light = 0 |

KEYPAD TROUBLE DISPLAY

Key "ON" =

| | |
|-----------------------------------|--|
| [1] No battery/low battery | [7] Communicator report failure |
| [3] AC failure | [8] Timer loss |
| [4] Bell disconnect | [9] Tamper or zone wiring failure |
| [5] Maximum bell current | [10] Telephone line failure |
| [6] Max auxiliary current | |

FORMAT OPTIONS

| KEY | | |
|------------|------------|---|
| [8] | [9] | [10] |
| OFF | OFF | ON - Silent Knight/Ademco slow, 10 BPS (1400Hz Handshake) |
| ON | ON | OFF - Sescia, Franklin, DCI, Vertex, 20 BPS (2300Hz Handshake) |
| OFF | ON | OFF - Silent Knight fast, 20 BPS (1400Hz Handshake) |

TAMPER / ZONE WIRE DEFINITION

| SYSTEM ARMED | | KEY | | SYSTEM DISARMED | |
|---|--|-------------|-------------|---|--|
| | | [10] | [11] | | |
| Alarm as per individual zone definitions | | OFF | OFF | Disabled | |
| Always generate trouble and alarm, audible or silent as per individual zone definitions | | OFF | ON | No alarm, trouble code reported | |
| | | ON | OFF | Silent alarm and trouble codes reported* | |
| | | ON | ON | Audible alarm and trouble codes reported* | |

*Exception: for 24 hour zones the tamper definition will follow the audible/silent alarm definition of the 24 hour zone.

NOTES:

Initiating test report; Press [ENTER] + installer or master code + [BYP]

Address **214**, key **[5]** "ON", Report code at address **088**, telephone number at address **189-204**, and account number (s) at address **205-208** must be programmed.

Initiating Call to Espload via telephone; Press [ENTER] + installer or master code + [TRBL]

Panel and PC ID numbers, (address **001-004**, and PC download telephone number (address **181-188**) must be programmed)

Initiating call to Espload via 747ADP-1; Press [ENTER] + installer or master code + [AWAY]

(Direct PC modem and panel connection) (In Espload, activate "blind dial" in modem setup.) **Note:** The panel must be connected to a battery.

To reset timer; Press [ENTER] + installer or master code + [MEM]

To stop communication attempts;

Disable reporting at address **214**, key **[5]** "OFF", then press [ENTER] + installer or master code + [STAY]

Reset to default;

Reset jumper "ON", [ENTER] + installer or master code + [STAY], then remove reset jumper

When communicating with Espload it is not possible to enter programming mode. All other functions are accessible.

For technical support please fax your name, country, fax and phone numbers in English/ French to (514) 491- 3284. We will do our best to respond within 24 hrs.

ZONE DESCRIPTION:

Zone 1A: _____
 Zone 2A: _____
 Zone 3A: _____
 Zone 4A: _____
 Zone 5A: _____
 Zone 6A: _____
 Zone 7A: _____
 Zone 8A: _____
 Zone 9A: _____
 Zone 10A: _____
 Zone 11A: _____
 Zone 12A: _____

Zone 1B: _____
 Zone 2B: _____
 Zone 3B: _____
 Zone 4B: _____
 Zone 5B: _____
 Zone 6B: _____
 Zone 7B: _____
 Zone 8B: _____
 Zone 9B: _____
 Zone 10B: _____
 Zone 11B: _____
 Zone 12B: _____

Version 1.3 modifications from version 1.2.

- 1) All reportable events (up to 120), telephone line fail and restoration (new code at address 180) and "fail to communicate trouble" are stored in panel memory with TIME AND DATE.
- 2) Telephone numbers programmed in 8 digits groups, or via address accessing. (See page 2).
- 3) Panel can be reset to default without powering down by putting the reset jumper then **[ENTER]** + master/installer + **[STAY]** then remove reset jumper. (Reset will clear also previous events)
- 4) Communication attempts can be canceled by disabling reporting (214 **[5]**) then **[ENTER]** + master/installer **[STAY]** (don't forget to enable reporting again after)
- 5) User codes are programmed not via addresses but by **[ENTER]** + master code + code No. (2 digits) + new code 4 or 6 digits + **[ENTER]**.
- 6) When system is stay armed and key 10 enabled for stay arming, by pressing key 10, the system will provide exit delay and go back to stay arm after, no need to disarm and restay-arm the system.
- 7) Key **[10]** = 0 in address mode programming.
- 8) keypad buzzer follows bell output.
- 9) Arm LED (red) on keypad flashes upon any alarm.
- 10) When system is running on battery power, if battery reach 10.5V low battery will be reported and 20 minutes after if AC has not been restored aux. power will be cut in order to avoid over discharge of battery.
- 11) When system is in 4 digit code (address 216 **[7]** on 6 digit code can be entered in code programming for possible future 6 digit code usage. If the last two digits are empty (**[2ND][2ND]**) (default) the first two digits will automatically be inserted in the last two digits.

WARRANTY

Warranty conditions for the Esprit 747 may vary from country to country. Please consult your local dealer for complete warranty information. In all cases, the warranty does not cover malfunctions arising from installer error or failure to follow installation/operation instructions, nor does it apply to damages due to causes beyond the control of Paradox Security Systems Ltd., such as lightning, excessive voltage, mechanical shock or water damage.

LIABILITY

Under no circumstances shall Paradox Security Systems Ltd. be held liable for any direct or indirect damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation, operation or failure of this product.

WARNING

This security system should undergo frequent testing. However, despite regular testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.