

# EAGLE 8000

**REMEMBER: TO SHUT OFF AN ALARM WHILE ARMED, ENTER YOUR CODE**

**SERVICE:  
CENTRAL STATION:**

**1-800-654-6770  
PROTECTION ONE**

## KEYPAD CONTROLS & INDICATORS

### NUMERICAL DISPLAY

- Flashes Digits 1-6 - Indicates which non-24-Hour Zones are In an alarm condition, and which Day Zones are In a trouble condition. (Option: can also Indicate a Chime Zone.)
- Flashes "P" - Indicates a priority condition (armed with a Priority Zone in trouble, armed without resetting a Day Zone, or armed without ac power available to the system).

### ARMED (Red) Light

- Steady - system Is armed.
- Flashes - alarm on a non-24-Hour Zone.
- Flashes (fast) - entry delay canceled.

### READY (Green) Light

- Steady - system disarmed, all non-24-Hour Zones Okay.
- Pulses once every second - trouble on any non-24- Hour Zone.
- Flashes (fast) - trouble on Day Zone.

### BYPASS (Yellow) Light

- Steady - one or more zones manually bypassed. Dealer programmable to display Auto-Bypassed Zones and bypassed Priority Zones as well.)

### AUX (Bottom Red) Light

- Steady - Aux/Fire Zone In alarm condition.
- Flashes - Aux/Fire Zone in trouble condition.

### KEYPAD SOUNDER

- Steady Tone - a priority condition exists.
- Steady Tone (when entering) - entry delay in progress.
- Beep (programmed duration) - "Chime" feature activated.
- Beep (2 seconds) - system armed with a zone In trouble.
- Pulsing - Day Zone or Fire Zone In trouble. (to stop sounder "trouble" warnings, hold down [9] Key for 2 seconds.)

## HOLD DOWN FUNCTIONS

### Key [2]: DISPLAY BYPASS

Numerically displays zones (1 through 6) that have been bypassed using the BYPASS Key. To display bypassed zones, hold down Key [2] until sounder beeps, and continue to hold it down until all zones have been displayed.

### Key [4]: INSTANT PROTECTION

Cancels entry delay period when arming while on the premises. This will cause an Instant alarm when the entry door Is opened. The delay Is restored after you disarm the system. To activate *Instant protection*, hold down Key (4) until the sounder beeps, just prior to or after arming.

### [3]: DISPLAY ZONES OPEN

Numerically displays zones (1 through 6) that are In "trouble". To display open zones, hold down Key [3] until sounder beeps, and continue to hold it down until all zones been displayed.

### Key [5]: CHIME

This will enable a feature that sounds a "chime" (beep) at the keypad each time a programmed zone Is opened. (This feature may have been programmed to display the zone number as well until the zone Is closed.) The Chime Mode functions when the alarm system Is disarmed (off), but it will always operate on a Never-Armed Zone. To disable the chime feature, hold down Key [15] again (until sounder beeps).

## HOLD DOWN FUNCTIONS cont.

### Key [6]: COMMUNICATOR TEST

(Applicable only to systems programmed to report to a central station.)

Tests your telephone lines. To make this test, hold down Key [6] until sounder beeps. The sounder will start to pulse. If the line is good, the pulsing will stop; if not, a steady tone will sound. Reset the sounder using Key [9].

### Key [8]: PROGRAM

Allows you to enter the Program Mode. In this mode, you can program up to 5 personalized User Codes, including a Service Code (optional). Refer to *SELECTING AND PROGRAMMING YOUR CODES* for more information. (to perform this function, hold down Key [8] until sounder beeps.)

### [BYPASS] Key: BYPASS/ALARM HISTORY

Note: Pressed momentarily, manually bypasses a zone or zones. Refer to *SETTING THE ALARM WHEN LEAVING: Arming With A Zone In Trouble* for more information.

### Key [7]: FAULT FIND

For Installer's use only. (Arming the panel will cancel the Fault-Find Mode.)

### Key [9]: RESET

Resets any sounder indication, ac power loss indication, Day-Zone indication, Fault-Find Mode, or may be programmed to reset the Fire Zone. After an alarm occurs and the system is disarmed, the numerical display will still indicate which non-24-Hour Zone(s) caused the alarm. Use Key [9] to clear the display. (To perform this function, hold down Key [9] until sounder beeps.)

**ALARM HISTORY.** This will flash the red ARMED light to indicate the last alarm condition. The numerical display will indicate the zones violated. History is not lost when the system is rearmed; the previous alarm history will remain in alarm memory until automatically reset by a new alarm condition. To check alarm history, hold down

### KEYS [\*] and [#]: PANIC BUTTONS

Momentarily pressing these keys will activate the Panic Zone. Refer to *PROTECTING YOURSELF WHILE ON THE PREMISES: Panic Zone* for more information.