



D9142F 24 VDC Power Supply Operation and Installation Manual

Table of Contents:

I. Description	2
II. Installation	3
A. Installing the D9142F	3
1. Mounting the Enclosure	3
2. Installing the D9142M	4
3. Installing the D1601	4
B. Connecting AC Power	4
C. Batteries	7
1. Battery Connection	7
2. Battery Supervision	8
3. Stand-by Battery Calculations	8
D. Connecting Auxiliary Devices	9
E. Power Supply Supervision	9
F. LED Indicators	11
G. Switched Output Control	12
III. Specifications	13

Description

The D9142F is a UL listed, Auxiliary Power Supply for use in Commercial Fire Alarm System applications. It provides up to 4 amps of power for charging batteries and powering auxiliary or indicating devices. The D9142F is provided in its own red enclosure that is louvered for ventilation. The green AC LED and the red Trouble LED are visible through the door. The enclosure also has room to install two, 12 volt, 7 amp hour batteries. Power is supplied to the system via the D1601 Transformer. This specialized transformer provides power to both the D9142F and to the control / communicator.

The D9142F supervises all critical circuits of the power supply. It provides several installation and service outputs for troubleshooting. Five different trouble conditions can be recognized and optionally communicated to the central station. These trouble conditions are also annunciated by on board and off board LED indicators. A summary trouble relay can be programmed to give a general trouble indication.

Battery Lead Supervision is provided for both batteries when they are connected as described in the *Installing the Batteries* section of this manual.

System Components

The D9142F Power Supply is shipped in three separate packages. The D9142M and installation instructions come in one package. The D8109L comes in a second package and the D1601 transformer comes in a third package.

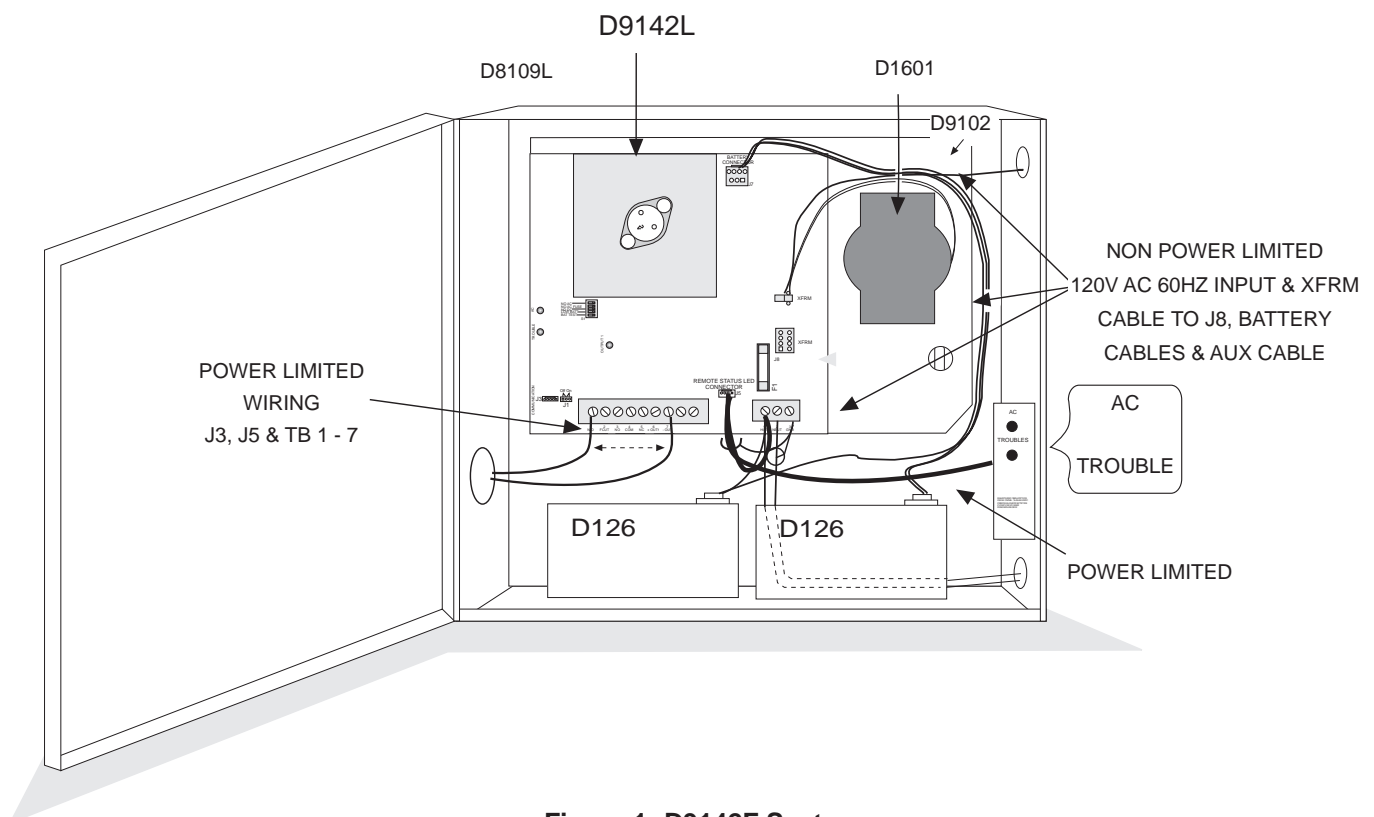


Figure 1: D9142F System

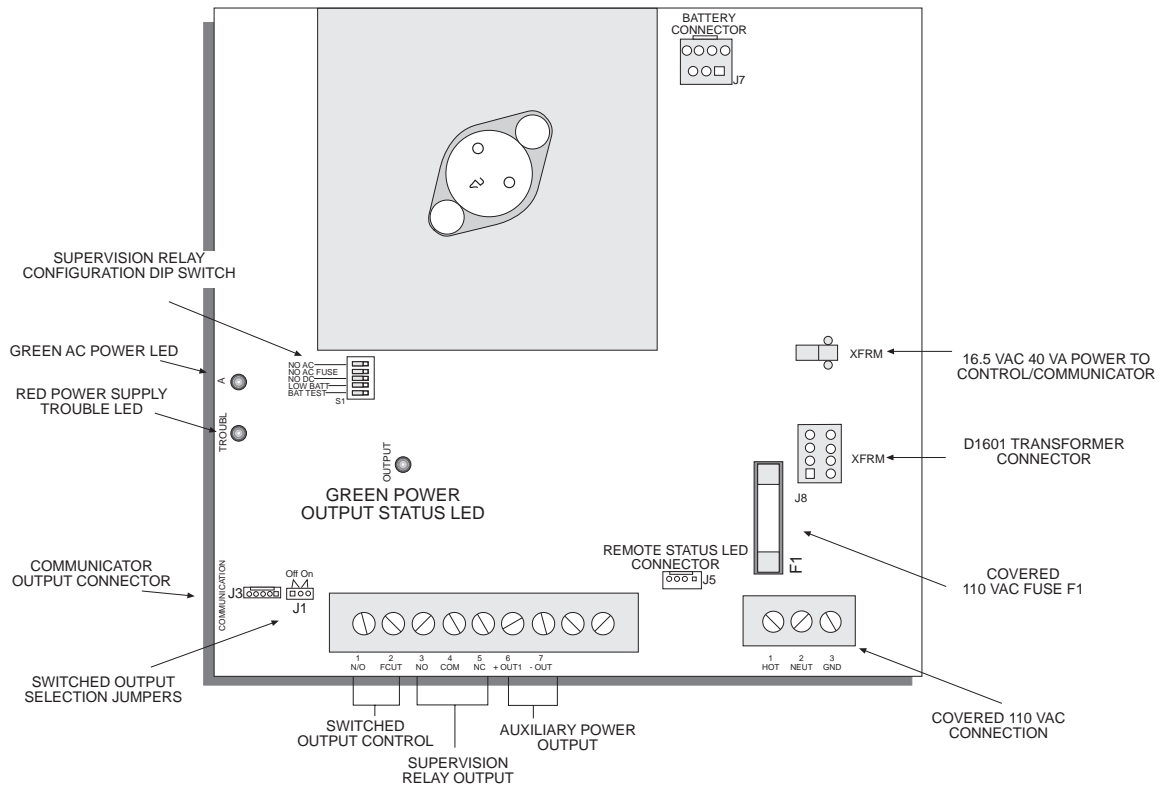


Figure 2: D9142F Power Supply

You should have the following system components when you receive your D9142F Power Supply:

- ↑ One D1601 Transformer with Dual Secondary Winding
- ↑ One D8109L Louvered Enclosure with lock and key
- ↑ One D9142M Power Supply Assembly which includes the following:
 - ↑ D9142LC Power Supply Board
 - ↑ D9102 Mounting Skirt
 - ↑ Operation and Installation Manual
 - ↑ Yellow wiring harness, provides 16.5 VAC to panel
 - ↑ Communicator harness, 5 conductor to panel
 - ↑ Battery wiring harness with connector
 - ↑ Power and Trouble LED assembly

Installation

The D9142F typically is installed adjacent to the Control Communicator. It is compatible with all Radionics Control Panels but should only be used with a listed panel for fire alarm applications. For longer stand-by times, a second battery enclosure may be needed.

Mounting the Enclosure

The D8109L is a louvered version of the standard D8109, UL listed Fire Enclosure. It is supplied with the standard D101F lock and key set. The D8109L is designed to house the D9142F, the D1601 Transformer and the batteries. Standard sized knockouts are provided for conduit connections.

Enclosures compatible with the D9142F: Only use the D8109L Enclosure with the D9142F Power Supply. This enclosure is designed to allow the air circulation needed to keep the power supply cool.

The D9142F Power Supply's enclosure requires 1/2 inch clearance on all sides.

To attach the enclosure to the wall, use mounting hardware that is capable of supporting 55 pounds of equipment. You may need to mount a plywood sheet to the wall in order to support the weight of the power supply and batteries.

1. Position the enclosure on the surface so that is level.
2. Use the holes to mark the location for anchors.
3. Install anchors into the surface.
4. Using the three top anchor locations, drive the screws about 3/4 of the way in.
5. Hang the enclosure on the partially driven screws.
6. Secure the enclosure onto the surface with screws.
7. Adjust the enclosure so that it is again level and while holding the enclosure in a level position, completely tighten the screws. Install screws in holes located toward the bottom of the enclosure.
8. Hang the D9142F onto the hangers at the top of the enclosure.
9. Drive a screw into the tab at the bottom center of the D9142F to secure the mounting skirt to the enclosure.

Installing the D9142M Power Supply Board

After mounting the D8109L enclosure, locate the D9142M and remove it from its packaging. In this box you should find three wiring harnesses. Save these harnesses. They will be used later in the installation.

- Battery Wiring Harness with connector
- Communicator Output Harness, 5 conductors
- Panel Power Harness, yellow wires, two conductors

The D9142M power supply mounts in the D8109L enclosure on the mounting tabs provided. Hook the skirt on the top two mounting tabs and secure the bottom of the skirt with the screw provided.

Installing the D1601 Transformer

Locate the D1601 package and remove the transformer. The D1601 mounts in the D8109L enclosure. The D9142M skirt has mounting tabs for the transformer. After mounting the D1601 transformer with the hardware provided, connect the transformer cable assembly to connector J6 on the power supply board. The D1601 Transformer is over current protected with a thermal, non-resetable fuse.

Connecting AC Power

The power supply is connected directly to a dedicated circuit breaker. All high voltage points (120 VAC) on the board such as the fuse and input terminals are covered for added safety. Radionics recommends that only a licensed electrician make 120 VAC connections to the D9142F as shown in *Figure 3*. The electrician should also connect the D9142F to a suitable ground connection.

Danger: Turn off the faulted dedicated circuit breaker before connecting the 120 VAC to the D9142F. Leaving the circuit breaker on can cause injury or death by electrocution.

When installing the D9142F, consider locating it near the dedicated electrical circuit breaker box. Make sure a suitable grounding location is within 50 feet, and install the D9142F near the control panel when using the D9142F to supply power to a control panel.

Connect power to the 120 VAC input terminals, following these steps:

1. Remove the knockout and install appropriate hardware for connection to conduit.
2. Remove the protective terminal cover marked CAUTION 120 VAC.
3. Pull the 120 VAC Power wires through the conduit hardware installed in the knockout.
4. Connect the wires as marked on the board.
5. Replace the protective cover over the 120 VAC Input terminals.

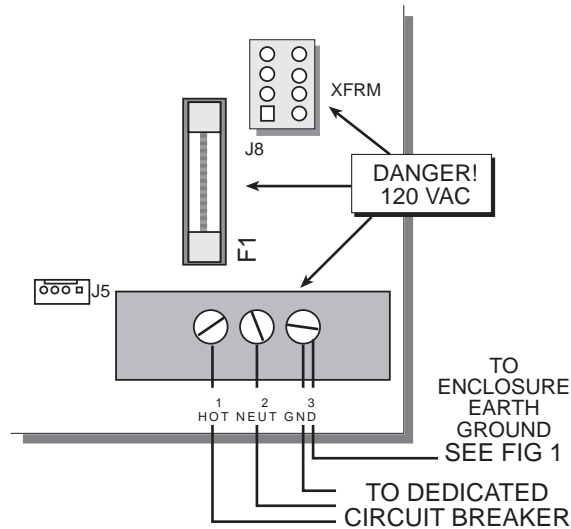


Figure 3: 120 VAC Fuse

120 VAC Fuse

The 120 VAC fuse (F1) is located on the lower right-hand corner of the D9142F, above the 120 VAC terminals (see figure 3). Fuse F1 protects the D9142F and D1601 from damage due to power surges or over loads.

Fuse F1, is a type 3 AG, 4 Amp, 250VDC slow blow fuse. Radionics part number 57-01338-004.

Danger: Turn off the 120 VAC circuit breaker before testing or replacing Fuse F1. Leaving the 120 VAC circuit breaker on can cause injury or death by electrocution.

If the green AC power LED is off, the 120 VAC circuit breaker is in the ON position, and the building lights and other electrical devices still operate, Fuse F1 may be open. To replace the fuse, follow these steps:

1. Turn OFF the 120 VAC dedicated circuit breaker.
2. Remove the protective cover from Fuse F1.
3. Pull the fuse from the socket.
4. Using a Volt/Ohm meter verify the 120 VAC has been removed and then, test the resistance of the fuse. If the fuse is open, replace with a new fuse matching Fuse F1's specification. If the fuse is closed, the problem may be elsewhere. Call a licensed electrician to troubleshoot any electrical problem.
5. Insert the fuse into the F1 socket.
6. Replace the protective cover.
7. Turn the 120 VAC circuit breaker ON.
8. Observe the green AC power LED should be ON.

Locating Power Connectors on the D9142F

The D9142 provides power to, and receives low voltage AC power back from the D1601 Transformer (see *Figure 4*). The D1601 transformer is provided with a wiring harness that is terminated with a connector. The J8 connector is where the transformer is connected to the D9142.

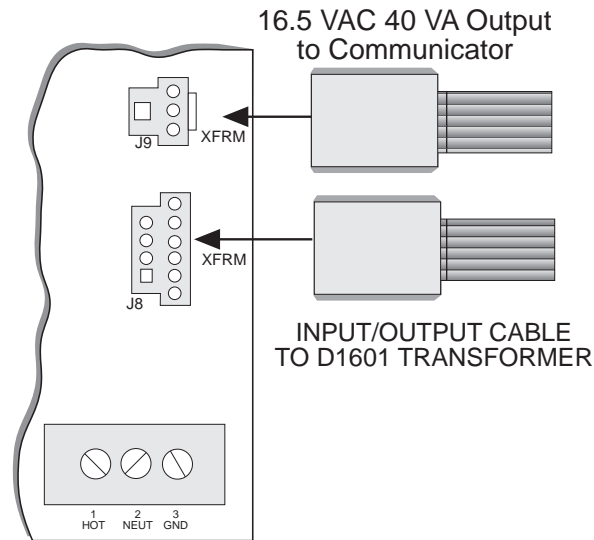


Figure 4: Plugging in the Power

AC Power for the Communicator

The D9142F can also provide 16.5 VAC, 40 VA to power the control / communicator. The yellow, 2 conductor wiring harness supplied in the D9142M package is used for connecting power to the control panel. This harness connects to the J9 connector on the D9142F (see *Figure 4*). The other end is connected to terminals 1 and 2 of the control panel. This option eliminates the D1640 transformer to power the panel. If the D9142F is to be used to power the panel the D8109L should be mounted next to the control's enclosure and joined with conduit.

Installing the Batteries

The D9142F uses two sealed lead acid batteries rated at 12 volt, 7 Ah (Radionics D126) connected in series to provide a 24 volt stand-by power. Two batteries must be used. The power supply will not provide stand-by power with only one battery connected.

You must use sealed lead acid batteries: The D9142F is designed to charge only sealed lead acid batteries. Using any other type of battery may cause damage to the D9142F or the batteries.

To install or change the batteries, follow these steps:

1. ***Switch off the AC Power to the D9142F.***
2. ***Place the batteries in the bottom of the enclosure.***
3. ***Connect red battery leads to red battery terminals and black battery leads to black battery terminals.***
4. ***Plug the battery harness into connector J7 on the D9142F as shown in Figure 5.***

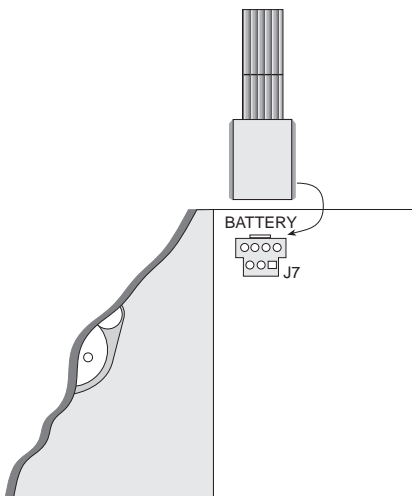


Figure 5: Connecting the battery harness

Here are some important safety tips:

- Connect no more than one battery on a single lead with the supplied battery harness.
Important: If two or more batteries are connected in parallel, battery lead supervision is compromised.
 - Do not mix battery sizes, types, or manufacturers when connecting to a power supply.
 - *Wear insulated gloves and safety goggles while handling*
- Consult battery manufacturer instructions for further information about batteries and applicable safety precautions.

Battery Supervision

The D9142F supervises the batteries for both missing and low battery conditions. To maintain battery lead supervision, and optimum performance, do not parallel additional batteries on to the power supply.

When the battery is disconnected or the battery voltage drops into the 22 - 24 VDC range, the red Trouble LED lights and the power supply triggers the Low Battery Trouble output.

When battery is restored and the voltage returns to the 24.2 - 26.5 VDC range, the red Trouble LED is turned off and the Low Battery Trouble output is reset.

Calculating Standby Power Requirements

Commercial Fire Alarm Systems typically require either 24 or 60 hours of stand-by time.

Table 1 is designed to assist you in determining the battery amperage needed to achieve the desired standby time or current output.

Selecting the Correct Batteries

Selecting the correct batteries for the system depends on the total continuous current draw of all devices, the amount of stand-by time required, the amount of intermittent current draw (in alarm) needed and finally the time it takes to recharge the batteries.

Table 1 shows the amount of current (at 24 VDC) that can be drawn for a given battery selection. The calculations used to create this table include the intermittent current required for five minutes of 3A bell time at the end of the standby period. When the summary trouble relay is used, subtract 0.02 amps from the available standby current you select from the table.

	24 Hour Standby		60 Hour Standby		72 Hour Standby	
Battery Amp. Hrs	Current (Amps)	Recharge Time (Hrs)	Current (Amps)	Recharge Time (Hrs)	Current (Amps)	Recharge Time (Hrs)
7Ah	0.136	2.07	0.030	2.01	0.012	2.00
12Ah	0.322	3.75	0.105	3.51	0.075	3.48
14Ah	0.397	4.48	0.135	4.14	0.100	4.09
17.2Ah	0.517	5.73	0.183	5.15	0.140	5.09
24Ah	0.771	8.73	0.286	7.42	0.225	7.28
36Ah	1.219	15.65	0.467	11.79	0.376	11.45
38Ah	1.294	17.07	0.497	12.57	0.401	12.18
48Ah	1.668	25.91	0.648	16.71	0.527	16.04
65Ah	2.303	53.41	0.904	24.85	0.740	23.38
76Ah	2.714	94.29	1.070	31.02	0.878	28.77

Table 1

Example: 7 amp hours of battery capacity (two 12v 7 Ah, D126 batteries installed) provide 24 hours of standby time, when drawing no more than 0.135 A from the supply continuously. 7 amp hours also provide up to 3 A of alarm power for indicating devices for five minutes at the end of the stand-by period.

Do not connect more than 1.5 amps of stand-by or continuous current to the D9142F. The alarm load can not exceed 3 amps. Together the continuous and alarm load cannot exceed 4 amps.

Example: If your stand-by current or continuous load is 1.5 amps, the alarm power cannot exceed 2.5 amps for all devices connected to the D9142F.

Connecting Auxiliary Devices

The D9142F has a 4 Amp, 24 VDC Power Supply with a current limited output for powering devices like smoke detectors, bells, horns, strobes, or other 24 volt devices.

Connect device wiring as shown in Figure 6. Power Limited and Non-Power Limited wiring inside the enclosure should be kept separate. Maintain at least 1/4" spacing between all field wiring and the AC and Battery harnesses (see Figure 1). Be sure to observe correct polarity when connecting devices, see *Technogram 73-07535-000* for a list of compatible devices. The terminals 8 and 9 are not functional.

Power Supply Supervision

The D9142F supervise five trouble conditions which can be individually identified back to the central station or grouped to activate a summary trouble relay. These five trouble conditions are as follows:

- ↑ AC Power Failure
- ↑ On Board AC Fuse Failure
- ↑ Power Output Fault
- ↑ Battery Test Failure
- ↑ Battery Trouble: Low, Missing or Shorted

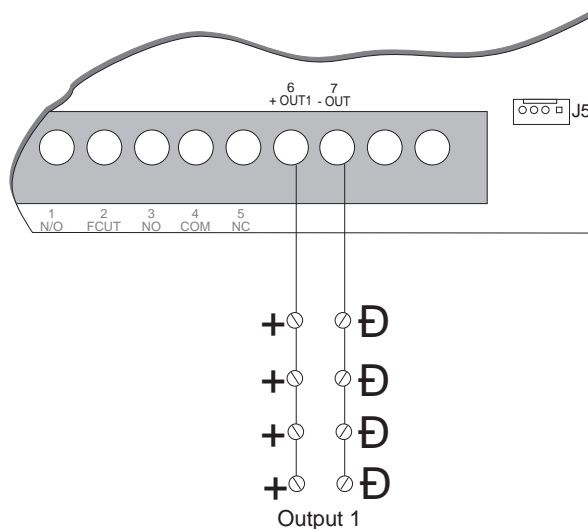


Figure 6: Connecting Power Output to Devices

Trouble Output Header

The five trouble conditions have outputs on the Communicator Output Connector, J3, located on the D9142F board. This five pin header is located near the bottom left-hand corner of the power supply. Using the five conductor wiring harness found in the D9142M package, a separate trouble output can be tied into its own zone or point on the control / communicator. Each output is an open collector that shorts the zone to ground to indicate a trouble condition. The wiring harness connector is keyed (see Figure 7).

Select the power supply supervision conditions to be communicated. Connect the appropriate wire to the positive side of the communicator's zone input. Install the communicator's end-of-line resistor across the communicator's screw terminals. A ground reference must be established between the power supply and the communicator. Connect a wire from the D9142F, terminal 7 (- Out) to a common terminal on the communicator.

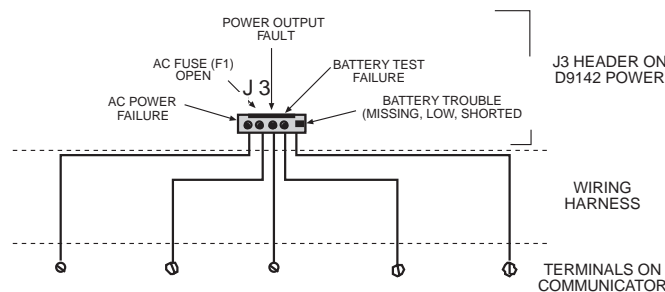


Figure 7: Connecting Trouble Output to the Communicator

Summary Trouble Relay

The Summary Trouble Relay can be activated by one or more of the five trouble conditions using the S1 dipswitch. This relay can be used as a common trouble indicator. To activate the relay for a specific trouble condition, move the switch to the on position. For the factory default settings see Figure 8.

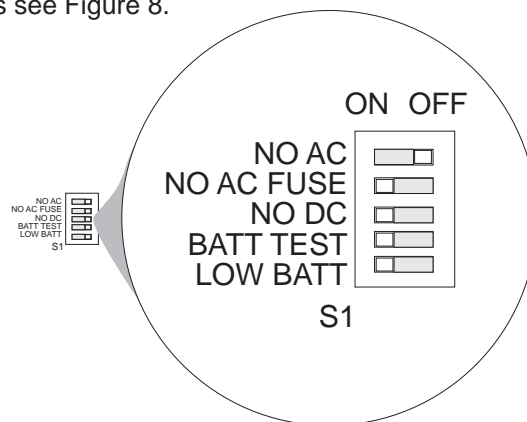


Figure 8: Dip Switch Settings Default

Summary Trouble Relay Wiring

When used as a remote trouble indicator, the trouble relay can be wired to trigger trouble sounders or lights. A form C relay output activates when selected trouble event(s) occur. Wire the relay to switch positive power to the indicating device as shown in *Figure 9*.

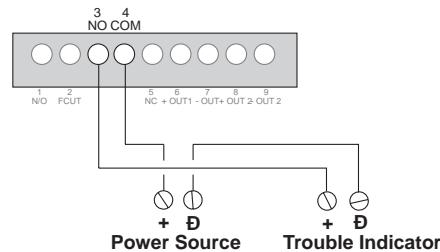


Figure 9: Connecting the Summary Trouble

LED Indicators

The D9142F has two system status LEDs located on the lower left side of the board. (see Figure 3). These status LEDs indicate the following:

AC LED	The green AC LED lights when AC Power is connected and applied to the D9142F. Normally, this LED should be on.
TROUBLE LED	The red Trouble LED lights when the D9142F senses trouble. Normally, this LED should be off.
POWER OUTPUT LED	The LED lights when the power output is normal. The LED turns off when there is a fault such as a short circuit condition on loop.

LED Output Connector

The D9142F has two status LEDs that are visible through the door of the D8109L enclosure. The AC LED (top) and Trouble LED (bottom) have the same meaning and actions as the AC LED and Trouble LED explained above. Connector J5 connects to the wire harness of the remote status LED assembly. This assembly mounts in the lower right accessory mounting location of the D8109L enclosure (see Figure 1). Connect the Remote LED harness as follows:

1. Knock out the three hole plugs in the lower accessory mounting position of the D8109L enclosure.
2. Mount the LED assembly with the three screws provided.
3. Connect the LED assembly wire harness to J5 on the D9142F board.

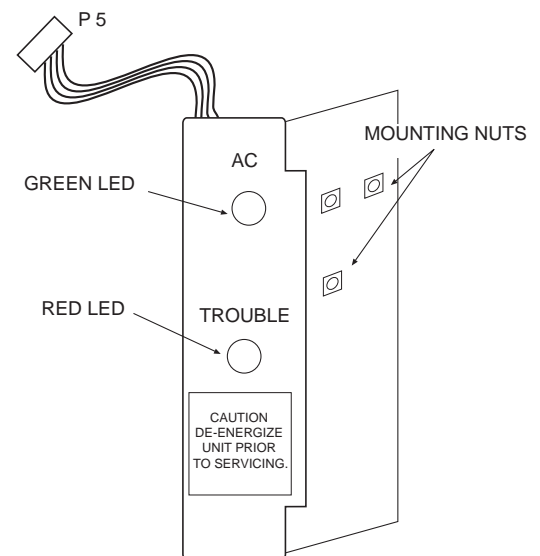


Figure 10: Status LED's

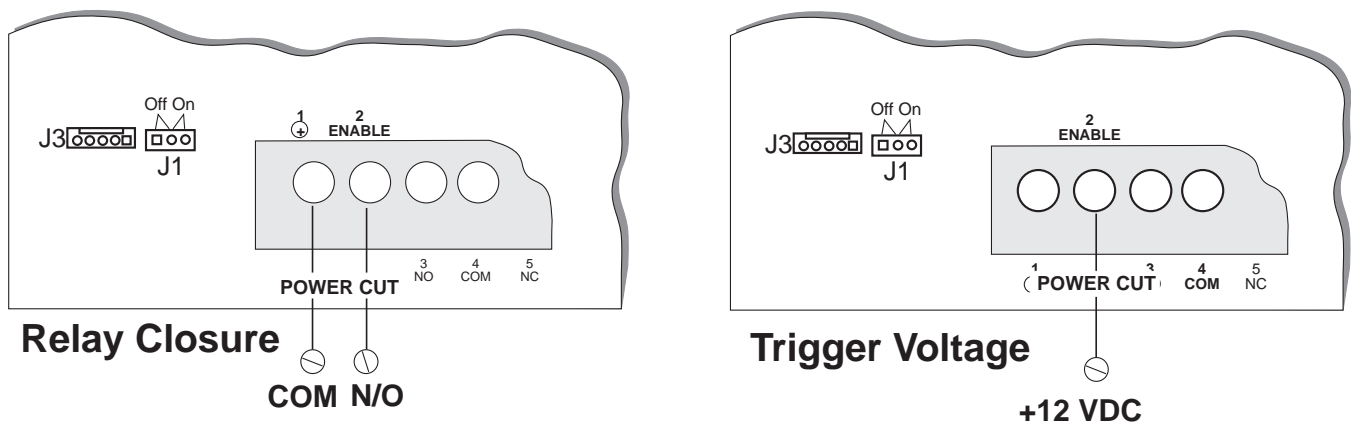


Figure 11: Connecting Switched Output Control

Switched Output Control

A remote device can switch the D9142F power output on or off with a 12 VDC trigger voltage or a dry contact closure. When +12 VDC is applied to terminal 2 of the D9142F, the power output is disabled. A dry contact device can also disable power by shorting terminal 1 and 2 on the D9142F. If using this feature, connect the wire as shown in *Figure 11*.

Use this feature to remove power from devices. This feature can apply power to notification devices that require power during a fire alarm such as horns, strobes and bells. When used for notification appliances the power supply must be installed within 20 feet of the control unit, and the trigger wire must be in conduit.

Select Power Output Switching

The J1 jumper (see *Figure 11*) enables or disables Output Control for the power output.

Specifications

Power Input	120 VAC, 60 Hz 360 VA
Power Output	4.0 Amps
Max Charging Current	2.0 Amps
DC output	18.9 to 28.0 VDC
Low Battery Threshold	22.0 to 24.1 VDC
Low Battery Restoral	24.2 to 26.5 VDC
Battery Load Shed Threshold	18.9 to 20.5 VDC
Battery Load Shed Restoral	23.1 to 24.7 VDC
Summary Trouble Relay	Form C Rated for 2 A @ 12 or 24 VDC
Power Cut	1K ý maximum
Communication Header	Open collector output Current sink 5 mA max.
Operating Temperature	32° - 122° F
Humidity	85% at 86° F Non Condensing
Batteries	12 VDC 7 Amp hour Sealed Lead Acid
Compatible panels	D7212, D8112, D8124, D9112, D9124
120 VAC Fuse Rating	Type 3 AG 4 Amp 250V SB RPN 57-01338-004
UL Listing	UL 1481 Power Supplies for Fire Protective Signaling Systems

FCC Notice

Part 15

This equipment generates and uses radio frequency energy. If not installed and used in accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been tested and found to comply with the specifications in Part 15 of FCC rules for Class B Computing Devices.

If this equipment causes interference to radio or television reception - which can be determined by turning the equipment on and off - the installer is encouraged to correct the interference by one or more of the following measures: 1) Reorient the antenna of the radio/television. 2) Connect the AC transformer to a different outlet so the control panel and radio/television are on different branch circuits. 3) Relocate the control panel with respect to the radio/television.

If necessary, the installer should consult an experienced radio/television technician for additional suggestions, or send for the "Interference Handbook" prepared by the Federal Communications Commission. This booklet is available from the U.S. Government Printing Office, Washington DC 20402, stock number 004-000-00450-7.

© 1995 Radionics, Inc., Salinas, CA, U.S.A. All rights reserved.
™ The Radionics logo is a registered trademark of Radionics, Inc., Salinas, CA, U.S.A.



Radionics™

Radionics, 1800 Abbott Street Salinas, CA, 93901, Customer Service: (800) 538-5807