



## **and Custom Versions**

### **INSTALLATION INSTRUCTIONS**

This document describes the procedures necessary for an experienced installer to install CareTaker Plus, WatchGard, and Security Pro 4000 security systems. Refer to the *CareTaker Plus and Custom Versions Installation Manual* (46-504) for UL installation requirements or if you need more detailed information.

|                                              |     |                                                     |      |
|----------------------------------------------|-----|-----------------------------------------------------|------|
| <b>Installing the System</b> .....           | [1] | <b>Installing Line Carrier Devices</b> .....        | [12] |
| Installing the Status Speaker Kit .....      | 1   | Installing and Programming the WIS .....            | 12   |
| Installing the Radio Receiver Module .....   | 1   | Connecting an External Siren to the WIS .....       | 12   |
| Installing a Feature Expansion Module .....  | 2   | Installing X-10 Lamp Modules.....                   | 13   |
| Connecting Hardwire Devices to the Panel ... | 3   | <b>Testing the System</b> .....                     | [13] |
| Installing the Backup Battery.....           | 7   | Testing Sensors.....                                | 13   |
| Applying AC Power to the Panel.....          | 8   | Testing Phone Communication .....                   | 14   |
| Adjusting Status Sound Volume.....           | 8   | Testing Central Station Communication .....         | 14   |
| <b>Programming the Panel</b> .....           | [8] | <b>Appendix A: System Planning Worksheets</b> ..... | [15] |
| Entering Program Mode.....                   | 8   | <b>Appendix B: Programming Tables</b> .....         | [18] |
| Clearing Memory .....                        | 9   | <b>Appendix C: User Command Summary</b> .....       | [21] |
| Learning Wireless Sensors                    |     | <b>Appendix D: Troubleshooting</b> .....            | [22] |
| and Hardwire Zones .....                     | 9   |                                                     |      |
| Deleting Wireless Sensors                    |     |                                                     |      |
| and Hardwire Zones .....                     | 9   |                                                     |      |
| Learning Wireless Touchpads .....            | 9   |                                                     |      |
| Programming Sensor Text.....                 | 9   |                                                     |      |
| Programming Panel Configuration Options ..   | 10  |                                                     |      |
| Programming Upper Sensors .....              | 11  |                                                     |      |
| Requesting CS-4000 Programming .....         | 11  |                                                     |      |



Interactive Technologies, Inc.  
2266 North Second Street  
North Saint Paul, MN 55109  
1-800-777-1415  
1-800-648-ALARM (Security Pro Dealers)  
Document Number 46-572 Rev. C

## Installing the System

This section describes how to install the Panel and optional Panel hardware. Plan your system layout before starting the installation, using the worksheets provided in Appendix A.


Installing the Panel consists of the following procedures:

- Installing the Status Speaker Kit
- Installing the Radio Receiver Module
- Installing a Feature Expansion Module
- Connecting Hardwire Devices to the Panel
- Installing the Backup Battery
- Applying AC Power to the Panel

**Note:** Panel hardware can be added before or after mounting the Panel.

### Installing the Status Speaker Kit (80-094)

Install the status speaker at the location on the Panel shown in Figure 1 and connect the speaker wires to Panel terminals 11 and 16 (no polarity).

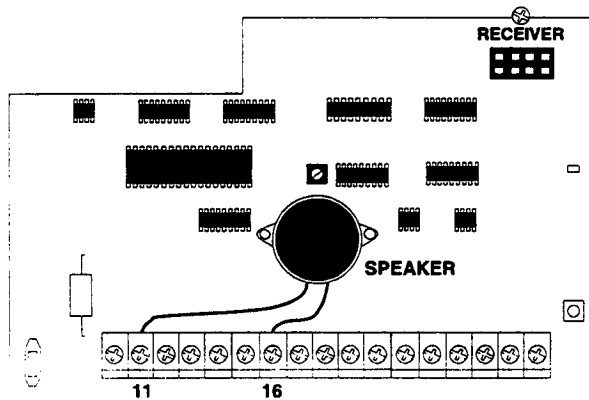

**Figure 1.** Installing the Status Speaker Kit


### Installing the Radio Receiver Module (60-485-95)

This section describes how to install and connect the wireless receiver on the Panel.

**Note:** Some Panels are shipped with this module already installed.


**CAUTION:** You must be free of static electricity before handling circuit boards. Touch a grounded, bare metal surface before handling circuit boards to discharge yourself of static electricity or wear a grounding strap.

- 1) Loosen, but do not remove the two Panel circuit board screws (see Figure 2).

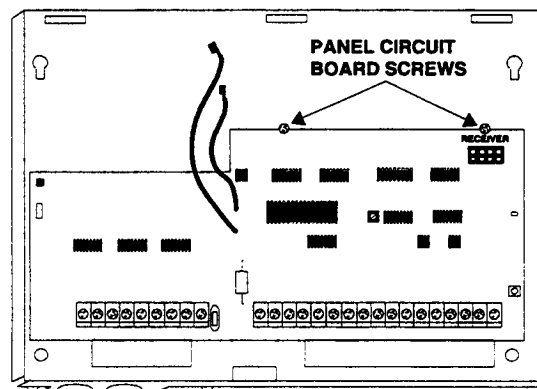


**Figure 2.** Panel Circuit Board Screw Locations

- 2) Align the two bottom notches on the module with the loosened screws.
- 3) Gently tighten the two circuit board screws and install two more screws (included) at the top of the module (see Figure 3).

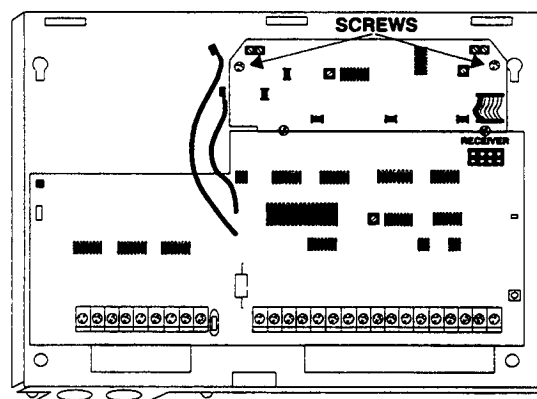


**Figure 3.** Receiver Module Top Screw Locations

- 4) Connect the module ribbon cable connector to the receiver pins on the Panel circuit board (see Figure 4).

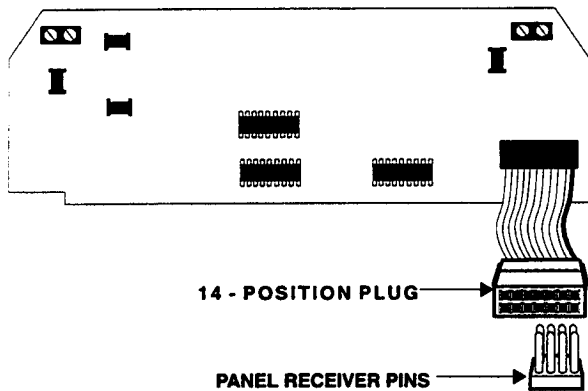

**Figure 4.** Connecting the Receiver Module Ribbon Cable to the Panel Pins

- 5) Insert one antenna into the inside screw terminal of each terminal block and gently tighten the screws using a small pocket-size screwdriver (see Figure 5).

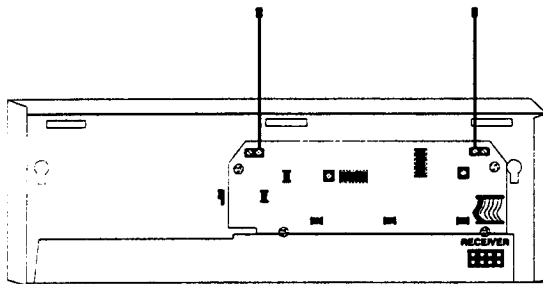

**Figure 5.** Installing the Receiver Module Antennas

**CAUTION:** Do not overtighten the terminal block screws; otherwise, permanent damage may result.

### Installing a Feature Expansion Module (60-436 and 60-622)

A Feature Expansion Module is required if the installation includes any or all of the following:


- Exterior speakers
- Energy Saver Module
- Hardwired detectors that need an external power source
- Hardwired smoke detectors that require a switched power output for automatic reset after a fire alarm is canceled

Two Feature Expansion Modules are available; a 6-VDC model (60-436) and a 12-VDC model (60-622).

**Note:** If you are not powering hardwire detectors or 12-VDC smoke detectors from the Feature Expansion Module, we recommend using the 6-VDC model.


Both models attach to the Panel the same.

- 1) Align the two top notches on the module with the battery support brackets and secure the module by installing the two screws included (see Figure 6).

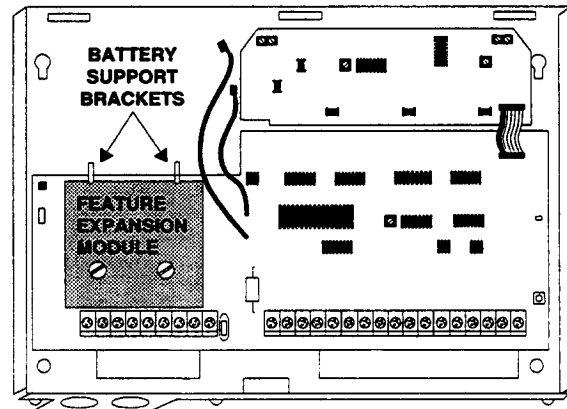


**Figure 6.** Installing a Feature Expansion Module

- 2) Make wiring connections from the module to the Panel as follows:
  - For 6-VDC models, wire the module to the Panel as shown in Figure 7.

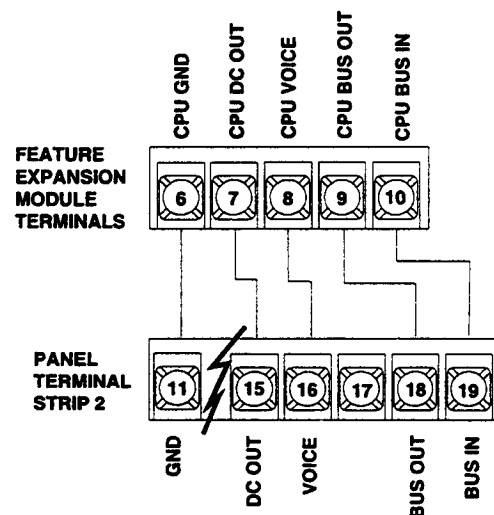

**Figure 7.** Wiring the 6-VDC Feature Expansion Module to the Panel

- For 12-VDC models, slide the wire harness (included) onto the pins on the lower-right corner of the module and connect the harness wires to the Panel as shown in Figure 8.

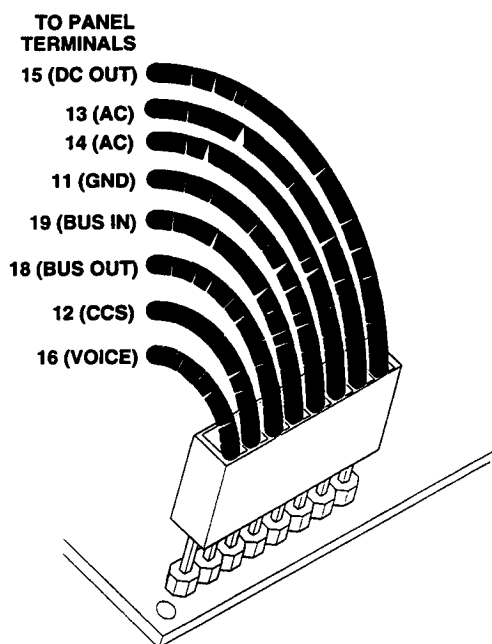

**Figure 8.** Connecting the Harness Wires to the Panel

**Note:** Since wire colors may change over time, Figure 8 shows how any wire harness included with the module connects to the Panel terminals, starting with the top wire.


## Connecting Hardwire Devices to the Panel

This section shows how to connect the following hardwire devices to the Panel:

- Hardwire smoke detectors
- Hardwire intrusion detectors
- Hardwire speakers, sirens, and piezos
- Energy Saver Module
- RJ-31X (CA-38A) phone jack
- AC Power Transformer


For detailed information on installing hardwired devices, see the *CareTaker Plus and Custom Versions Installation Manual* (46-504) and the installation sheets that accompany each device. Refer to A.2 to calculate the hardwire device limit for the system.

## Wiring Hardwire Smoke Detectors to the Panel

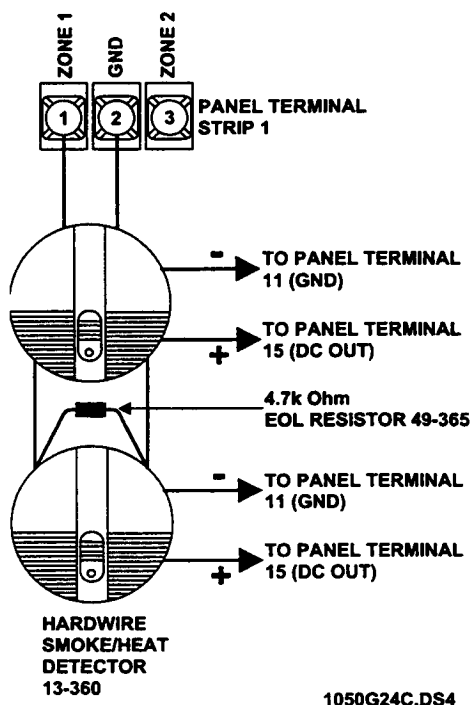


**Figure 9.** Multiple Hardwire Smoke Detectors in Parallel

## Wiring Hardwire Intrusion Detectors to the Panel

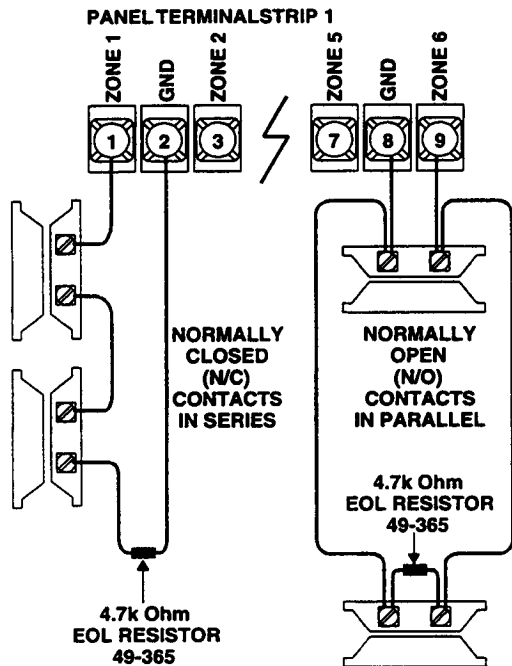


**Figure 10.** Wiring Hardwire Door/Window Contacts in Series (left) and Parallel (right)

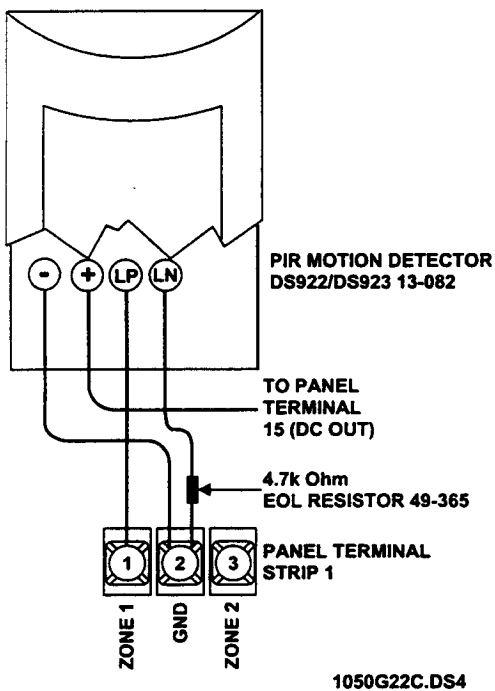


**Figure 11.** Wiring a Hardwire PIR Motion Detector to the Panel

## Wiring Piezos, Hardwire Sirens, and Speakers to the Panel

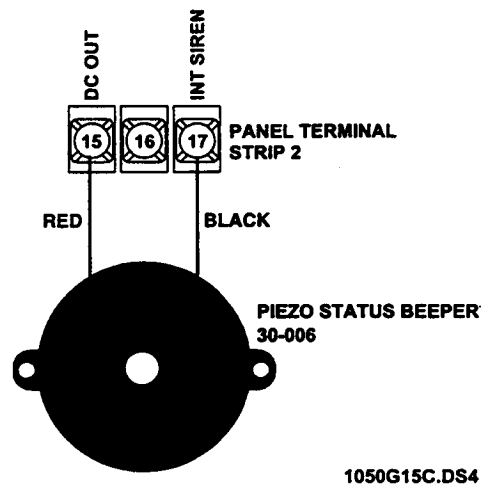


**Figure 12.** Wiring the Piezo Status Beeper to the Panel

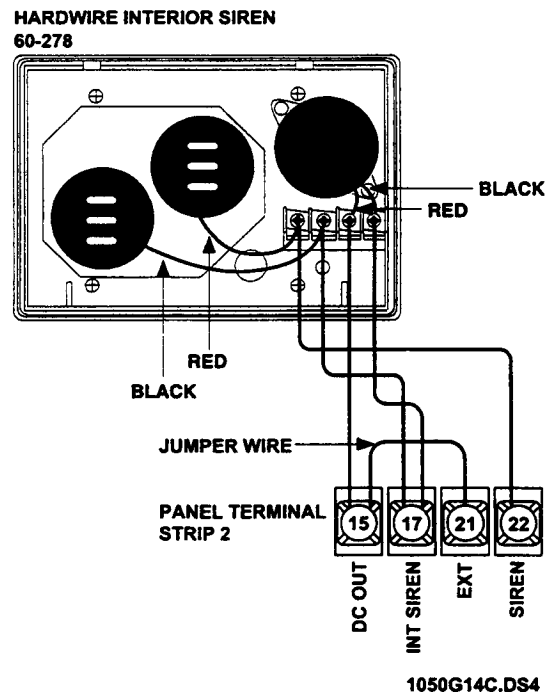


**Figure 13.** Wiring the Hardwire Interior Siren to the Panel

**HARDWIRE INTERIOR SPEAKER-  
DUAL SPEAKER 60-528**

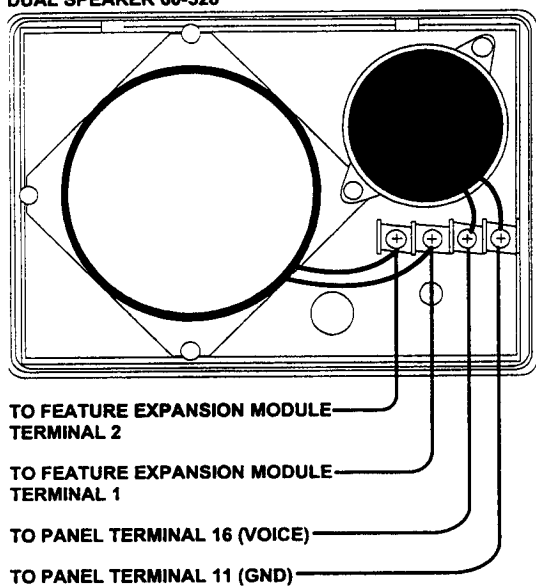


1050G17C.DS4

**Figure 14. Wiring the Hardwire Interior Speaker - Dual Speaker to the Panel**

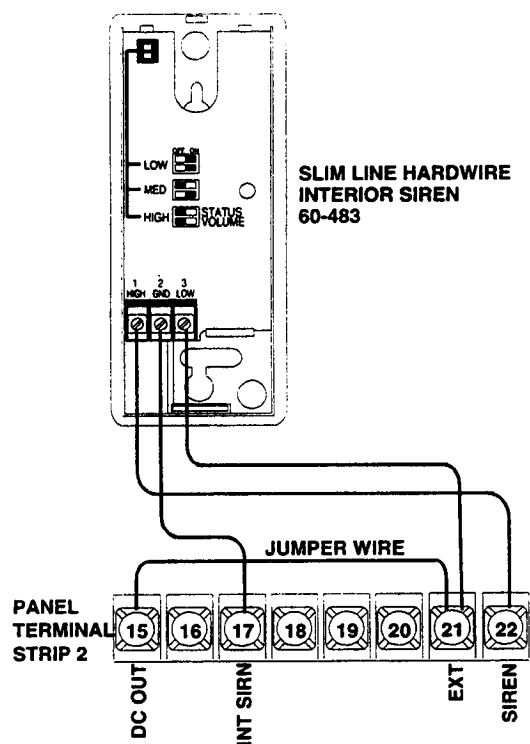

1050G18C.DS4


**Figure 15. Wiring the Slim Line Hardwire Interior Siren to the Panel**

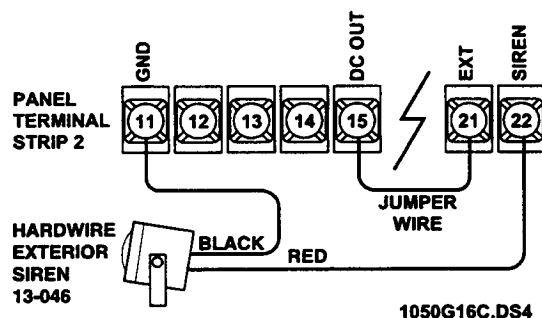


1050G16C.DS4

**Figure 16. Wiring the Hardwire Exterior Siren to the Panel**


### Wiring External Speakers to the Feature Expansion Module

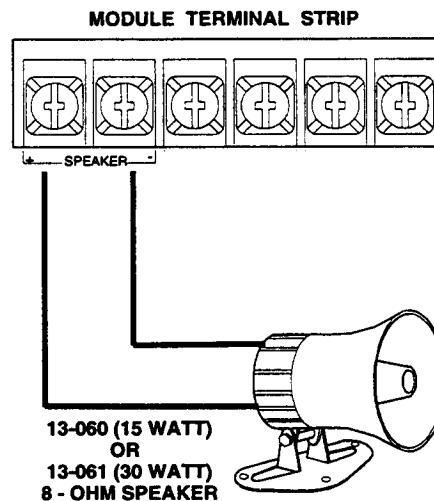

**Figure 17. Wiring One 8-Ohm Speaker to the Feature Expansion Module**

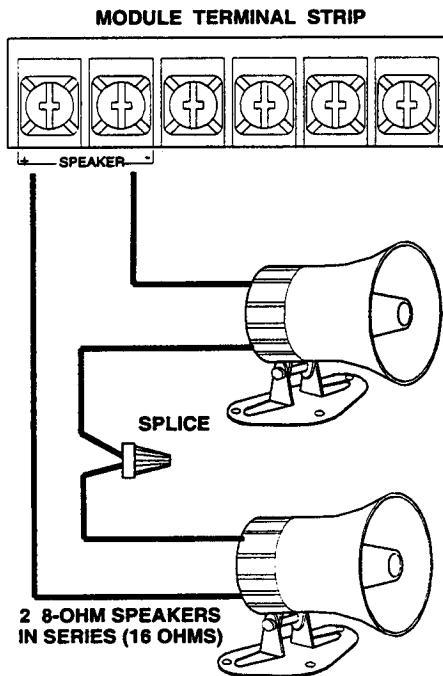


**Figure 18.** Wiring Two 8-Ohm Speakers in Series to the Feature Expansion Module

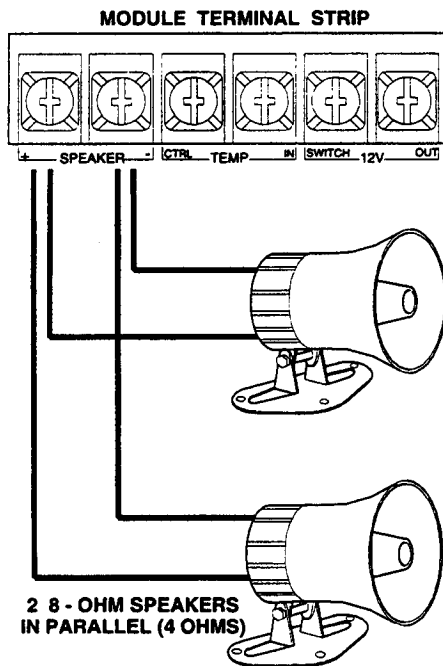

**Figure 19.** Wiring Two 8-Ohm Speakers in Parallel to the Feature Expansion Module


## Wiring the Alphanumeric Touchpad to the Panel

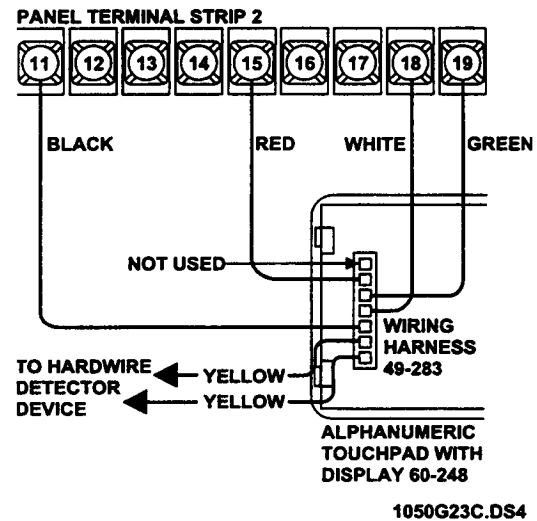

**Figure 20.** Wiring the Alphanumeric Touchpad to the Panel


## Wiring the Energy Saver Module (ESM) to the Panel

**CAUTION:** Do not power up the Panel with the ESM voltage jumper removed; otherwise, the ESM can be permanently damaged. Be sure the ESM voltage jumper is installed for 6-volt operation.

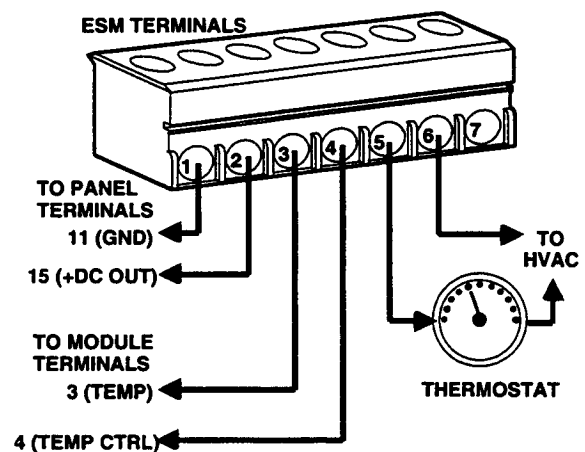


**Figure 21.** Wiring the ESM to the Feature Expansion Module

## Wiring the RJ-31X (CA-38A) to the Phone Line

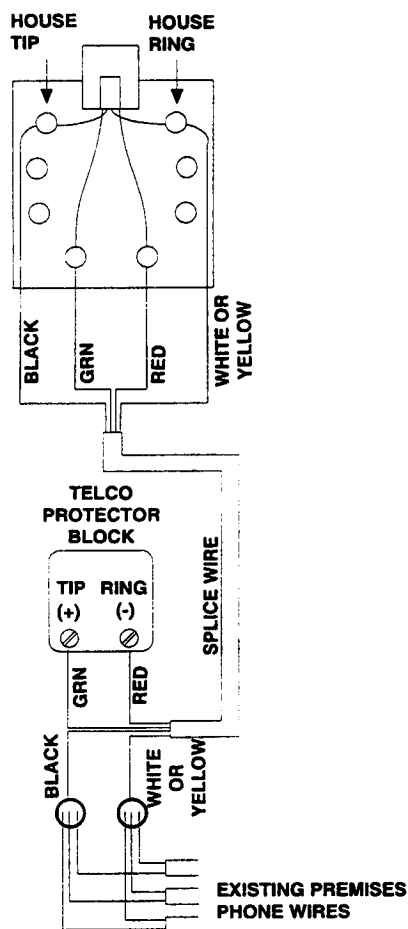


**Figure 22.** Installing the RJ-31X (CA-38A) Jack

## Connecting the DB-8 Phone Cord to the Panel

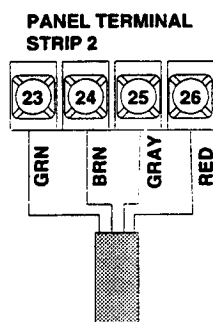


**Figure 23.** Connecting the DB-8 Phone Cord to the Panel

## Wiring the Standard AC Power Transformer to the Panel

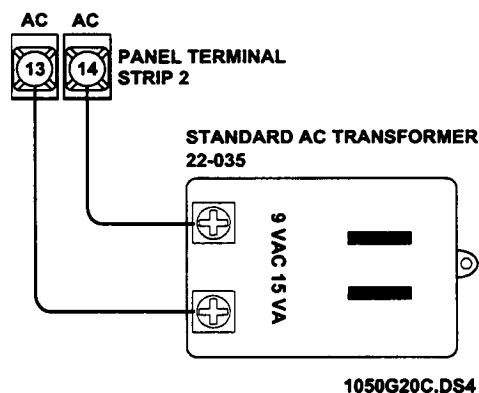

**Figure 24.** Wiring the Standard AC Transformer to the Panel

## Wiring the Optional Line Carrier Transformer to the Panel

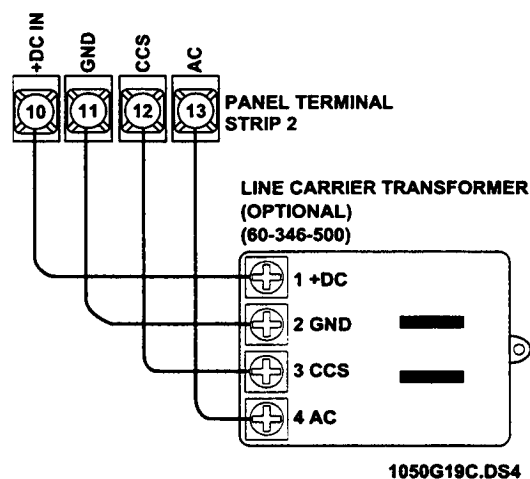

**Figure 25.** Wiring the Optional Line Carrier Transformer to the Panel

## Installing the Backup Battery

The Panel uses one lead-acid backup battery. To install backup battery:

- 1) Make sure the Panel power switch is off.
- 2) Verify all wiring at the Panel and devices for correct terminations.
- 3) Place the battery on the battery support brackets, with the terminals facing to the right and the battery printing facing you.



- 4) Secure the battery in place by gently tightening the screw on top of the chassis.
- 5) Connect the black wire from the Panel circuit board on the negative (-) battery terminal.
- 6) Connect the red wire from the Panel circuit board on the positive (+) battery terminal.

## Applying AC Power to the Panel

After connecting all hardware devices to the Panel and installing the backup battery, you are ready to power up the Panel.

### To power up the Panel:

- 1) Plug the transformer into an outlet that is not controlled by a switch.
- 2) Make sure the tamper bypass switch is set to BYPASS.
- 3) Turn on the Panel power switch and note the following:
  - The green power LED on the Panel turns on.
  - Interior sirens and piezos sound one beep and interior speakers announce the message, *Alarm system is off*.
  - Alphanumeric touchpads perform a self-test, automatically.
  - After completing self-tests, touchpads display 1 - OFF with the 1 flashing, indicating the Panel is at default settings (not programmed).
  - Interior sirens and piezos sound six beeps every minute, indicating the Panel is unprogrammed.

**Note:** If the Power LED is off or flashing and no beeps or voice messages sound, turn off the Panel power switch, disconnect the backup battery, and unplug the transformer. Refer to Appendix D "Troubleshooting."

- 4) Unplug the transformer, then remove the existing screw securing the AC outlet cover.

**WARNING:** Use extreme caution when securing the transformer to a metal outlet cover. You could receive a serious shock if a metal outlet cover drops down onto the prongs of the plug while you are securing the transformer and cover to the outlet box.

- 5) Hold the outlet cover in place and plug the transformer into the lower receptacle.

- 6) Use the screw supplied with the transformer to tighten the transformer to the outlet cover.

## Adjusting Status Sound Volume

The Panel allows you to set the volume level for status sounds and status messages from speakers connected to Panel terminal 16 (VOICE). Alarm sounds and messages are always at full volume.

### To adjust the status sound volume:

- 1) Locate the speaker volume adjustment potentiometer (pot) on the Panel.
- 2) Press COMMAND + STATUS.
- 3) While listening to the full status message, increase or decrease the volume level by turning the pot counterclockwise or clockwise, respectively.

Repeat steps 2 and 3 until the desired volume level is reached.

## Programming the Panel

Programming the panel includes the following procedures:

- Entering program mode
- Clearing memory
- Learning wireless sensors and hardwire zones
- Programming panel configuration options
- Programming upper sensor numbers
- Programming feature numbers
- Exiting program mode
- Programming from the CS-4000

**Note:** All on-site programming must be done using an Alphanumeric Touchpad.

## Entering Program Mode

The Panel must be in program mode to perform on-site programming.

### To enter program mode:

- Set the tamper bypass switch to NORMAL. Alphanumeric touchpads display PROGRAM MODE and interior speakers, sirens, and piezos sound six beeps every minute as a reminder that the Panel is in the program mode.

## Clearing Memory

You must clear the memory of all new Panels before programming.

### To clear Panel memory:

- Press and hold the memory clear button on the Panel for at least 3 seconds, then release the button.

After releasing the button, interior speakers announce, *Memory good-bye*.

## Learning Wireless Sensors and Hardwire Zones

After completing the group assignment for each sensor in Table A.3, use the following procedure to learn all wireless sensors and hardwire zones.

### To learn wireless sensors:

- 1) Using the Alphanumeric Touchpad, press STATUS or BYPASS repeatedly until the display reads PROGRAM SENSORS.
- 2) Press COMMAND and the display reads LEARN GROUP \_\_ \_\_.
- 3) Enter the appropriate group number (01 to 29, 32).
- 4) Press COMMAND and the display reads LEARN Sn01, with the 01 flashing.
- 5) Press COMMAND if sensor 01 is correct or enter another number (01 to 32 for CareTaker Plus; 01 to 40 for Security Pro 4000) and then press COMMAND.
- 6) The display reads TRIP Sn01. Trip the sensor as described in the sensor's installation instructions. The display reads TRIP Sn02 and interior speakers announce, *Sensor one okay. Sensor two.*

Continue learning sensors into the current group number by repeating steps 5 and 6.

To learn wireless sensors into other groups, press FIRE and follow steps 2 through 6.

- 7) Exit from programming sensors pressing FIRE.

## Deleting Wireless Sensors and Hardwire Zones

If you want to reassign a sensor to another group, you must delete that sensor first.

### To delete a sensor from a group:

- 1) Press STATUS or BYPASS until the display reads DELETE SENSORS.
- 2) Press COMMAND and the display reads DELETE Sn01.

**Note:** After pressing COMMAND in step 2, the display shows the lowest programmed sensor number.

- 3) Press COMMAND if sensor 01 is correct or enter another number (01 to 32 for CareTaker Plus; 01 to 40 for Security Pro 4000) and then press COMMAND.
- 4) Press COMMAND and the display reads DEL Sn01 - OK.  
Continue deleting sensors by repeating steps 3 and 4.
- 5) Exit from deleting sensors by pressing FIRE.

## Learning Wireless Touchpads

The system can learn up to four wireless touchpads.

### To add wireless touchpads:

- 1) Press STATUS or BYPASS until the display reads LEARN TOUCHPADS.
- 2) Press COMMAND and the display reads PRESS TP 01 BYP.
- 3) Press BYPASS on the wireless touchpad and the display reads PRESS TP 02 BYP.  
Repeat step 3 until all wireless touchpads are learned.
- 4) Exit from learning touchpads by pressing FIRE.

**CAUTION:** After exiting from learning touchpads, re-entering the learn touchpads menu and pressing COMMAND automatically deletes all learned touchpads. When adding wireless touchpads to the system, you must also re-learn existing touchpads.

## Programming Sensor Text

This section describes how to program sensor names. Use the word and character numbers you recorded in Appendix A to program sensor text.

- 1) Press BYPASS or STATUS until the display reads PROGRAM SENSOR TEXT.
- 2) Press COMMAND and the display reads Sn \_\_.
- 3) Enter a sensor number from 01 to 40 and the display reads Sn01.
- 4) Press COMMAND and the display reads A 00.
- 5) Enter the appropriate word number or character number.
- 6) Press COMMAND and the display reads B 00.
- 7) Repeat steps 5 and 6 until the whole sensor name is entered.
- 8) Press FIRE and the display shows the sensor number and name.

- 9) Press **BYPASS** to cycle to the next sensor number and repeat steps 1 through 9 until all sensor names are programmed.
- 10) Exit from programming text by pressing **FIRE**.

## Programming Panel Configuration Options

---

This section describes how to program the following:

- Phone Number
- Phone Format
- Siren Timeout
- Duress Code
- Account Number
- Entry Delay 1
- Entry Delay 2
- Exit Delay
- Activity Timeout
- House Code\*\*
- Freeze Temp
- Alphanumeric Touchpad Loop Input
- Unit Number
- Touchpad Quiet
- Chime Display

Use the Panel configuration settings you recorded on Table A.4 to program the system.

### Programming the Phone Number

- 1) Press **BYPASS** until the display reads **PHONE NUMBER**.
- 2) Press **COMMAND** and the display shows **\_\_\_\_\_**.
- 3) Enter the central station receiver phone number (up to 18 digits). If you need a pause between digits, press **POLICE** for each pause.
- 4) Press **COMMAND** and the display reads **OK**.

### Programming the Phone Format

- 1) Press **BYPASS** until the display reads **PHONE FORMAT**.
- 2) Press **COMMAND** and the display reads **SET ITI FMT**.
- 3) Press **BYPASS** or **STATUS** to cycle to the desired setting: **ITI**, **4/2 1400**, or **4/2 2300**.
- 4) Press **COMMAND** and the display reads **SET OK**.

### Programming the Siren Timeout

- 1) Press **BYPASS** until the display reads **SIREN TIMEOUT**.
- 2) Press **COMMAND** and the display reads **SET SIREN \_\_ MIN**.
- 3) Enter two-digit time (01 to 15).
- 4) Press **COMMAND** and the display reads **SET SIREN OK**.

### Programming the Duress Code

- 1) Press **BYPASS** until the display reads **DURESS CODE**.
- 2) Press **COMMAND** and the display reads **SET DURESS**.
- 3) Enter any two digits (00 to 99).
- 4) Press **COMMAND** and the display reads **SET DURESS OK**.

### Programming the Account Number

- 1) Press **BYPASS** until the display reads **ACCOUNT NUMBER**.
- 2) Press **COMMAND** and the display reads **SET NUMBER**.
- 3) Enter any five digits.
- 4) Press **COMMAND** and the display reads **SET NUMBER OK**.

### Programming Entry Delay 1

- 1) Press **BYPASS** until the display reads **ENTRY DELAY 1**.
- 2) Press **COMMAND** and the display reads **SET ENTRY \_\_ SEC**.
- 3) Enter two-digit time (08 to 88 seconds).
- 4) Press **COMMAND** and the display reads **SET ENTRY OK**.

### Programming Entry Delay 2

- 1) Press **BYPASS** until the display reads **ENTRY DELAY 2**.
- 2) Press **COMMAND** and the display reads **SET ENTRY \_\_ MIN**.
- 3) Enter one-digit time (1 to 8 minutes).
- 4) Press **COMMAND** and the display reads **SET ENTRY OK**.

## Programming the Exit Delay

- 1) Press **BYPASS** until the display reads **EXIT DELAY**.
- 2) Press **COMMAND** and the display reads **SET EXIT \_ \_ SEC**.
- 3) Enter two-digit time (08 to 88 seconds).
- 4) Press **COMMAND** and the display reads **SET EXIT OK**.

## Programming the Activity Timeout

- 1) Press **BYPASS** until the display reads **ACTIVITY TIME-OUT**.
- 2) Press **COMMAND** and the display reads **SET TIME-OUT \_ \_ H**.
- 3) Enter two-digit time (01 to 24 hours).
- 4) Press **COMMAND** and the display reads **SET TIME-OUT OK**.

## Programming the House Code

- 1) Press **BYPASS** until the display reads **HOUSE CODE**.
- 2) Press **COMMAND** and the display reads **SET CODE**.
- 3) Enter three-digit number (002 to 254).
- 4) Press **COMMAND** and the display reads **SET CODE OK**.

## Programming the Freeze Temp

- 1) Press **BYPASS** until the display reads **FREEZE TEMP**.
- 2) Press **COMMAND** and the display reads **SET TEMP**.
- 3) Enter two-digit temperature (40 to 90).
- 4) Press **COMMAND** and the display reads **SET TEMP OK**.

## Programming the Alphanumeric Touchpad Loop Input

- 1) Press **BYPASS** until the display reads **LOOP IS No** (normally closed, open on alarm). Press **FIRE** to leave loop normally closed, or proceed to step 2.
- 2) Press **COMMAND** and the display reads **LOOP IS No** (normally open, closed on alarm).

## Programming Touchpad Quiet

- 1) Press **BYPASS** until the display reads **TOUCHPAD QUIET Y (yes)**. Press **FIRE** to leave setting as is or proceed to step 2.
- 2) Press **COMMAND** and the display reads **TOUCHPAD QUIET N (no)**.

## Programming Chime Display

- 1) Press **BYPASS** until the display reads **CHIME DISPLAY N (no)**. Press **FIRE** to leave setting as is or proceed to step 2.
- 2) Press **COMMAND** and the display reads **CHIME DISPLAY Y (yes)**.

## Programming Upper Sensors

Upper sensors are features you turn on or off, depending on your customer's needs. We recommend upper sensors that default on, remain on.

Use the settings you recorded in Table A.5 when programming upper sensors.

**To program upper sensor numbers:**

- 1) Press **BYPASS** or **STATUS** until the display reads **UPPER SENSORS**.
- 2) Press **COMMAND** and the display reads **Sn77 OFF - TOUCHPAD TAMPER**.
- 3) Press **COMMAND** to toggle upper sensor 77 on, or press **BYPASS** to cycle to the next upper sensor.

Repeat steps 2 and 3 until all upper sensors are programmed to suit the installation.

## Requesting CS-4000 Programming

Although most information can be programmed from the Panel, some information must be programmed from the central station. Use the information you recorded in Table A.7 to inform the central station of your installation's programming requirements for the following:

- Optional Feature Numbers
- Secondary phone number
- Phone modes (PMODEs)
- Secondary access codes
- Automatic phone test frequency

**Note:** The CS-4000 requires version 5.1 software (80-105) or greater to support Security Pro 4000 Panels.

**To request CS-4000 Central Station programming:**

- 1) Contact your central station and ask the operator to program the Panel for the values you have recorded in Table A.7.
- 2) Give the operator the Panel's account number and the phone number of the premises, and ask them to call back immediately.
- 3) Hang up the phone.

- 4) When the phone rings, enter CODE + 8 at the Alphanumeric Touchpad. The display reads 8 - PHONE TEST.
- 5) When the central station releases the Panel, the display reads 1 - OFF. The operator may call you to discuss the programming.

## Installing Line Carrier Devices

This section describes how to install the following wireless devices:

- Wireless Interior Siren (WIS)
- X-10<sup>®</sup> Lamp Module

### Installing and Programming the WIS

Installing and programming the WIS includes:

- Setting the DIP switches and installing the battery
- Connecting an external siren to the WIS
- Programming the house code

**Note:** You must power the system with the optional Line Carrier Power Transformer (60-346-500) when using the WIS.

### Setting the DIP Switches and Installing the Battery

A 9-volt backup battery (not included) powers the WIS during an AC power failure. The battery type can be alkaline, lithium, or NiCd. When backup battery voltage gets low, the WIS sounds a single beep every 60 seconds until the battery is replaced.

To set DIP switches and install the backup batteries:

- 1) Remove the battery cover on the back of the WIS (see Figure 26).

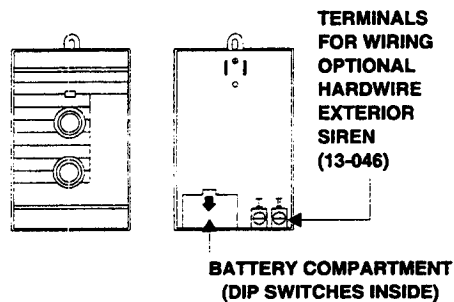


Figure 26. WIS Battery Cover Location

- 2) Set DIP switches as appropriate (see Figure 27).

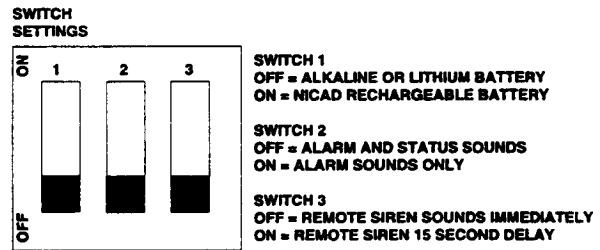


Figure 27. DIP Switch Settings

**WARNING:** Never turn ON switch 1 when installing an alkaline or lithium battery. Personal injury may result if these batteries are recharged, short circuited, punctured, or discharged at higher than acceptable rates.

- 3) Connect the battery to the battery clip and insert the battery into the compartment.
- 4) Replace the battery cover.

### Connecting an External Siren to the WIS

Figure 28 shows how to connect the Hardwire Exterior Siren (13-046) to the WIS terminals. These terminals activate for alarms only and provide 100 mA maximum current at 6 VDC.

**CAUTION:** Only the Hardwire Exterior Siren (13-046) can be connected to the WIS terminals. Other sirens may draw more current than the WIS can provide and can cause permanent damage to the WIS.

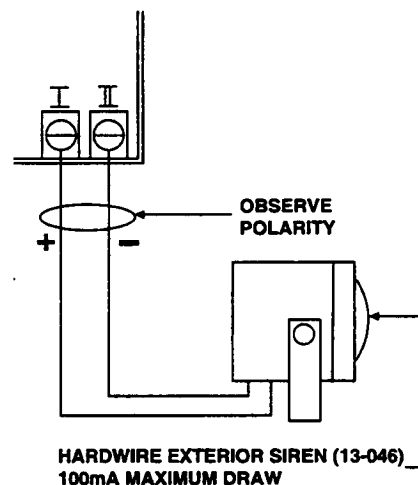


Figure 28. Connecting the Hardwire Exterior Siren to the WIS

## Programming the WIS House Code

- 1) Plug the WIS into an outlet that is not controlled by a switch.
- 2) Press STATUS on a wireless or alphanumeric touchpad.

The WIS sounds one beep and the WIS LED flashes, indicating the WIS received the signal from the Panel.

If the WIS does not respond, unplug it and disconnect the battery. Wait at least 30 seconds, then reconnect the battery and repeat steps 1 and 2. If the WIS still does not respond, proceed to Appendix D "Troubleshooting."

- 3) Unplug the WIS and remove the outlet cover screw.
- 4) Plug the WIS into the outlet and secure it with the outlet screw.

**WARNING:** Use extreme caution when securing the WIS to a metal outlet cover. You could receive a serious shock if the metal outlet cover drops down onto the prongs of the plug while you are securing the WIS and cover to the outlet box.

## Installing X-10 Lamp Modules

When installing X-10 Lamp Modules:

- You must power the Panel using the optional Line Carrier Power Transformer (60-346-500).
- Do not use extension cords to connect several lamps to one module.
- Use only lamps with incandescent lighting.
- Do not plug X-10 Lamp Modules into outlets controlled by a switch.

To install the X-10 Lamp Module:

- 1) Plug the lamp cord into the bottom of the module.
- 2) Plug the module into a lower AC outlet.
- 3) Refer to Table A.4 for the house code you programmed into the Panel, then find the letter that corresponds to that house code from Table B.2. Each letter setting represents 16 house codes.  
**Example:** House code 113 corresponds with B on the X-10 Lamp Module's house dial.
- 4) Set the house dial on the module to the appropriate letter.
- 5) Set the unit number dial to 1 (for Security Pro 4000 systems use any number, 1 to 9).

## Testing the System

This section describes how to perform the following test procedures:

- Testing sensors
- Testing phone communication
- Testing central station communication

You should test the system after installing a new system, after servicing the system, and after adding or removing devices from the system.

### Testing Sensors

We recommend that you do a sensor test after all programming is completed and whenever a sensor-related problem occurs.

**Note:** While the sensor test is a valuable installation and service tool, it only tests sensor operation for the current conditions. You should perform a sensor test after any change in environment, equipment, or programming.

- 1) Set the tamper/bypass switch to normal and attach the Panel cover.
- 2) Place all sensors in their secured (non-alarm) state.
- 3) Enter CODE + 9 at an alphanumeric touchpad.

The Panel speaker announces *Sensor test is on*, interior sirens and speakers sound one long beep, and the display reads 9 - SENSOR TEST.

- 4) Trip each sensor.

Interior sirens and speakers sound transmission beeps as each sensor is tripped. Each beep represents one data round.

- 5) Count the number of transmission beeps and refer to Table 1 for minimum requirements.

After the beeps, the Panel speaker announces, *Sensor [sensor #] OK*, confirming the sensor number tested. If the system does not respond, or if the sensor does not meet the minimum transmission beep requirements, refer to "If a Sensor Fails the Sensor Test."

- 6) Press the STATUS button when you think all sensors are tested.  
The system announces untested sensor numbers.
- 7) Test all untested sensors.
- 8) Enter CODE + 9 while the system is still in sensor test if you need more time to complete the sensor test.

The system stays in sensor test for an additional 15 minutes, preserving the list of untested sensors.

After 15 minutes, the Panel disarms to level 1.

- 9) Enter CODE + 1 to exit sensor test.

The system disarms to level 1, and the Panel speaker announces, *Alarm system is off.*

**Table 1.** Minimum Transmission Beeps

| Type of Sensor                       | Number of Beeps |
|--------------------------------------|-----------------|
| Intrusion Sensors                    | 7 - 8 beeps     |
| Wireless Environmental/Panic Buttons | 7 - 8 beeps     |
| Hardwire Loops                       | 1               |
| Panel Emergency Buttons              | 1               |

### If a Sensor Fails the Sensor Test

If sirens do not beep when a sensor is tripped, use an RF Sniffer (60-401) to verify that the sensor is transmitting. Constant beeps from the RF Sniffer indicate a runaway sensor. Remove the sensor's battery and replace the sensor.

Locate sensors within 100 feet of the Panel whenever possible. While a transmitter may have a range of 500 feet or more, the environment at the installation site can have a significant effect on transmitter range. Sometimes a change in sensor location can help overcome adverse premises conditions.

To improve sensor communication, you can:

- Reposition the sensor.
- Relocate the sensor.
- If necessary, replace the sensor.

To reposition a sensor:

- 1) Rotate the sensor and test for improved sensor communication at 90° and 180° from the original position.
- 2) If poor communication persists, relocate the sensor as described below.

To relocate a sensor:

- 1) Test the sensor a few inches from the original position.
- 2) Increase the distance from the original position and retest until an acceptable location is found.
- 3) Mount the sensor in the new location.

or-- If no location is acceptable, replace the sensor as described in the next procedure "To replace a sensor."

To replace a sensor:

- 1) Test a working sensor at the same location.

- 2) If the transmission beeps remain below the minimum level, avoid mounting a sensor at that location.
- or-- If the replacement sensor works, contact ITI for repair or replacement of the problem sensor.

### Testing Phone Communication

Perform a phone test to check the phone communication between the Panel and the central station.

To perform a phone test:

- Enter CODE + 8 at an alphanumeric touchpad.  
The display reads 8 - PHONE TEST, the Panel speaker and all interior sirens sound one long beep, and the Panel speaker announces, *Phone test is on.*

When the Panel completes the test, the system returns to level 1, and the Panel speaker announces, *Alarm system is OFF.*

If the Panel announces, *Phone test failure*, proceed to the next procedure "If the phone test fails."

If the phone test fails:

- 1) Check to be sure the Panel is plugged into the RJ-31X (CA-38A) jack.
- 2) Enter ACCESS CODE + 8 again.
- 3) If the phone test fails again, check the phone number programmed into the Panel.
- 4) If the phone test fails again, check the phone connection wiring.

### Testing Central Station Communication

After performing sensor and phone tests, check that the system is reporting alarms successfully to the central station. Also verify that X-10 Lamp Modules are operating correctly.

To test communication with central station:

- 1) Call the central station and tell the operator that you will be testing the system.
- 2) Arm the system.
- 3) Trip at least one sensor of each type—fire, intrusion, etc.—to verify that the appropriate alarms are working correctly.
- 4) If X-10 Lamp Modules are installed, check to be sure they operate correctly.

Lights should turn on steady during fire and auxiliary/medical alarms and flash during an intrusion alarm.

- 5) When you finish testing the system, call the central station to verify that the alarms were received.

## Appendix A: System Planning Worksheets

Fill in customer information about this installation below.

|                          |                 |
|--------------------------|-----------------|
| Customer _____           |                 |
| Address _____            |                 |
| City _____               | State/Zip _____ |
| County _____ Phone _____ |                 |

**Table A.1 Wireless Sensors**

| Part No.     | Description                      | Qty. |
|--------------|----------------------------------|------|
| 60-362       | Door/Window Sensor               |      |
| 60-409       | Recessed Door Sensor             |      |
| 60-499       | Slim Line Door/Window Sensor     |      |
| 60-107       | Shock Sensor                     |      |
| 60-356       | DS923 PIR Motion Sensor          |      |
| 60-459       | Sound Sensor                     |      |
| 60-462       | Glass Guard Sensor               |      |
| 60-352       | System Smoke Sensor              |      |
| 60-506       | System Smoke Sensor              |      |
| 60-460       | Rate-of-Rise Heat Sensor         |      |
| 60-589-319.5 | Manual Fire Pull Sensor          |      |
| 60-504       | Freeze Sensor                    |      |
| 60-452       | Pendant Emergency Sensor         |      |
| 60-458       | Single Button Emergency Sensor   |      |
| 60-457       | Dual Button Emergency Sensor     |      |
| 60-578-10-95 | Water-Resistant Emergency Sensor |      |
| 60-348-10-95 | HandHeld Wireless Touchpad       |      |
| 60-453-10-95 | Wall-Mount Wireless Touchpad     |      |

**Table A.2 Hardwire Devices**

| Part No.                              | Description                                    | Qty. | mA     | Sub.    |
|---------------------------------------|------------------------------------------------|------|--------|---------|
| <b>Hardwire Sensors</b>               |                                                |      |        |         |
| 13-068                                | Magnetic Contact<br>3/8" press fit             |      | N/A    |         |
| 13-070                                | Magnetic Contact – sur-<br>face mount          |      | N/A    |         |
| 13-077                                | ESL 445AT Smoke Detec-<br>tor                  |      | 100 mA |         |
| 79-004                                | Fire Pull Station                              |      | N/A    |         |
| 13-028                                | PIR Motion Detector                            |      | 10 mA  |         |
| <b>Hardwire Sirens</b>                |                                                |      |        |         |
| 60-483                                | Slim Line Hardwire Inte-<br>rior Siren & Piezo |      | 30 mA  |         |
| 60-278                                | Hardwire Interior Siren<br>and Piezo           |      | 75 mA  |         |
| 30-006                                | Piezo Status Beeper                            |      | 5 mA   |         |
| 13-046                                | Hardwire Exterior Siren                        |      | 100 mA |         |
| <b>Miscellaneous Components</b>       |                                                |      |        |         |
| 60-248                                | Alphanumeric Touchpad                          |      | 100 mA |         |
| 60-436                                | Feature Expansion Mod-<br>ule                  |      | 300 mA |         |
| 60-470                                | Interrogator Module                            |      | 290 mA |         |
| Total Power Consumption cannot exceed |                                                |      |        | 500 mA† |

**Table A.3 Sensor Groups and Locations**

| No. | Group | Type and Location |
|-----|-------|-------------------|
| 01  |       |                   |
| 02  |       |                   |
| 03  |       |                   |
| 04  |       |                   |
| 05  |       |                   |
| 06  |       |                   |
| 07  |       |                   |
| 08  |       |                   |
| 09  |       |                   |
| 10  |       |                   |
| 11  |       |                   |
| 12  |       |                   |
| 13  |       |                   |
| 14  |       |                   |
| 15  |       |                   |
| 16  |       |                   |
| 17  |       |                   |
| 18  |       |                   |
| 19  |       |                   |
| 20  |       |                   |
| 21  |       |                   |



**Table A.3 Sensor Groups and Locations**

| No. | Group | Type and Location |
|-----|-------|-------------------|
| 22  |       |                   |
| 23  |       |                   |
| 24  |       |                   |
| 25  |       |                   |
| 26  |       |                   |
| 27  |       |                   |
| 28  |       |                   |
| 29  |       |                   |
| 30  |       |                   |
| 31  |       |                   |
| 32  |       |                   |
| 33  |       |                   |
| 34  |       |                   |
| 35  |       |                   |
| 36  |       |                   |
| 37  |       |                   |
| 38  |       |                   |
| 39  |       |                   |
| 40  |       |                   |

**Table A.4 Panel Configuration Settings**

| Feature              | Choices                             | Setting |
|----------------------|-------------------------------------|---------|
| Primary Phone Number | 2 to 18 digits, including pauses    |         |
| Phone Format         | ITI<br>4/2, 1400 Hz<br>4/2, 2300 Hz |         |
| Siren Timeout        | 01-15 minutes                       |         |
| Duress Code          | 00-99                               |         |
| Account Number       | 00000-99999                         |         |
| Entry Delay 1        | 08-88 seconds                       |         |
| Entry Delay 2        | 1-8 minutes                         |         |
| Exit Delay           | 08-88 seconds                       |         |
| Activity Timeout     | 1-24 hours                          |         |
| House Code           | 001-254                             |         |
| Freeze Temp          | 40-90                               |         |
| Loop Is              | N/C or N/O                          |         |
| Unit Number          | 1-7                                 |         |
| Touchpad Quiet       | Y (yes) or N (no)                   |         |
| Chime Display        | Y (yes) or N (no)                   |         |

**Table A.5 Upper Sensor Numbers**

| No. | Description                            | Default | Setting |
|-----|----------------------------------------|---------|---------|
| 77  | Touchpad Tamper                        | OFF     |         |
| 78  | Freeze Sensor                          | OFF     |         |
| 79  | No Activity                            | OFF     |         |
| 80  | Touchpad Fire Emergency                | ON      |         |
| 81  | Touchpad Police Emergency              | ON      |         |
| 82  | Touchpad Auxiliary Emergency           | ON      |         |
| 83  | Manual Phone Test                      | ON      |         |
| 84  | Opening Report                         | OFF     |         |
| 85  | Closing Report                         | OFF     |         |
| 86  | Duress Alarm                           | ON      |         |
| 87  | Force Armed                            | OFF     |         |
| 87  | Auto Force Armed, always ON            | ON      | ON      |
| 88  | Energy Saver Enable                    | OFF     |         |
| 89  | RF Touchpad Supervisory or Low Battery | OFF     |         |
| 90  | AC Power Failure                       | OFF     |         |
| 91  | Low Panel Battery                      | ON      |         |
| 92  | Panel Tamper                           | ON      |         |
| 93  | Automatic Phone Test                   | OFF     |         |
| 94  | Receiver Failure                       | ON      |         |
| 95  | Panel Back In Service                  | ON      |         |
| 96  | Phone Failure                          | ON      |         |

**Table A.6 Feature Numbers**

| No. | Description                                  | Default | Setting |
|-----|----------------------------------------------|---------|---------|
| F00 | Remote Phone Access                          | ON      |         |
| F01 | RING twice - hang-up - RING - answer         | ON      |         |
| F02 | Exterior Siren Delay                         | OFF     |         |
| F03 | Toll Saver                                   | ON      |         |
| F04 | Low Battery Reports                          | ON      |         |
| F05 | Sensor Supervisory Reports                   | ON      |         |
| F06 | Dialer Abort                                 | ON      |         |
| F07 | Access Key Type - * (off) or # (on)          | OFF     |         |
| F11 | Interior Siren Sounds                        | OFF     |         |
| F12 | Alarm Restoral Reports                       | OFF     |         |
| F13 | Low Battery Restoral Reports                 | OFF     |         |
| F14 | Hourly Phone Test                            | OFF     |         |
| F15 | Alarm Verification                           | OFF     |         |
| F16 | Trouble Beeps - Off for U.L. systems.        | OFF     |         |
| F17 | 24-Hour Sensor Tamper Alarm                  | OFF     |         |
| F21 | Immediate Trouble Beeps -On for ULC systems. | OFF     |         |
| F25 | Keychain Touchpad Arming                     | OFF     |         |
| F32 | Energy Saver/No Delay                        | OFF     |         |

**Table A.7** Central Station Programming

| Feature                          | Choices                                                                                                                                                                                                                                                                                                                             | Setting                                                                  |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| Automatic Phone Test Frequency † | 1-255 days                                                                                                                                                                                                                                                                                                                          |                                                                          |
| BATTLIFE                         | 002- 255                                                                                                                                                                                                                                                                                                                            |                                                                          |
| Extended Delay                   | 1-8 minutes                                                                                                                                                                                                                                                                                                                         |                                                                          |
| Secondary Phone Number           | Up to 18 digits, including pauses                                                                                                                                                                                                                                                                                                   |                                                                          |
| PMODE                            | <p>0 (ITI and 4/2) - all reports to PHO1.</p> <p>1 (ITI and 4/2) - Alternates between PHO 1 and PHO2 until successful or all attempts fail.</p> <p>3 (ITI only) - all alarms, opening, and closing reports to PHO1; all reports to PHO2.</p> <p>5 (ITI and 4/2) - All reports to PHO1 using 4/2; all reports to PHO2 using ITI.</p> |                                                                          |
| Secondary Access Codes           | Up to 4 codes                                                                                                                                                                                                                                                                                                                       | User #2 _ _ _ _<br>User #3 _ _ _ _<br>User #4 _ _ _ _<br>User #5 _ _ _ _ |
| STIME                            | hh = 00-23<br>mm = 00-59                                                                                                                                                                                                                                                                                                            |                                                                          |
| SUPSYNC                          | hh = 03-24                                                                                                                                                                                                                                                                                                                          |                                                                          |

† This feature only functions if upper sensor 93 is ON.

## Appendix B: Programming Tables

This appendix contains tables for selecting sensor group numbers and X-10 Lamp Module house codes. Table notes for Table B.1 appear at the bottom of the table, on the next page.

**Table B.1** Sensor Group Characteristics

| No. | Name                 | Application                                                                          | Alarm     | Delay          | Restoral | Supervisory | CS Report | Chime | Arming Levels |
|-----|----------------------|--------------------------------------------------------------------------------------|-----------|----------------|----------|-------------|-----------|-------|---------------|
| 00  | Fixed Panic          | 24-hr audible fixed emergency buttons.                                               | Police    | Instant        |          | √           | √         |       | 1, 2, 3       |
| 01  | Portable Panic       | 24-hr audible portable emergency buttons.                                            | Police    | Instant        |          |             | √         |       | 1, 2, 3       |
| 02  | Fixed Panic          | 24-hr silent fixed emergency buttons.                                                | Silent    | Instant        |          | √           | √         |       | 1, 2, 3       |
| 03  | Portable Panic       | 24-hr silent portable emergency buttons.                                             | Silent    | Instant        |          |             | √         |       | 1, 2, 3       |
| 04  | Fixed Auxiliary      | 24-hr auxiliary sensor, such as Pendant Panic or holdup button.                      | Auxiliary | Instant        |          | √           | √         |       | 1, 2, 3       |
| 05  | Fixed Auxiliary      | 24-hr auxiliary emergency button. Siren cutoff confirms CS report.                   | Auxiliary | Instant        |          | √           | √         |       | 1, 2, 3       |
| 06  | Portable Auxiliary   | 24-hr portable auxiliary alert button.                                               | Auxiliary | Instant        |          |             | √         |       | 1, 2, 3       |
| 07  | Portable Auxiliary   | 24-hr portable auxiliary button. Siren cutoff confirms CS report.                    | Auxiliary | Instant        |          |             | √         |       | 1, 2, 3       |
| 08  | Special Intrusion    | Special belongings, such as gun cabinets and wall safes.                             | Police    | Instant        | √        | √           | √         |       | 1, 2, 3       |
| 09  | Special Intrusion    | Special belongings, such as gun cabinets and wall safes.                             | Police    | Standard       | √        | √           | √         |       | 1, 2, 3       |
| 10  | Entry/Exit Delay     | Garage doors and entrances that require a standard delay time.                       | Police    | Standard       | √        | √           | √         | √     | 2, 3          |
| 11  | Entry/Exit Delay     | Garage doors and entrances that require an extended delay time.                      | Police    | Extended       | √        | √           | √         | √     | 2, 3          |
| 12  | Entry/Exit Delay x 2 | Driveway gates and other entry/exit points that require a twice-extended delay time. | Police    | Twice Extended | √        | √           | √         | √     | 2, 3          |
| 13  | Instant Perimeter    | Exterior doors and windows.                                                          | Police    | Instant        | √        | √           | √         | √     | 2, 3          |
| 14  | Instant Interior     | Interior doors.                                                                      | Police    | Follower       | √        | √           | √         |       | 2, 3          |
| 15  | Instant Interior     | Interior PIR motion sensors.                                                         | Police    | Follower       |          | √           | √         |       | 2, 3          |
| 16  | Instant Interior     | Interior doors.                                                                      | Police    | Follower       | √        | √           | √         |       | 3             |

**Table B.1** Sensor Group Characteristics (Continued)

| No. | Name                                                          | Application                                                                                    | Alarm         | Delay    | Restoral | Supervisory | CS Report | Chime | Arming Levels |
|-----|---------------------------------------------------------------|------------------------------------------------------------------------------------------------|---------------|----------|----------|-------------|-----------|-------|---------------|
| 17  | Instant Interior                                              | PIR motion sensors.                                                                            | Police        | Follower |          | √           | √         |       | 3             |
| 18  | N/A. If this group is entered, group 17 is actually assigned. |                                                                                                |               |          |          |             |           |       |               |
| 19  | Delayed Interior                                              | Interior doors that initiate a delay before going into alarm.                                  | Police        | Standard | √        | √           | √         |       | 3             |
| 20  | Delayed Interior                                              | PIR motion sensors that initiate a delay before going into alarm.                              | Police        | Standard |          | √           | √         |       | 3             |
| 21  | Local Instant Interior                                        | 24-hr local alarm zone protecting anything that opens and closes.                              | Police        | Instant  | √        | √           |           |       | 1, 2, 3       |
| 22  | Local Instant Interior                                        | Same as group 21, plus activation initiates a delay before going into alarm.                   | Police        | Standard | √        | √           |           |       | 1, 2, 3       |
| 23  | Local Instant Auxiliary                                       | 24-hr local alarm zone protecting anything that opens and closes.                              | Auxiliary     | Instant  | √        | √           |           |       | 1, 2, 3       |
| 24  | Local Instant Auxiliary                                       | 24-hr local alarm zone protecting anything that opens and closes. Sirens shut off at restoral. | Auxiliary     | Instant  | √        | √           |           |       | 1, 2, 3       |
| 25  | Local Special Chime                                           | Notify the user when a door is opened. Sounds emit from a local annunciator.                   | Special Chime | Instant  | √        | √           |           |       | 1, 2, 3       |
| 26  | Fire                                                          | 24-hr fire, rate-of-rise heat, and smoke sensors. Ψ                                            | Fire          | Instant  | √        | √           | √         |       | 1, 2, 3       |
| 27  | Custom                                                        | Door/Window sensor. Δ                                                                          | Silent        | Instant  | √        | √           |           |       | 1, 2, 3       |
| 28  | Custom                                                        | PIR motion sensor, sound sensor, or pressure mat. Δ                                            | Silent        | Instant  |          | √           |           |       | 1, 2, 3       |
| 29  | Auxiliary                                                     | Freeze sensor.                                                                                 | Auxiliary     | Instant  | √        | √           | √         |       | 1, 2, 3       |
| 32  | Custom                                                        | On-site HOM device controlled by keychain touchpads.Δ                                          |               |          |          |             |           |       | 1, 2, 3       |

**Note:** Check marks (√) represent characteristics which are present in a group.

Ψ This group is required for UL listed residential fire alarm applications.

Δ This group has not been investigated by UL.

**Table B.2** X-10 Lamp Module House Code Settings

| X-10 Codes | Corresponding Panel House Codes |    |    |    |    |    |     |     |     |     |     |     |     |     |       |
|------------|---------------------------------|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-------|
| A          | 16                              | 32 | 48 | 64 | 80 | 96 | 112 | 128 | 144 | 160 | 176 | 192 | 208 | 224 | 240   |
| B          | 1                               | 17 | 33 | 49 | 65 | 81 | 97  | 113 | 129 | 145 | 161 | 177 | 193 | 209 | 225   |
| C          | 2                               | 18 | 34 | 50 | 66 | 82 | 98  | 114 | 130 | 146 | 162 | 178 | 194 | 210 | 226   |
| D          | 3                               | 19 | 35 | 51 | 67 | 83 | 99  | 115 | 131 | 147 | 163 | 179 | 195 | 211 | 227   |
| E          | 4                               | 20 | 36 | 52 | 68 | 84 | 100 | 116 | 132 | 148 | 164 | 180 | 196 | 212 | 228   |
| F          | 5                               | 21 | 37 | 53 | 69 | 85 | 101 | 117 | 133 | 149 | 165 | 181 | 197 | 213 | 229   |
| G          | 6                               | 22 | 38 | 54 | 70 | 86 | 102 | 118 | 134 | 150 | 166 | 182 | 198 | 214 | 230   |
| H          | 7                               | 23 | 39 | 55 | 71 | 87 | 103 | 119 | 135 | 151 | 167 | 183 | 199 | 215 | 231   |
| I          | 8                               | 24 | 40 | 56 | 72 | 88 | 104 | 120 | 136 | 152 | 168 | 184 | 200 | 216 | 232   |
| J          | 9                               | 25 | 41 | 57 | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233   |
| K          | 10                              | 26 | 42 | 58 | 74 | 90 | 106 | 122 | 138 | 154 | 170 | 186 | 202 | 218 | 234   |
| L          | 11                              | 27 | 43 | 59 | 75 | 91 | 107 | 123 | 139 | 155 | 171 | 187 | 203 | 219 | 235   |
| M          | 12                              | 28 | 44 | 60 | 76 | 92 | 108 | 124 | 140 | 156 | 172 | 188 | 204 | 220 | 236   |
| N          | 13                              | 29 | 45 | 61 | 77 | 93 | 109 | 125 | 141 | 157 | 173 | 189 | 205 | 221 | 237   |
| O          | 14                              | 30 | 46 | 62 | 78 | 94 | 110 | 126 | 142 | 158 | 174 | 190 | 206 | 222 | 238   |
| P          | 15                              | 31 | 47 | 63 | 79 | 95 | 111 | 127 | 143 | 159 | 175 | 191 | 207 | 223 | 239   |
|            |                                 |    |    |    |    |    |     |     |     |     |     |     |     |     | 255 † |

† This house code is reserved for demo Panels only.

## Appendix C: Command Summary

This appendix contains a summary of all system commands and what each command does.

### User Command Summary

Table C.1 provides a description of all commands for operating the system. For commands that require an access code, use either the primary access code or the temporary access code unless otherwise indicated. While these are called *user commands*, you may need to use some or all of these commands during the installation and programming process.

**Table C.1** Summary of User Commands

| Action                                  | Command                                    | Short Command $\Delta$     | Voice Message Confirmation                                               |
|-----------------------------------------|--------------------------------------------|----------------------------|--------------------------------------------------------------------------|
| Disarm to level 1.                      | CODE + 1                                   | COMMAND + 1 $\ddagger$     | Alarm system is OFF.                                                     |
| Arm to level 2.                         | CODE + 2                                   | COMMAND + 2 $\ddagger$     | Alarm system is ON, level 2.                                             |
| Arm to level 2, No Delay.               | CODE + 2 + 4                               | COMMAND + 2 + 4 $\ddagger$ | Alarm system is ON, level 2, no delay.                                   |
| Arm to level 2, Indirect Bypass.        | CODE + 2 + BYPASS                          |                            | Alarm system is ON, level 2. Sensor [sensor #] bypassed.                 |
| Arm to level 3.                         | CODE + 3                                   | COMMAND + 3 $\ddagger$     | Alarm system is ON, level 3.                                             |
| Arm to level 3, No Delay.               | CODE + 3 + 4                               | COMMAND + 3 + 4 $\ddagger$ | Alarm system is ON, level 3, No delay.                                   |
| Arm to level 3, Indirect Bypass.        | CODE + 3 + BYPASS                          |                            | Alarm system is ON, level 3. Sensor [sensor #] bypassed.                 |
| Direct Bypass. $\ddagger$               | CODE + BYPASS + [sensor #]                 |                            | Sensor [sensor #] bypassed.                                              |
| Chime On/Off.                           | CODE + 7                                   | COMMAND + 7                | ON, OFF.                                                                 |
| Phone test On.                          | CODE + 8                                   | COMMAND + 8 $\ddagger$     | Phone test is ON.                                                        |
| Sensor test On.                         | CODE + 9                                   | COMMAND + 9 $\ddagger$     | Sensor test is ON.                                                       |
| Lights On/Off.                          | CODE + 0 or BYPASS + n (n= 1-9)            | COMMAND + 0                | ON, OFF                                                                  |
| Define new primary access code.         | CODE + STATUS + 8 + new CODE]              |                            | [new primary access code], okay.                                         |
| Define new temporary access code.       | primary CODE + STATUS + 7 + temp CODE]     |                            | [new temporary access code], okay.                                       |
| Review alarm memory.                    | COMMAND + STATUS                           |                            | Alarm Memory is okay, or<br>Sensor [sensor #] [alarm type] alarm memory. |
| Review panel status.                    | STATUS, CODE + STATUS, or COMMAND + STATUS |                            | Hello! Alarm system is... (see Owner's Manual for possible messages).    |
| Adjust alphanumeric display brightness. | COMMAND (press and hold)                   |                            | Hello! ...Hello...hello!..hello...                                       |

$\ddagger$  This short command only works when arming to a higher level.

$\ddagger$  This command only works if the sensor you are bypassing is active in the current security level.

$\Delta$  The COMMAND button will not work for arming and disarming if upper sensor numbers 84 and 85 are set to ON.

## Appendix D: Troubleshooting

This appendix contains a summary of system troubleshooting techniques.

**Table D.1** Troubleshooting System Problems

| Device                    | Problem                                                                         | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------|---------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Access Code               |                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           | Customer cannot remember their access code.                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           |                                                                                 | <ol style="list-style-type: none"> <li>1. Check your records to see if you have the customer's access code on file.</li> <li>2. If Panel is monitored, trap the Panel and reset the access code from the CS-4000.</li> <li>3. If Panel is not monitored, clear memory and reprogram the Panel locally.</li> </ol>                                                                                                                                                                                                                                                           |
| Arming/Disarming          |                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           | System won't arm.                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           |                                                                                 | <ol style="list-style-type: none"> <li>1. If arming to level 2, be sure all monitored perimeter doors and windows are closed.</li> <li>2. If arming to level 3, be sure all perimeter and interior sensors are closed.</li> <li>3. Press the STATUS button for a voice message of the problem.</li> </ol>                                                                                                                                                                                                                                                                   |
| Batteries                 |                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           | Panel announces, <i>System Battery Failure</i> .                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           |                                                                                 | Check Panel battery fuse and replace if needed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           | Panel announces, <i>Sensor [sensor #] low battery</i> .                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           |                                                                                 | Replace the sensor batteries.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Bypass                    |                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           | Panel announces, <i>Invalid, Try again</i> when you attempt to bypass a sensor. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           |                                                                                 | You are trying to bypass a 24-hour sensor that cannot be bypassed or a sensor that is not active in the current security level. You don't need to bypass this sensor.                                                                                                                                                                                                                                                                                                                                                                                                       |
|                           | System cancels sensor bypass when you try to arm to level 2 or 3.               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           |                                                                                 | Arm to the desired level before you try bypassing a sensor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Central Station Reporting |                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           | Central Station is not receiving reports.                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                           |                                                                                 | <ol style="list-style-type: none"> <li>1. Check that the DB-8 Cord is plugged into the RJ-31X Jack.</li> <li>2. Check for proper wiring of the RJ-31X Jack.</li> <li>3. Verify the phone number of the receiver line with the central station operator. Reprogram the phone number and retest, if necessary.</li> <li>4. Replace the RJ-31X Jack.</li> <li>5. Check that the DB-8 Cord is properly wired to the Panel terminals.</li> <li>6. Replace the DB-8 Cord.</li> <li>7. Check that the premises phone line is working.</li> <li>8. Perform a phone test.</li> </ol> |

**Table D.1** Troubleshooting System Problems (Continued)

| Device         | Problem                                                                 | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------|-------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| False Alarm    | Alarm is being sent.                                                    | Enter CODE + 1 to cancel the alarm. This command bypasses the alarm if done within 8 to 20 seconds.                                                                                                                                                                                                                                                                                                                                       |
|                |                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Hardwire Zones | Panel does not respond to hardwire zone activation.                     | Check that zones are programmed into Panel memory, and add if necessary.                                                                                                                                                                                                                                                                                                                                                                  |
|                | Panel announces, <i>Sensor nn trouble</i> .                             | 1. Check that the 4.7K ohm resistor is installed correctly in the circuit.<br>2. Check a normally open (N/O) circuit for a break in the wires.<br>3. Check a normally closed (N/C) circuit for a short in the wires.                                                                                                                                                                                                                      |
|                |                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                |                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Hardwire Siren | Exterior sirens are not producing alarm sounds.                         | Check for correct wiring at the siren and Panel terminals.                                                                                                                                                                                                                                                                                                                                                                                |
|                | Exterior sirens produce status sounds.                                  | Check for correct wiring at both the siren and Panel terminals.                                                                                                                                                                                                                                                                                                                                                                           |
|                | Interior sirens are not producing sounds.                               | Check for correct wiring at both the siren and Panel terminals.                                                                                                                                                                                                                                                                                                                                                                           |
|                | Interior sirens produce low-volume alarm and high-volume status sounds. | Check for correct wiring at both the siren and Panel terminals.                                                                                                                                                                                                                                                                                                                                                                           |
|                |                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                |                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Lights         | Light using X-10 Lamp Module does not work.                             | 1. Check light bulbs.<br>2. Check that the light switch on the lamp is turned ON.<br>3. Check that the lamp is plugged into an X-10 Lamp Module.<br>4. Check that the lamp is plugged into a non-switched outlet.                                                                                                                                                                                                                         |
|                |                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Panel          | Panel does not power up.                                                | 1. Check the circuit breaker to be sure the circuit is live.<br>2. Check that the backup battery is installed correctly and the transformer is plugged in.<br>3. Check for proper wiring at the Panel and the transformer.<br>4. Measure the incoming voltage at the Panel terminals. A standard transformer reads 9 VAC at terminals 13 and 14. A 4-wire line carrier transformer reads between 9-12 VDC at terminals 10 (+) and 11 (-). |
|                |                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                           |



**Table D.1** Troubleshooting System Problems (Continued)

| Device            | Problem                                                                                              | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------------|------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Panel (Continued) |                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   | PANEL POWER LED is flashing and pressing the STATUS button confirms, <i>System Battery Failure</i> . | <ol style="list-style-type: none"> <li>1. Check the circuit breaker to be sure the circuit is live.</li> <li>2. Check that the backup battery is installed correctly and the transformer is plugged in.</li> <li>3. Check the battery fuse and replace if needed.</li> <li>4. Check for proper wiring at the Panel and the transformer.</li> <li>5. Measure the incoming voltage at the Panel terminals. A standard transformer reads 9 VAC at terminals 1 and 4. A 4-wire line carrier transformer reads between 9-12 VDC at terminals 1 (+) and 2 (-).</li> </ol> |
|                   | Incoming voltage reading is 0.                                                                       | <ol style="list-style-type: none"> <li>1. Unplug the transformer.</li> <li>2. Disconnect the wires from the transformer and the Panel.</li> <li>3. Check for continuity (short) between any two wires or any open circuit on any wire.</li> </ol>                                                                                                                                                                                                                                                                                                                   |
|                   | PANEL POWER LED is off, and pressing the STATUS button confirms, <i>AC Power Failure</i> .           | <ol style="list-style-type: none"> <li>1. Check if the transformer is plugged into an outlet. Secure the transformer to the outlet with the screw provided.</li> </ol> <p><b>WARNING:</b> Use extreme caution when securing the transformer to a metal outlet cover. You could receive a serious shock if the metal outlet cover drops down onto the prongs of the plug while you are securing the transformer and cover to the outlet box.</p> <ol style="list-style-type: none"> <li>2. Check the connection from the transformer to the Panel.</li> </ol>        |
| Phones            |                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   | Loss of dial tone on premises phones after wiring the RJ-31X jack or connecting the DB-8 Cord.       | <ol style="list-style-type: none"> <li>1. Check the RJ-31X Jack's wiring.</li> <li>2. Check the wiring from the Panel terminals to the DB-8 Cord.</li> <li>3. Replace the RJ-31X Jack.</li> <li>4. Replace the DB-8 Cord.</li> <li>5. Perform a phone test after troubleshooting the phone line.</li> </ol>                                                                                                                                                                                                                                                         |
|                   | Constant dial tone, preventing dial-out on premises phones.                                          | Polarity-sensitive phones exist on the premises. Reverse the wires you connected to the brown and gray wire terminals on the RJ-31X Jack.                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Sensor            |                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   | Panel announces, <i>Sensor [sensor #] Trouble</i> .                                                  | Put the sensor's cover on, if it is off. Activate the sensor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                   | Panel announces, <i>Sensor [sensor #] Failure</i> .                                                  | The sensor is not communicating with the Panel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   | Panel announces, <i>Sensor [sensor #] low battery</i> .                                              | Replace the sensor's battery.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

**Table D.1** Troubleshooting System Problems (Continued)

| Device                                 | Problem                                                                                          | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Smoke Sensor                           | Beeps once every minute.                                                                         | Batteries are low. Replace the smoke sensor batteries.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                        |                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Telephone                              | Telephone does not work.                                                                         | Disconnect the Panel from the phone jack. If the phone still doesn't work, the system is okay.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|                                        |                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Trouble Beeps (see also <i>Panel</i> ) |                                                                                                  | Press the STATUS button for a voice message of the problem. This disables the trouble beeps until the Panel calls in its daily report.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Wireless Interior Siren (WIS)          | No sound or LED activity from the WIS.                                                           | <ol style="list-style-type: none"> <li>1. Check that the Panel transformer is plugged into an outlet.</li> <li>2. Check that the WIS is not plugged into an outlet controlled by a switch. Relocate, if necessary.</li> <li>3. Program the house code into the Panel and set the DIP switches on the WIS.</li> <li>4. Check that the Panel is powered by the 4-wire Line Carrier Transformer, not the Class II Power Transformer.</li> <li>5. The WIS may not be on the same electrical phase as the Line Carrier Transformer. Relocate the WIS to various outlets to identify compatible locations.</li> <li>6. Move the WIS to a circuit that is not used by any other appliances.</li> </ol> |
|                                        | Intermittent WIS operation.                                                                      | <ol style="list-style-type: none"> <li>1. Check that the WIS is not plugged into an outlet controlled by a switch. Relocate, if necessary.</li> <li>2. Move the WIS to a circuit that is not used by any other appliances.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                        | The WIS sounds one beep every minute.                                                            | <ol style="list-style-type: none"> <li>1. The WIS may have a low battery. Replace the battery.</li> <li>2. The WIS has no battery. Install the appropriate battery based on the setting of DIP switch 1. (ON = NiCd, OFF = alkaline or lithium)</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|                                        |                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                        |                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                        |                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Wireless Sensors                       | The Panel does not respond to sensor activity. There are no alarm, chime, or sensor test sounds. | <ol style="list-style-type: none"> <li>1. Check that the sensor battery is installed.</li> <li>2. Check the sensor battery for low voltage. Replace alkaline or lithium batteries, if necessary.</li> <li>3. Check that the sensor number is programmed into Panel memory. Program the sensor, if necessary.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                         |
|                                        | The Panel responds intermittently to sensor signals.                                             | <ol style="list-style-type: none"> <li>1. Rotate the position of the sensor from 90° to 180°.</li> <li>2. Mount the sensor in a different location.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|                                        |                                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

**Table D.1** Troubleshooting System Problems (Continued)

| Device             | Problem                                                | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------|--------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Wireless Touchpads |                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                    | The Panel does not respond to touchpad commands.       | <ol style="list-style-type: none"> <li>1. Operate touchpads from different locations within the premises to identify areas of intermittent operation.</li> <li>2. Program the touchpads into the Panel.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                      |
| X-10 Lamp Modules  |                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                    | Lights controlled by the X-10 Lamp Module do not work. | <ol style="list-style-type: none"> <li>1. Check that the lamp has a working bulb.</li> <li>2. Confirm the lamp's operation at a working outlet.</li> <li>3. Check that the lamps are plugged into X-10 Lamp Modules and the X-10 Lamp Modules are plugged into outlets that are not controlled by a switch. Relocate to nonswitched outlets, if necessary.</li> <li>4. Check that the Panel is powered by the 4-wire Line Carrier Power Transformer, and not the 2-wire standard Class II Power Transformer.</li> <li>5. Check that the HOUSE dial on the X-10 Lamp Module matches the house code programmed into the Panel.</li> </ol> |