

MOOSE ZX200/ZX210

Security System Control

ZX200/ZX210 Programming Record Book

Subscriber Name _____


Address _____

Phone # _____

Control Panel Phone # _____

RPM Panel ID# _____

Installed By _____ Date _____

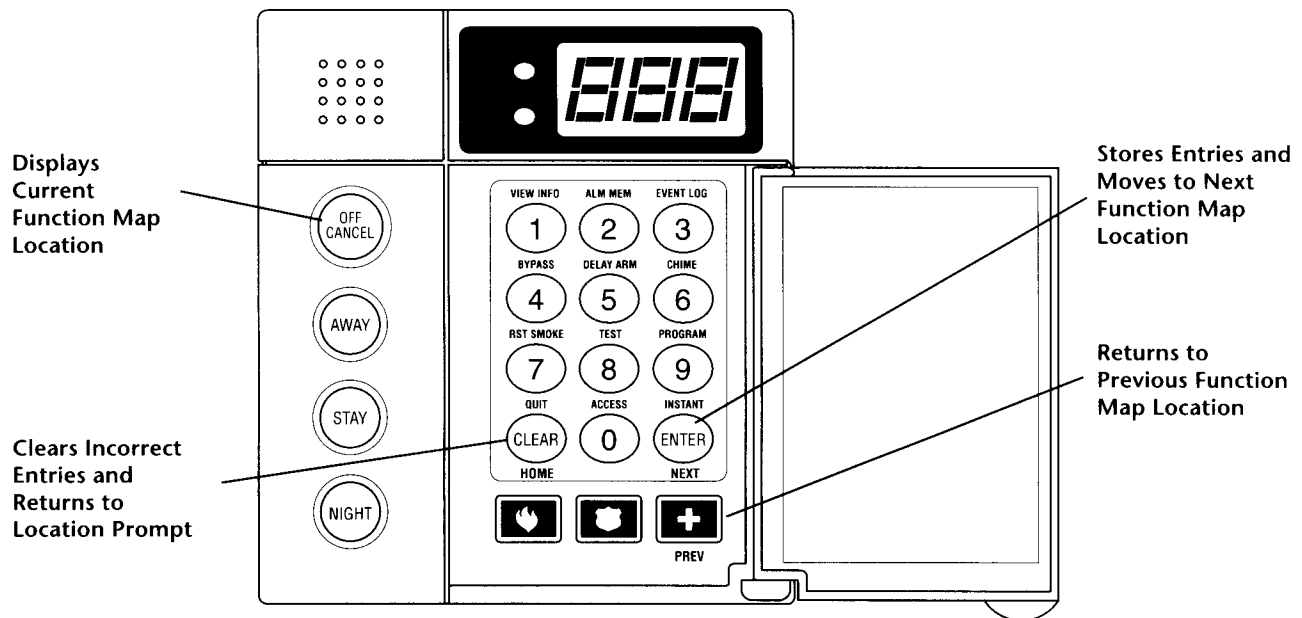

NOTE

To edit the Function Map, press the PROGRAM (9) key, enter the installer passcode, and press the '3' Key to select the Edit Function Map programming option.

9 + [] [] [] [] + 3

When an "H" is displayed, a hexadecimal value may be programmed at that location.

SYSTEM TIMES

LOC	FEATURE	DEFAULT	NEW VALUE
1	AWAY EXIT DELAY TIME (sec)	60	_____
2	STAY/NIGHT EXIT DELAY TIME (sec)	60	_____
3	ENTRY DELAY TIME 1 (sec)	20	_____
4	ENTRY DELAY TIME 2 (sec)	40	_____
5	FIRE ALARM CUTOFF TIME (sec)]	0	_____
6	OTHER ALARM CUTOFF TIME (sec)	10	_____
7	ACCESS TIME (sec)	5	_____
8	DELAY BEFORE DIAL TIME (sec)	0	_____
9	FIRE DELAY BEFORE DIAL TIME (sec)	0	_____
10	AC FAILURE DELAY (min)	30	_____
11	BURGLAR AUDIBLE LOCKOUT	0	_____
12	SWINGER SHUNT	0	_____
13	PASSCODE ENTRY LOCKOUT	8	_____
14	RINGS UNTIL ANSWER	5	_____
15	SECOND CALL BYPASS TIME (sec)	0	_____

SYSTEM OPTIONS

LOC	FEATURE	DEFAULT	NEW VALUE
16	HOLDUP ALARMS	0	_____
17	AUXILIARY ALARMS	1	_____
18	BURGLAR ALARMS	2	_____
19	ENABLE BYPASSING	1	_____
20	ENABLE FORCE ARMING	0	_____
21	ENABLE TWO-BUTTON ARMING	0	_____
22	ENABLE DOUBLE-PRESS ARMING	0	_____
23	REPORT OPENINGS ONLY AFTER ALARMS	0	_____
24	ENABLE REMOTE PROGRAMMING	1	_____
25	PROGRAMMING AT POWER-UP	0	_____
26	LOCKOUT INSTALLER PROGRAMMING	0	_____
27	FIRE BELL	1	_____
28	BURGLAR BELL	0	_____
29	HOLDUP BELL	0	_____
30	AUXILIARY BELL	0	_____
31	BELL TEST ON AWAY ARM	0	_____
32	DISPLAY BYPASSED ARMED	0	_____
33	USE TWO-WIRE SMOKE	0	_____

KEYPAD OPTIONS

LOC	FEATURE	DEFAULT	NEW VALUE
34	KEYPAD #1	1	_____
35	KEYPAD #2	1	_____
36	KEYPAD #3	1	_____
37	KEYPAD #4	1	_____

ZONE DEFINITIONS

	Zone Type			Burglar Zone Response			Zone Options			Zone Supervision		
	LOC	DEF	NEW VALUE	LOC	DEF	NEW VALUE	LOC	DEF	NEW VALUE	LOC	DEF	NEW VALUE
Zone 01	38	1	_____	39	13	_____	40	1	_____	41	2	_____
Zone 02	42	1	_____	43	3	_____	44	1	_____	45	2	_____
Zone 03	46	1	_____	47	3	_____	48	1	_____	49	2	_____
Zone 04	50	1	_____	51	12	_____	52	1	_____	53	2	_____
Zone 05	54	1	_____	55	12	_____	56	1	_____	57	2	_____
Zone 06	58	1	_____	59	12	_____	60	1	_____	61	2	_____
Zone 07	62	1	_____	63	12	_____	64	1	_____	65	2	_____
Zone 08	66	1	_____	67	12	_____	68	1	_____	69	2	_____

USER AUTHORITY LEVELS

FEATURE	Code		LOC	Authority Level	
	DEFAULT	NEW VALUE		DEFAULT	NEW VALUE
User 01	1234	_____	70	1	_____
User 02	0000	_____	71	1	_____
User 03	0000	_____	72	1	_____
User 04	0000	_____	73	1	_____
User 05	0000	_____	74	1	_____
User 06	0000	_____	75	1	_____
User 07	0000	_____	76	1	_____
User 08	0000	_____	77	1	_____
User 09	9632	_____	78	5	_____

PROGRAMMABLE OUTPUTS

LOC	FEATURE	DEFAULT	NEW VALUE
	Control		
79	Output 01	10	_____
	ODM1		
80	Output 01	6	_____
81	Output 02	1	_____
82	Output 03	7	_____
83	Output 04	8	_____
84	Output 05	12	_____
85	Output 06	14	_____
86	Output 07	11	_____
87	Output 08	13	_____
88	Output 09	15	_____
89	Output 10	17	_____

COMMUNICATOR OPTIONS

LOC	FEATURE	DEFAULT	Time
			NEW VALUE
90	ENABLE COMMUNICATOR	1	_____
91	DISABLE CALL WAITING	0	_____
92	DAYS BETWEEN COMMUNICATOR TESTS	1	_____
93	TIME BETWEEN CALLS	5	_____
94	T1 TRANSMISSION FORMAT	3	_____
95	T2 TRANSMISSION FORMAT	3	_____
96	DIALER TYPE	1	_____
97	T1 DIAL ATTEMPTS	5	_____
98	T2 DIAL ATTEMPTS	5	_____
99	ON-HOOK TIME	5	_____
100	OFF-HOOK TIME	3	_____

EVENT REPORTING PHONES

LOC	FEATURE	DEFAULT	NEW VALUE
101	ALARM/RESTORE PHONE NUMBER	3	_____
102	ZONE BYPASS/RESTORE PHONE NUMBER	0	_____
103	OPEN/CLOSE PHONE NUMBER	0	_____
104	TROUBLE/RESTORE PHONE NUMBER	0	_____
105	SYSTEM PHONE NUMBER	0	_____

TELEPHONE NUMBERS

LOC	FEATURE	DEFAULT	NEW VALUE
106-121	TELEPHONE NUMBER 1 (16 digits)	all F's	_____
122-145	TELEPHONE NUMBER 2 (24 digits)	all F's	_____
146-161	RPM/2 TELEPHONE NUMBER (16 digits)	all F's	_____

ACCOUNT NUMBERS

LOC	FEATURE	DEFAULT	NEW VALUE
162-165	TELEPHONE 1 ACCOUNT NUMBER (4 Hex digits)	0000	_____
166-169	TELEPHONE 2 ACCOUNT NUMBER (4 Hex digits)	0000	_____

EVENT REPORT CODES

Zone Report Codes

LOC	FEATURE	DEFAULT	NEW VALUE
170	ZONE 01 ALARM	3	_____
171	ZONE 02 ALARM	3	_____
172	ZONE 03 ALARM	3	_____
173	ZONE 04 ALARM	3	_____
174	ZONE 05 ALARM	3	_____
175	ZONE 06 ALARM	3	_____
176	ZONE 07 ALARM	3	_____
177	ZONE 08 ALARM	3	_____
178	ZONE RESTORALS	E	_____
179	ZONE BYPASSES	A	_____
180	ZONE TROUBLES	F	_____
181	EXIT ALARM	0	_____

User Report Codes

182	CLOSINGS	C	_____
183	OPENINGS	B	_____
184	DURESS	9	_____
185	BURGLAR ALARM CANCEL	0	_____
186	RECENT CLOSING	0	_____
187	USER QN PREMISE	0	_____

Auxiliary Key Alarm Report Codes

188	AUX KEY EXTENDED DIGIT	9	_____
189	'A' KEY ALARM	1	_____
190	'B' KEY ALARM	2	_____
191	'C' KEY ALARM	4	_____

EVENT REPORT CODES

System Report Codes

LOC	FEATURE	DEFAULT	NEW VALUE
192	TROUBLE REPORT CODE FOR SYSTEM REPORT CODES	F	_____
193	FIRE TEST BEGIN	0	_____
194	KEYPAD MISSING	0	_____
195	AC FAILURE	A	_____
196	PANEL LOW BATTERY	9	_____
197	BELL FAULT	0	_____
198	MEMORY ERROR	0	_____
199	RF JAMMING	0	_____
200	RF KEYFOB LOW BATTERY	0	_____
201	INSTALLER ON PREMISE	0	_____
202	RESTORAL REPORT CODE FOR SYSTEM REPORT CODES	E	_____
203	FIRE TEST END	0	_____
204	KEYPAD RESTORE	0	_____
205	AC RESTORE	A	_____
206	PANEL BATTERY RESTORE	9	_____
207	BELL RESTORE	0	_____
208	COMMUNICATION RESTORE	0	_____
209	RF CHANNEL CLEAR	0	_____
210	INSTALLER OFF PREMISE	0	_____

Other Event Report Codes

211	EXTENDED REPORT CODE FOR OTHER EVENTS	0	_____
212	COMM TEST NOT NORMAL	0	_____
213	COMM TEST	0	_____
214	RPM END	0	_____
215	RPM ABORTED	0	_____

MOOSE 

A PRODUCT OF SENTROL, INC

SENTROL CONTROLS GROUP

PO Box 2904

1510 Tate Blvd. SE

Hickory, NC 28603

Sales: 800.547.2556

Fax: 503.691.7566

Technical Support: 800.800.2027

Sentrol, Inc. reserves the right
to change specifications
without notice.

©1997 Sentrol, Inc.

64812803A