

# MOOSE Z800ST

LCD Control Station

---

**MOOSE** 

A PRODUCT OF SENTROL, INC.

Sentrol, Inc. reserves the right to change specifications without notice.

SENTROL CONTROLS GROUP

PO Box 2904

1510 Tate Blvd. SE

Hickory, NC 28603

Sales: 800.547.2556

Fax: 503.691.7566

Technical Support: 800.800.2027

©1995 Sentrol, Inc.

64812603B

Specifications, Installation  
and Programming Guide

## Specifications

The Z800ST LCD Control Station features an extremely high level of user friendliness. The LCD provides a constant display of the system status and prompts the operator during the various steps of operation. Many of the benefits to the Installer and User include:

- 16 character Liquid Crystal Display (LCD)
- Programmable 12 character zone names
- Displays function numbers and values during control panel programming
- LCD Display and Keypad Backlighting with optional timeout
- Optional audible sounder for Alarms, Entry Prealarm and Control Station entries
- Three (3) Control Station activated panics: Auxiliary A, B, & C
- Hinged cover to protect Panic Keys
- Operates like a Z800R8
- EEPROM: Retains all programmed memory (including zone names)
- 2 LEDs, Red Armed and Green System Ready Indicators
- Four wire plug-in connector
- UL Listed Accessory
- Dimensions: 3.5" x 4.5" x 0.75"
- Color: Off White
- Maximum Current Drain: 60mA
- Number of Z800ST allowable to a Z800 Family: (4)
- Operating Temperature Range: 0° to 40° Celsius. (32° to 104° Fahrenheit)
- CSFM Listing Number: 7167-0695:119

## Table Of Contents

<b>Mounting And Wiring .....</b>	<b>4</b>
<b>Control Station Removal .....</b>	<b>4</b>
<b>Operation .....</b>	<b>5</b>
<b>The Press And Hold Feature .....</b>	<b>5</b>
<b>The * Prompt .....</b>	<b>5</b>
<b>What To Do When * Is Displayed .....</b>	<b>5</b>
<b>Displaying Zone Status .....</b>	<b>5</b>
<b>Arming .....</b>	<b>6</b>
<b>Disarming .....</b>	<b>6</b>
<b>Responding To Alarm Conditions .....</b>	<b>6</b>
<b>Displaying Alarm Memory .....</b>	<b>6</b>
<b>Bypassing Zones .....</b>	<b>7</b>
<b>System Trouble .....</b>	<b>7</b>
<b>Viewing The Chime, Interior, And Delay Status .....</b>	<b>7</b>
<b>Quick Reference Guide .....</b>	<b>9</b>
<b>Programming .....</b>	<b>11</b>
<b>Entering The Programming Mode .....</b>	<b>11</b>
<b>LCD Option Level Programming .....</b>	<b>11</b>

## Mounting And Wiring

1. Disconnect all power from the control before installing or servicing.
2. Select a mounting location that is secure and maintains a constant temperature between 32° to 104°F (0° to +40° C) The LCD Control Station should not be exposed to freezing conditions, moisture or direct sunlight. It may be mounted to any flat surface or to a 1 gang electrical box using countersunk screws. **NOTE: MOUNTING TO THE FACE OF THE CONTROL PANEL IS NOT RECOMMENDED. ENTRY WARNING OR OTHER ANNUNCIATION MAY LEAD INTRUDERS TO THE CONTROL PANEL CREATING A SECURITY RISK.**
3. An ideal mounting height is between 48 to 52 inches from the floor to the top of the LCD screen. This provides an excellent viewing height. The top of the unit should not be mounted higher than 60 inches.
4. The minimum size wire recommended is 22 awg. stranded, four conductor twisted.
5. After completing the wire run to the desired mounting location, clean the surface upon which the unit is to be mounted. Level and mount the backplate with the enclosed countersunk screws. Pull the wire through the large hole in the backplate. Solder or crimp the four conductors to the enclosed wiring harness. Insulate the connections thoroughly and push excess wire into the wall. Connect the harness plug to the four prong connector on the back of the circuit board.
6. Hold the control station at a 30° angle ( bottom edge out ) and engage the top edge with the back plate. With the top edge engaged press the bottom edge against the backplate using slight pressure until the locking tabs are seated. **DO NOT FORCE.**

### Control Station Removal

To remove the control station insert a small screwdriver into one of the two holes at the bottom of the unit, while applying a light pulling action away from the mounting surface. After the first lock is disengaged, repeat for the second. Slide the unit upward so that the interlocking hinges detach and free the control station.



FIGURE 1 Mounting

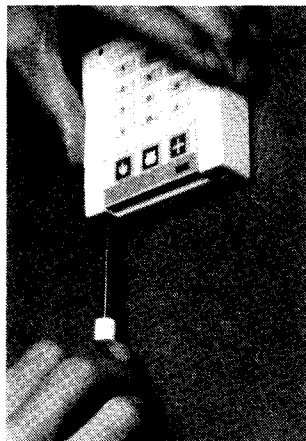


FIGURE 2 Removal

## Operation

Operating the Z800ST is very similar to the standard LED Control Station (Z800R8) with the added benefit of the full alphanumeric LCD English display. The LCD provides constant system status and prompts the operator during the various steps of operation.

### The Press And Hold Feature

The Z800ST utilizes a press and hold feature to produce various displays and functionality. Throughout this manual, whenever the text mentions to "Press and Hold" a key, this indicates that the key should be pressed and held for 3 seconds or until the control station acknowledges with 3 beeps.

### The \* Prompt

The \* prompt and corresponding \* key serves as an important diagnostic or "HELP" tool. It is one of the most important functions that the operator should learn. A single momentary depression of this key silences the built-in sounder and clears improper key entries. **Pressing and holding the \* key for 3 seconds** commands the control station to display additional system information.

### What To Do When \* Is Displayed

Whenever the control detects a trouble or abnormal condition, (i.e.: an **Open Zone**, **System Trouble**, etc.) the \* will appear on the right side of the screen. This is a prompt for the operator to **press and hold the \* key**. Upon doing so the LCD will display additional information about the condition and/or will prompt the operator for additional key entries. This information delivery process allows the Z800ST to be very user friendly while providing extremely powerful operation.

### Displaying Zone Status

Whenever one or more intrusion zones are violated, the LCD will display **\_ Zone(s) Open \*** and normal system arming will be disabled .

**1 Zone Open \***

The full zone status showing the number and description of each open zone can be displayed by **pressing and holding the \* key**. The violated zone(s) will be indicated by their **respective numbers**. Non-violated zones are shown as a blank space with an underline. Bypassed zone(s) are shown by a flashing zone number.

**\_\_ 3 \_\_ \_ \_ \_ \***

Additional momentary presses of the \* key will advance the display through the description(s) and will eventually return to the **\_ Zone(s) Open \*** display.

**Z3-Garage Door \***

## Arming

Once the control station displays **System Ready** you may arm the control by entering one of the user codes.

**System Ready**

During the exit time delay countdown the Armed LED will flash, the Ready LED will be out, and the control station will display **Exit Now**.

**Exit Now**

Once the exit time has expired, the Armed LED will become solid and the LCD will display **System Armed**. The sounder may beep once per second during the exit time depending upon how the control panel is programmed.

**System Armed**

## Disarming

To disarm the control, simply enter one of the user codes. This will cause the Armed LED to extinguish and the LCD to display normal disarmed prompts.

## Responding To Alarm Conditions

Violation of a protective burglary zone while the control is armed will cause the control to enter the alarm state and the LCD to display **Alarm**. During the alarm cutoff time and until reset, the control station sounder will annunciate the alarm (if so programmed).

**Alarm \***

Entering the user code will silence the alarm sounder and disarm the control. The LCD will display **Alarm- -Disarmed \*** as a reminder to the operator that an alarm has occurred.

**Alarm- -Disarmed \***

While the alarm is sounding and immediately after disarming, the operator may view the zone number that caused the alarm by pressing and holding the \* key. Additional presses of the \* key will advance the display through the zone description(s), followed by the description(s) of the alarm type(s).

## Displaying Alarm Memory

It is possible to recall the last alarm that occurred by pressing and holding the 3 key. Additional presses of the \* key will advance the display through the zone description(s), followed by the description(s) of the alarm type(s).

## Bypassing Zones

To bypass from the control station **press the # key followed by the number of the zone that you desire to bypass**. For example: Pressing # then 4 will bypass zone 4. This may be done during the zone status display or the display of **\_ Zone(s) Open \***. The zone bypass may be cancelled by repeating the entry again or by pressing # then 9. The # then 9 can be used to cancel multiple bypassed zones. As shown below, when one or more zones are bypassed the right side of the display will contain **Bp \*** to remind the operator of the bypass.

**System Ready Bp\***

When the control is armed with a bypassed zone, the LCD will display **Partial Armed**. Thirty (30) seconds after exit time has expired the display will change to **System Armed**.

## System Trouble

When a trouble condition exists the LCD will alternately display **System Trouble \*** with the present system display. To identify the cause of a system trouble, the operator may either press and hold the \* key to obtain further instructions from the display, or press and hold the 2 key to access the trouble status screen directly.

**System Trouble \***

Upon pressing and holding the \* key the operator will see:

**Trouble, Hold 2 \***

After pressing and holding the 2 key the LCD will identify the trouble condition(s). Conditions such as AC Failure, Low Battery or Blown Fuse, Supervisory Trouble, Communication Failure, Memory Error, Missing Control Station, and Keypad Parity. Additional momentary presses of the \* key will advance the display through the trouble display. Although it is possible to arm the control while a trouble condition exists, it is recommended to diagnose and correct any trouble condition as soon as possible.

## Viewing The Chime, Interior, And Delay Status

To identify if the chime mode is on, if the interior protection is off, or if the delay mode is off you may **press and hold the 2 key**. Since this key is also used to identify trouble conditions, troubles (if any) will be displayed first, followed by the chime, interior, or delay.

## Quick Reference Guide

Most keys serve additional functions used to enable special features or perform diagnostics. The following are descriptions of the features and the keys which control them:

**READY LED**  
(Flashes during program mode)

**ARMED LED**  
(Flashes during program mode)

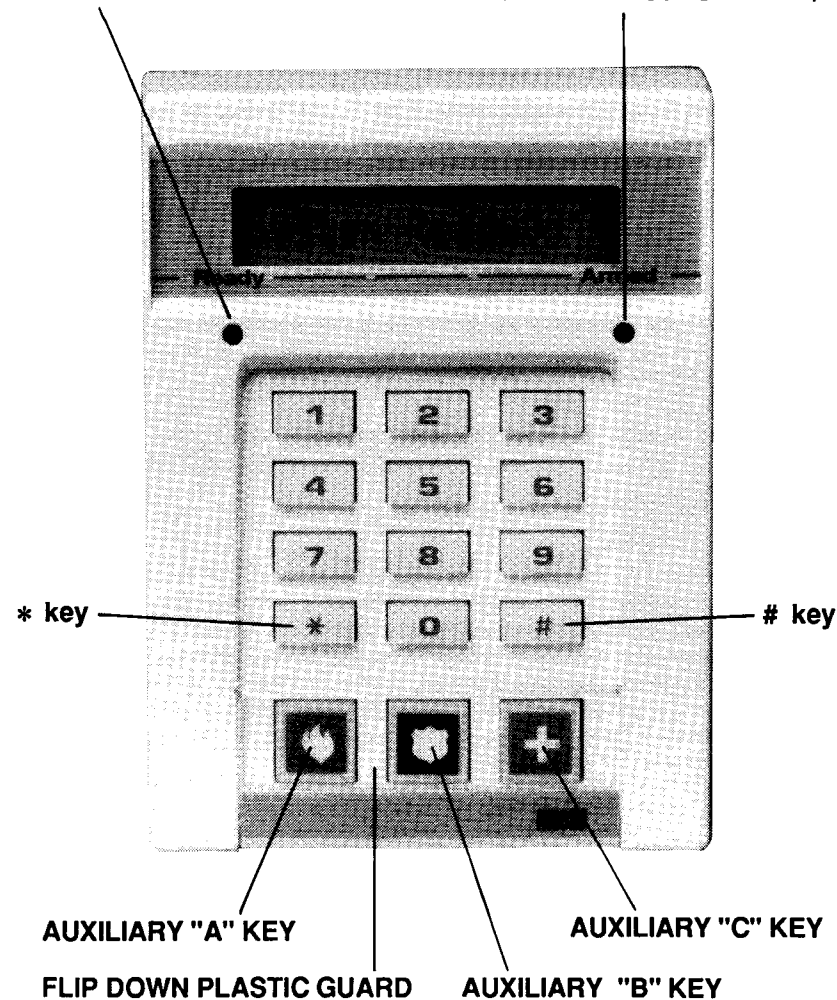


FIGURE 3 Control Station Diagram

**1 Reset/Help:** A single press of the \* key silences the built-in sounder, resets the display, and clears key entry errors. In response to the \* prompt or to display additional system information such as zone status, press the \* key and hold. Each additional press will advance the display forward through the information provided.

**2 Trouble/Chime/Interior/Delay Status:** Pressing and holding the 2 key will display any trouble conditions. It will also identify if the chime mode is on, the interior protection is off, and if the delay is off.

**3 Alarm Memory:** To identify the zone(s) and type of alarm that was last triggered, press and hold the 3 key.

**4 Interior ON/OFF:** All Interior defined zones may be bypassed (turned off) by pressing and holding the 4 key. To identify if the interior is off, press and hold key 2.

**6 Chime Mode :** Pressing and holding the 6 key will turn on the chime mode feature. The chime mode causes the control station to annunciate with two beeps whenever a perimeter defined burglary zone is violated. To turn off the chime mode simply repeat the process. To identify if the chime mode is on, press and hold key 2.

**7 Switched Power Interrupt:** Pressing and holding the 7 key will turn off the switched power output of the control for five seconds in order to reset smoke detectors and other **non-burglary** latching devices. This function is also used to reset the trouble condition existing after a low battery/blown fuse indication.

**8 Test Mode:** To activate the test mode press and hold the 8 key. This feature allows a complete walk test providing an audible tone for each zone that is violated during the walk test. To exit this mode press the \* key.

To obtain a visual display showing each tested zone, press and hold the \* key to display zone status, then press and hold the 8 key to activate the test mode. As each zone is tested, the zone number will display and remain on until the test mode is exited.

**Program:** Used to enter the programming mode. Press and hold key 9, then enter the Installer Program Code or Master User Code as necessary.

**0 Access:** Press and hold key 0, then enter an assigned user code to provide an output for access (door release, etc.). Consult the control installation manual for specifics.

**# Bypassing:** Zones may be bypassed (shunted) by pressing the # key followed by the number of the zone (1 thru 6) to be bypassed. Pressing # then 9 will remove all bypasses.

**A** This key is used to activate the Auxiliary A alarm. This key may also be used immediately after entering program mode to access the LCD options.

**B** This key is used to activate the Auxiliary B alarm. During LCD option programming this key is used to scroll through the options (Zone Names, Contrast Adjust, and Set Config).

**C** This key is used to activate the Auxiliary C alarm. During LCD option programming this key is used to select the option displayed.

# Programming

Programming from the keypad is very easy and informative, thanks to the LCD alphanumeric screen. Programming is divided into three levels, (1) LCD Options, (2) Control Panel User Level, (3) Control Panel Installer Level. **NOTE: The following instructions are intended to supplement the information in the control panel installation manual.**

## Entering The Programming Mode

To enter the Programming Mode press and hold key 9, then enter the Installer Program Code or the Master User Code, depending upon which level of programming is required. For LCD options either the Installer Code or the Master User Code may be used. After entry into the program mode the Ready and Armed LEDs will flash rapidly and the LCD will display **Program Mode**. Programming mode may be exited at any time by pressing the \* key twice.

## LCD Option Level Programming

The LCD options are **Zone Names**, **Contrast Adjust**, and **Set Config**. The auxiliary panic keys are used in the LCD option level programming. LCD option level can only be reached by pressing the left (Aux. A) panic key immediately after entering the program mode. The first option is **Zone Names**. You may scroll to the other options by pressing the middle (Aux. B) panic key. Press the right (Aux. C) panic key when the desired option is displayed.

**Zone Names...** Pressing the Aux. C key when the prompt displays **Zone Names**, allows the zone names to be programmed. An example of the programming sequence is:

- Press **9** and hold. Three (3) beeps should be heard.
- Enter the Installer Program Code. (factory 96321) **9 6 3 2 1**  
or Master User Code (factory 1245)
- The Ready and Armed LED's will flash and the LCD will display **Program Mode**. If the code has been changed from the factory setting, substitute the new code.
- For LCD options press the Aux. A key. **A** The LCD will display: **Zone Names**
- To select zone names press the Aux. C key. **C** The LCD will display: **Z1-**
- To program the description for this zone press the Aux. C key again. **C** The LCD will display a blinking cursor in the first character position.
- Characters are assigned to each number key just as they are shown on most touchtone telephones. For example, the 2 key represents A, B, C. Refer to figure 4. Select the first character by pressing the corresponding key. It may be necessary to press the key a second or third time since each key is assigned to more than one character.
- When the first character is correct press the # key. This will store the character and advance the cursor to the next position. To edit a character or correct a mistake, press # until the cursor moves to the desired character. Each name is 12 characters in length, including spacing and punctuation.
- When the first zone name is complete, press the middle (Aux. B) panic key. **B**  
This will store the name and advance to the next zone.
- To exit the program mode, press the \* key twice. Pressing the \* key a single time will return to the beginning of the programming mode. The LCD will display **Program Mode**.

Key	Character Produced
1	1 2 3 4 5 6 7 8 9 0
2	ABC
3	DEF
4	GHI
5	JKL
6	MNO
7	PQRS
8	TUV
9	WXYZ
0	{SPACE}', . "/- ([)]# ! _ & + ; : < = >

FIGURE 4 Characters Produced In Zone Name Programming

Symptom	Possible Cause And Correction
LCD & LEDs appear dark, no power	Check control panel fuses, AC and DC power circuits, and wire splices.
"System Trouble" displayed	Press and hold key 2. The LCD will identify the trouble condition.
"* " prompt displayed	Indication that additional system information is available by pressing and holding the * key
"No Control Data" displayed	Check connection to control terminal 9 (white wire). Check for low voltage at control.
Constant sounder or no response to keys	Check connection of green wire to control terminal 8.
The Ready LED is not on	Check zone status by pressing and holding the * key.
Unable to enter the programming mode	The installer code or master user code has been changed. Refer to the control manual for alternate method of entering program mode.
System is Ready but the control won't arm	The user code has been changed or is invalid.

FIGURE 5 Troubleshooting Guide

**Changing The Contrast Adjust . . .** After entering the programming mode and selecting LCD options using the Aux. A key, press the Aux. B key to advance to **Contrast Adjust**. Next, Press the Aux. C key to select **Contrast Adjust**. The LCD will display **B=Lower C=Higher**. By pressing the Aux. B or Aux. C key, the darkness contrast of the LCD may be adjusted to suit the mounting conditions. To exit the program mode, press the \* key twice

**Setting The Configuration . . .** The keypad contains a configuration setting which controls the operation of the backlighting and built-in piezo sounder. The backlighting may be configured to be on constantly (the default setting), or time out automatically (turn off) after 30 seconds of no activity. In the time out mode the backlighting will re-activate upon any key press, or upon any activity from the control such as entry delay warning, alarm activation, etc.

The configuration also allows the sounder to be audible (the default setting) or silent. In the silent configuration the sounder is totally disabled both for key presses as well as for entry delay warning, alarms, trouble conditions, etc. The setting for silent (disabled) sounder is not recommended unless a separate sounding device is installed for entry warning and annunciation. For UL listed systems the sounder must be left enabled.

1. After entering the programming mode and selecting LCD options using the Aux. A key, press the Aux. B key twice to advance to **Set Config**.
2. Press the Aux. C key to select **Set Config**. The LCD will display: **Config = \_**
3. Enter the desired configuration value (the valid range is 0 thru 3).  
**Note: To select a value of 0 an 8 must be entered.**
  - 0 = Constant backlighting and audible sounder.
  - 1 = Disables the built-in piezo sounder.
  - 2 = Selects automatic timeout of the backlight after 30 seconds of no activity.
  - 3 = Disables the piezo sounder AND selects automatic timeout of the backlight.
9. To exit the program mode, press the \* key twice. Pressing the \* key a single time will return to the beginning of the programming mode. The LCD will display **Program Mode**.

**NOTE: Do not set the config to any value other than 0,1,2, or 3. Failure to observe this rule may result in undesirable operation.**

**NOTE: Selecting a value of 1 or 3 will disable the keypad piezo. The keypad piezo shall not be disabled on U.L. listed systems.**

**NOTE: The LCD options are unique to each Z800ST Control Station and must be programmed individually.**